



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	2
2.1 Safety precautions when working on the cooling system	2
2.2 Safety precautions when working on ignition system	3
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Safety precautions when working on Autogas system	4
2.5 Safety regulations for working on fuel supply	4
2.6 Safety precautions when working on injection system	5
3 Repair instructions	6
3.1 General notes on ignition system	6
3.2 General notes on injection	6
3.3 Foreign objects in engine	7
3.4 Rules for cleanliness when working on fuel supply system/injection system	7
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Securing engine on engine and gearbox support VAS 6095	12
1.3 Installing engine	13
2 Assembly mountings	15
2.1 Assembly overview - assembly mountings	15
13 - Crankshaft group	16
1 Cylinder block (pulley end)	16
1.1 Assembly overview - poly V-belt drive	16
1.2 Assembly overview - cylinder block	18
1.3 Removing and installing poly-V belt	19
1.4 Renewing crankshaft oil seal - belt pulley end	20
1.5 Removing and installing sealing flange on pulley end	23
2 Cylinder block, gearbox end	27
2.1 Assembly overview - cylinder block, gearbox end	27
2.2 Removing and installing sealing flange on gearbox side	28
3 Crankshaft	30
3.1 Assembly overview - crankshaft	30
3.2 Identification of crankshaft bearings	31
3.3 Removing and installing sender wheel	32
3.4 Crankshaft dimensions	32
4 Pistons and conrods	33
4.1 Assembly overview - pistons and conrods	33
4.2 Bearing shells - installation position	34
4.3 Separating new conrod	34
4.4 Checking pistons and cylinder bores	35
4.5 Piston and cylinder dimensions	36
15 - Cylinder head, valve gear	37
1 Cylinder head	37
1.1 Assembly overview - cylinder head	37
1.2 Checking cylinder head for distortion	38
1.3 Removing and installing cylinder head	39
1.4 Checking compression	44



2	Toothed belt drive	47
2.1	Assembly overview - toothed belt drive	47
2.2	Removing and installing toothed belt guard	48
2.3	Removing and installing toothed belt	49
2.4	Checking semi-automatic toothed belt tensioner	54
3	Valve gear	55
3.1	Assembly overview - valve gear	55
3.2	Removing and installing camshaft oil seal	57
3.3	Removing and installing camshaft	59
3.4	Measuring axial play of camshaft	63
3.5	Removing and installing valve stem seals	64
3.6	Checking hydraulic compensation elements	66
4	Inlet and exhaust valves	67
4.1	Reworking valve seats	67
4.2	Checking valve guides	68
4.3	Valve dimensions	69
17 - Lubrication		70
1	Sump, oil pump	70
1.1	Assembly overview - sump/oil pump	70
1.2	Removing and installing sump	72
1.3	Removing and installing oil pump	74
1.4	Engine oil:	75
2	Oil filter, oil pressure switch	76
2.1	Assembly overview - oil filter/oil pressure switch	76
2.2	Checking oil pressure and oil pressure switch	77
2.3	Measuring oil consumption	78
19 - Cooling		79
1	Cooling system/coolant	79
1.1	Coolant hose schematic diagram	79
1.2	Draining and adding coolant	80
1.3	Checking cooling system for leaks	87
2	Coolant pump, regulation of cooling system	89
2.1	Assembly overview - coolant pump, thermostat	89
2.2	Removing and installing coolant pump	90
2.3	Removing and installing thermostat	92
3	Radiator, radiator fan	94
3.1	Assembly overview - radiator/radiator fan	94
3.2	Removing and installing radiator	95
3.3	Removing and installing radiator fan V7 and radiator fan 2 V177	96
20 - Fuel supply system		99
1	Fuel	99
1.1	Assembly overview - fuel tank	99
1.2	Removing and installing fuel tank	100
2	Fuel delivery unit, fuel gauge sender	103
2.1	Removing and installing fuel delivery unit	103
2.2	Installation position of fuel delivery unit	105
2.3	Removing and installing fuel gauge sender G	105
3	Fuel filter	106
3.1	Assembly overview - fuel filter	106
3.2	Removing and installing fuel filter	107
4	Autogas system	108



4.1	Assembly overview - evaporator with add-on parts	108
4.2	Emptying fuel tank	109
4.3	Emptying the gas line	111
4.4	Removing and installing evaporator	112
4.5	Removing and installing fuel tank (LPG)	114
4.6	Components on fuel tank	116
4.7	Removing and installing gas injector	123
4.8	Removing and installing gas rail temperature and pressure sensor GX21	124
4.9	Checking SERTO adapter leads for leaks	124
5	Accelerator pedal	128
5.1	Function	128
5.2	Assembly overview - accelerator mechanism	128
5.3	Removing and installing accelerator pedal module	129
6	Activated charcoal filter system	131
6.1	Function	131
6.2	Checking fuel tank breather	131
7	Fuel pump	133
7.1	Checking fuel pump	133
24 - Mixture preparation - injection	141	
1	Injection system	141
1.1	Technical data	141
1.2	Bleeding fuel system	141
2	Injectors	144
2.1	Assembly overview - fuel rail with injectors	144
2.2	Removing and installing injectors	144
2.3	Checking injectors for leaks and quantity injected	145
3	Intake manifold	150
3.1	Assembly overview - intake manifold	150
3.2	Removing and installing lower part of intake manifold	151
3.3	Removing and installing intake manifold	153
3.4	Checking intake manifold change-over	158
4	Air filter	160
4.1	Assembly overview - air filter housing	160
5	Senders and sensors	161
5.1	Checking fuel pressure regulator and holding pressure	161
6	Engine control unit	164
6.1	Removing and installing engine control unit J623 and gas mode control unit J659	164
6.2	Removing and installing anti-theft engine control unit J623 and gas mode control unit J659	165
26 - Exhaust system	168	
1	Exhaust pipes and silencers	168
1.1	Assembly overview - silencers	168
1.2	Separating exhaust pipes from silencers	168
1.3	Installation position of clamps	170
1.4	Check exhaust system for leaks	170
2	Exhaust gas cleaning	171
2.1	Assembly overview - emission control	171
2.2	Removing and installing catalytic converter	172
3	Exhaust gas recirculation	174
3.1	Assembly overview - exhaust gas recirculation	174
4	Secondary air system	176
4.1	Function	176



4.2	Assembly overview - secondary air system	176
4.3	Checking combination valve	177
5	Exhaust manifold	179
5.1	Removing and installing exhaust manifold	179
28 - Ignition system	181	
1	Ignition system	181
1.1	Assembly overview - ignition system	181
1.2	Test data, spark plugs	182