



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the cooling system	1
1.2 Safety regulations for working on fuel supply	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on injection system	3
2 Identification	4
2.1 Engine number/engine data	4
3 General information	5
3.1 General notes on injection	5
3.2 General notes on the lubrication system	5
3.3 General notes on fuel system	6
4 Repair instructions	8
4.1 Rules for cleanliness when working on fuel supply system	8
4.2 Rules for cleanliness when working on injection system	8
4.3 Rules for cleanliness when working on turbocharger	9
4.4 Foreign objects in engine	9
10 - Removing and installing engine	10
1 Removing and installing engine	10
1.1 Removing engine	10
1.2 Separating engine from gearbox	22
1.3 Separating engine from dual clutch gearbox	23
1.4 Securing engine on engine and gearbox support	25
1.5 Installing engine	26
2 Assembly mountings	32
2.1 Assembly overview - assembly mountings	32
2.2 Removing and installing engine mounting	35
2.3 Removing and installing engine bracket	37
2.4 Supporting engine in installation position	40
2.5 Adjusting assembly mountings	42
3 Engine cover panel	47
3.1 Removing and installing engine cover	47
13 - Crankshaft group	48
1 Cylinder block (pulley end)	48
1.1 Assembly overview - cylinder block	48
1.2 Assembly overview - sealing flange, belt pulley end	50
1.3 Assembly overview - poly V-belt drive without air conditioner compressor	51
1.4 Assembly overview - poly V-belt drive with air conditioning compressor	52
1.5 Assembly overview - ancillary bracket	53
1.6 Removing and installing sealing flange on pulley end	53
1.7 Renewing crankshaft oil seal - belt pulley end	56
1.8 Removing and installing bracket for ancillaries	58
1.9 Removing and installing poly V-belt without air conditioner compressor	61
1.10 Removing and installing poly V-belt with air conditioner compressor	61
1.11 Removing and installing tensioner for poly V-belt	63
1.12 Removing and installing vibration damper	64
2 Cylinder block, gearbox end	66
2.1 Assembly overview - flywheel	66
2.2 Removing and installing flywheel	67
2.3 Removing and installing sealing flange on gearbox side	68



3	Crankshaft	76
3.1	Assembly overview - crankshaft	76
3.2	Crankshaft dimensions	77
3.3	Renewing needle bearing in crankshaft	77
4	Pistons and conrods	79
4.1	Assembly overview - pistons and conrods	79
4.2	Checking pistons and cylinder bores	81
4.3	Piston and cylinder dimensions	82
4.4	Separating new conrod	82
4.5	Measuring piston projection at TDC	83
4.6	Checking radial clearance of conrods	84
4.7	Removing and installing oil spray jets	85
15	- Cylinder head, valve gear	87
1	Cylinder head	87
1.1	Assembly overview - cylinder head	87
1.2	Assembly overview - cylinder head cover	89
1.3	Removing and installing cylinder head	91
1.4	Removing and installing cylinder head cover	106
1.5	Removing and installing injector seals	111
1.6	Removing and installing vacuum pump	114
1.7	Checking compression	115
2	Fully enclosing toothed belt guard	117
2.1	Assembly overview - fully enclosing toothed belt guard	117
2.2	Removing and installing upper toothed belt guard (fully enclosing)	118
2.3	Removing and installing lower toothed belt guard (fully enclosed)	119
2.4	Removing and installing rear toothed belt guard (fully enclosing)	120
3	Toothed belt drive	125
3.1	Assembly overview - toothed belt drive	125
3.2	Removing and installing toothed belt	127
4	Valve gear	141
4.1	Assembly overview - valve gear	141
4.2	Removing and installing camshafts	144
4.3	Measuring axial play of camshaft	151
4.4	Measuring radial play of camshaft	152
4.5	Removing and installing camshaft oil seal	152
4.6	Checking hydraulic compensation elements	155
4.7	Removing and installing valve stem seals	155
4.8	Removing and installing valve stem seals with cylinder head removed	159
5	Inlet and exhaust valves	163
5.1	Reworking valve seats	163
5.2	Checking valve guides	163
5.3	Checking valves	164
5.4	Valve dimensions	164
17	- Lubrication	165
1	Sump, oil pump	165
1.1	Assembly overview - sump/oil pump	165
1.2	Removing and installing sump	167
1.3	Removing and installing oil pump	171
1.4	Engine oil:	173
1.5	Removing and installing oil level and oil temperature sender G266	173
1.6	Measuring oil consumption	174
2	Engine oil cooler	175
2.1	Removing and installing engine oil cooler	175



3	Oil filter, oil pressure switch	179
3.1	Assembly overview - oil filter housing with engine oil cooler	179
3.2	Removing and installing oil filter housing	180
3.3	Removing and installing oil pressure switch F1	183
3.4	Checking oil pressure switch	185
3.5	Checking oil pressure	186
4	Oil circuit	188
4.1	Assembly overview - oil circuit	188
4.2	Removing and installing oil supply line	189
19	- Cooling	193
1	Cooling system/coolant	193
1.1	Connection diagram - coolant hoses	193
1.2	Draining and adding coolant	194
1.3	Checking cooling system for leaks	202
1.4	Checking engine oil cooler for leaks	204
2	Coolant pump, regulation of cooling system	206
2.1	Assembly overview - coolant pump, thermostat	206
2.2	Assembly overview - coolant pump and thermostat, from week 22/2011	207
2.3	Removing and installing coolant pump	207
2.4	Removing and installing 4/2-way valve with thermostat	208
2.5	Removing and installing coolant temperature sender G62	214
2.6	Removing and installing radiator outlet coolant temperature sender G83	215
3	Radiator, radiator fan	217
3.1	Assembly overview - radiator/radiator fan	217
3.2	Removing and installing cowling together with radiator fan V7 and radiator fan on right of radiator V35	218
3.3	Removing and installing radiator	219
4	Coolant pipes	222
4.1	Assembly overview - coolant pipes	222
4.2	Removing and installing lower coolant pipe	223
4.3	Removing and installing upper coolant pipe	227
4.4	Removing and installing left coolant pipe	228
4.5	Removing and installing right coolant pipe	230
21	- Turbocharging/supercharging	233
1	Turbocharger	233
1.1	Assembly overview - turbocharger	233
1.2	Removing and installing turbocharger	237
1.3	Removing and installing charge pressure control solenoid valve N75	242
2	Charge air system	245
2.1	Assembly overview - charge air system	245
2.2	Assembly overview - charge-air hose connections	246
2.3	Removing and installing charge air cooler	247
2.4	Removing and installing charge air pipe	249
2.5	Removing and installing charge air pressure sender G31 / intake air temperature sender G42	250
2.6	Checking charge air system for leaks	250
23	- Mixture preparation - injection	254
1	Injection system	254
1.1	Schematic overview - fuel system	254
1.2	Overview of fitting locations - injection system	256
1.3	Assembly overview - fuel system	265
1.4	Checking fuel system for leaks	268



1.5	Filling/bleeding fuel system	268
2	Vacuum system	270
2.1	Connection diagram - vacuum system	270
2.2	Checking vacuum system	271
3	Injectors/high-pressure accumulator (rail)	279
3.1	Overview - fuel return lines	279
3.2	Assembly overview - injectors	280
3.3	Removing and installing high-pressure lines	280
3.4	Removing and installing fuel rail	286
3.5	Removing and installing injectors	290
3.6	Adapting correction values for injectors	295
3.7	Replacing O-ring of fuel return lines	296
3.8	Check pressure retention valve in fuel return line	296
3.9	Checking return flow rate of injectors at starter speed	298
3.10	Testing injectors	299
4	High-pressure pump	301
4.1	Assembly overview - high-pressure pump	301
4.2	Removing and installing high-pressure pump	302
4.3	Pressure testing high-pressure pump	306
4.4	Checking high-pressure pump	308
5	Intake manifold	311
5.1	Assembly overview - intake manifold	311
5.2	Removing and installing intake manifold	312
5.3	Removing and installing throttle valve module GX3	316
6	Air filter	318
6.1	Assembly overview - air filter housing	318
6.2	Removing and installing air filter housing	319
7	Lambda probe	321
7.1	Removing and installing Lambda probe G39	321
8	Senders and sensors	323
8.1	Removing and installing air mass meter G70	323
8.2	Removing and installing exhaust gas pressure sensor 1 G450	324
8.3	Removing and installing fuel pressure regulating valve N276	324
8.4	Checking fuel pressure regulating valve N276	327
8.5	Removing and installing fuel pressure sender G247	329
8.6	Checking fuel pressure sender G 247	332
8.7	Checking fuel metering valve N 290	333
9	Engine control unit	334
9.1	Removing and installing engine (motor) control unit J623	334
9.2	Removing and installing anti-theft engine control unit J623	335
26	Exhaust system	338
1	Exhaust pipes and silencers	338
1.1	Assembly overview - silencers	338
1.2	Separating exhaust pipes from silencers	339
1.3	Aligning exhaust system free of stress	340
1.4	Installation position of clamp	341
2	Emission control	342
2.1	Assembly overview - catalytic converter	342
2.2	Assembly overview - particulate filter	344
2.3	Removing and installing particulate filter	345
3	Exhaust gas temperature regulation	350
3.1	Assembly overview - exhaust gas temperature regulation	350
3.2	Removing and installing exhaust gas temperature sender 1 G235	351



3.3	Removing and installing exhaust gas temperature sender 3 G495	352
3.4	Removing and installing exhaust gas temperature sender 4 G648	354
4	Exhaust gas recirculation	357
4.1	Assembly overview - exhaust gas recirculation	357
4.2	Checking changeover for exhaust gas recirculation cooler	358
4.3	Removing and installing exhaust gas recirculation cooler	359
4.4	Checking exhaust gas recirculation cooler for leaks	361
4.5	Cleaning exhaust gas recirculation system	362
28	Glow plug system	369
1	Glow plug system	369
1.1	Removing and installing glow plug	369
1.2	Checking glow plugs	371
1.3	Removing and installing automatic glow period control unit J179	371
1.4	Removing and installing engine speed sender G28	371
1.5	Removing and installing Hall sender G40	372