



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	5
2.1 Safety precautions when working on vehicles with a gas system	5
2.2 Safety regulations for working on fuel supply	6
2.3 Crash fuel shut-off	7
3 General information	8
3.1 Rules for cleanliness when working on fuel supply system	8
3.2 General notes on fuel system	8
20 - Fuel supply system	10
1 Fuel	10
1.1 Assembly overview - fuel tank	10
1.2 Emptying fuel tank	11
1.3 Removing and installing fuel tank	14
1.4 Releasing high pressure in fuel system	16
2 Fuel delivery unit, fuel gauge sender	18
2.1 Removing and installing fuel delivery unit, fuel gauge sender	18
2.2 Removing and installing fuel gauge sender G	19
3 Plug-in connectors	21
3.1 Separating plug-in connectors	21
4 Fuel filter	25
4.1 Assembly overview - fuel filter	25
4.2 Removing and installing fuel filter	26
5 Activated charcoal filter system	28
5.1 Function	28
5.2 Assembly overview - activated charcoal filter system	28
5.3 Checking fuel tank breather	29
6 Accelerator pedal	34
6.1 Function of the electronic throttle	34
6.2 Assembly overview - accelerator module	34
6.3 Removing and installing accelerator module with accelerator position sender G79 / G185	35
7 Fuel pump	39
7.1 Checking fuel pump (vehicles model years ➤ 2005), engine codes BCA, BUD	39
7.2 Checking fuel pump (vehicles model year 2006 ➤), engine codes BCA, BUD	45
7.3 Checking fuel pump, engine codes BGU, BSE, BSF	52
7.4 Checking fuel pump, engine codes CBZA, CBZB	65
8 Removing and installing parts of fuel supply system (natural gas)	72
8.1 Natural gas system components	72
8.2 Natural gas system components, Caddy Maxi	74
8.3 Assembly overview - natural gas tank with attachments	75
8.4 Assembly overview - natural gas tank with attachments	77
8.5 Assembly overview - protective covers	79
8.6 Assembly overview - protective covers, Caddy Maxi	80
8.7 Removing and installing fuel tank (natural gas)	80
8.8 Removing and installing solenoids from tank shut-off valve 1 N361 and tank shut-off valve 2 N362	91
8.9 Removing and installing solenoids from tank shut-off valve 3 N363 and tank shut-off valve 4 N429	92
8.10 Removing and installing solenoid from tank shut-off valve 5 N430 (Caddy Maxi)	93



8.11	Removing and installing fuel tank shut-off valve	93
8.12	Removing and installing filling connection	96
8.13	Removing and installing gas pressure regulator with high-pressure valve for gas mode N372	98
8.14	Testing for leaks	100
8.15	Removing and installing tank pressure sensor G400	101
8.16	Evacuating natural gas tank	102
8.17	Evacuating fuel tank, securing solenoid with securing clip	104
8.18	Evacuating fuel tank, securing solenoid with securing nut	105
9	Parts of the gas supply system	108
9.1	Assembly overview - emptying fuel tank (LPG)	108
9.2	Filter for LPG system: renew	111
9.3	Removing and installing fuel tank (LPG)	114
9.4	Components on the fuel tank (Autogas)	116
9.5	Removing and installing gas injector	122
9.6	Removing and installing gas rail temperature and pressure sensor GX21	122