



Contents

50 - Body - front	1
1 Lock carrier to 2011	1
1.1 Assembly overview - lock carrier	1
1.2 Removing and installing lock carrier	2
1.3 Moving to and back from service position	4
2 Lock carrier from 2011	8
2.1 Assembly overview - lock carrier	8
2.2 Removing and installing lock carrier	9
2.3 Moving to and back from service position	11
2.4 Removing and installing pressure hoses and hose connections with screw-type clamps ..	15
3 Wings on vehicles manufactured up to 2011	18
3.1 Assembly overview - wing	18
3.2 Assembly overview – additional wing cover	19
3.3 Removing and installing wing	19
3.4 Removing and installing wing bracket	23
3.5 Removing and installing wing securing bracket	24
4 Wings on vehicles manufactured as of 2011	26
4.1 Assembly overview - wing	26
4.2 Removing and installing wing	27
4.3 Removing and installing wing bracket	30
5 Bulkhead	31
5.1 Assembly overview - plenum chamber bulkhead	31
5.2 Assembly overview - plenum chamber bulkhead	32
5.3 Assembly overview - plenum chamber cover	34
5.4 Removing and installing plenum chamber cover	34
55 - Bonnet, rear lid	37
1 Bonnet (hood)	37
1.1 Assembly overview - bonnet	37
1.2 Assembly overview - bonnet lock and release components	39
1.3 Removing and installing bonnet	39
1.4 Adjusting bonnet	41
1.5 Removing and installing bonnet lock on vehicles up to 2010	44
1.6 Removing and installing bonnet lock on vehicles as of 2011	45
1.7 Removing and installing bonnet release lever	46
1.8 Removing and installing striker pin on vehicles as of 2011	46
1.9 Removing and installing hinge	47
1.10 Detaching Bowden cable	48
1.11 Removing and installing insulation	48
1.12 Removing and installing gas strut	51
1.13 Releasing gas from gas strut	51
2 Rear lid	52
2.1 Assembly overview - rear lid	52
2.2 Assembly overview – locking and release components	54
2.3 Assembly overview – exterior handle without lock cylinder on vehicles as of 2011	57
2.4 Removing and installing rear lid	57
2.5 Adjusting rear lid	59
2.6 Removing and installing lid lock	65
2.7 Removing and installing hinges	67
2.8 Removing and installing striker pin	69
2.9 Removing and installing latch carrier	70
2.10 Removing and installing lock cylinder carrier	74



2.11	Removing and installing exterior handle without lock cylinder, vehicles as of 2011	74
2.12	Dismantling exterior handle without lock cylinder	81
2.13	Removing and installing light strip	86
2.14	Attachment of registration plate	87
2.15	Removing and installing rear lid seal	88
2.16	Removing and installing gas strut	89
2.17	Releasing gas from gas strut	91
3	Roof loading flap	92
3.1	Assembly overview – roof load flap	92
3.2	Assembly overview - carrier	93
3.3	Assembly overview – striker plate	94
3.4	Removing and installing rear roof loading flap	94
3.5	Removing and installing roof loading flap seal	96
3.6	Removing and installing gas strut	97
3.7	Releasing gas from gas strut	98
4	Tank flap	99
4.1	Assembly overview - fuel tank flap	99
4.2	Assembly overview – tank flap locking unit	100
4.3	Removing and installing fuel tank flap	100
4.4	Removing and installing tank flap locking unit	102
57	Front doors, door components, central locking	104
1	Rear door	104
1.1	Assembly overview – door hinge	104
1.2	Assembly overview – door hinges on postal and parcel delivery vehicles	106
1.3	Removing and installing inner door seal	108
1.4	Removing and installing outer door seal	109
1.5	Removing and installing door hinge	110
1.6	Removing and installing door hinges on postal and courier service vehicles	112
1.7	Greasing new door hinges	114
1.8	Removing and installing front door	114
1.9	Removing and installing front doors on postal and courier service vehicles	116
1.10	Adjusting door	117
1.11	Adjusting striker pin	120
2	Door components	121
2.1	Assembly overview - subframe	121
2.2	Assembly overview - door handle and door lock	122
2.3	Removing and installing subframe	123
2.4	Removing and installing lock cylinder housing	128
2.5	Removing and installing door handle	130
2.6	Removing and installing door lock	132
2.7	Installing mounting bracket	133
3	Central locking	134
3.1	Overview of fitting locations – central locking	134
3.2	Assembly overview - ignition key to 2010	136
3.3	Assembly overview - ignition key from 2010	137
3.4	Assembly overview – ignition key with light	138
3.5	Removing and installing ignition key battery to 2010	138
3.6	Removing and installing ignition key battery from 2010	139
3.7	Removing and installing battery for ignition key with light	140
58	Rear doors, door components	142
1	Sliding door	142
1.1	Assembly overview - sliding door roller guides	142
1.2	Assembly overview – door arrester	143



1.3	Assembly overview – guide rail cover	143
1.4	Assembly overview – middle guide rail	146
1.5	Removing and installing sliding door	146
1.6	Adjusting sliding door	149
1.7	Removing and installing hinge	156
1.8	Removing and installing door arrester	156
1.9	Removing and installing upper stop	157
1.10	Removing and installing guide rail cover	158
1.11	Removing and installing middle guide rail	160
1.12	Removing and installing inner door seal	163
1.13	Removing and installing top door seal on Caddy, short version	164
1.14	Removing and installing top door seal on Caddy Maxi	164
1.15	Removing and installing bottom door seal on Caddy, short version	165
1.16	Removing and installing bottom door seal on Caddy Maxi	165
2	Components of sliding door	166
2.1	Assembly overview – sliding door locking and release components	166
2.2	Assembly overview – remote release mechanism	168
2.3	Assembly overview – mounting bracket	168
2.4	Assembly overview - interior operating mechanism	170
2.5	Removing and installing striker pin	170
2.6	Removing and installing door lock	171
2.7	Removing and installing exterior door handle	172
2.8	Removing and installing remote release mechanism	173
2.9	Removing and installing door handle bracket	175
2.10	Removing and installing interior operating mechanism	176
3	Wing door	179
3.1	Assembly overview – right wing door	179
3.2	Assembly overview - rear left wing door	180
3.3	Assembly overview – wing door hinges	181
3.4	Removing and installing wing door	181
3.5	Removing and installing rear wing door hinges	183
3.6	Adjusting wing door	185
3.7	Removing and installing wing door seal	190
3.8	Removing and installing inner seal of wing door	191
4	Components of rear wing door	192
4.1	Assembly overview – locking and release components of rear wing door	192
4.2	Assembly overview - release lever	194
4.3	Assembly overview – remote release motor carrier	195
4.4	Assembly overview – exterior door handle	196
4.5	Removing and installing upper and lower striker pins	196
4.6	Removing and installing upper lock	197
4.7	Removing and installing lower lock	198
4.8	Removing and installing release lever	199
4.9	Removing and installing motor carrier part for remote release	200
4.10	Removing and installing interior operating mechanism	202
4.11	Removing and installing exterior door handle	202
4.12	Removing and installing light strip	204
4.13	Removing and installing lock cylinder	205
63	Bumpers	206
1	Front bumper cover to 2011	206
1.1	Assembly overview – front bumper cover, standard equipment version	206
1.2	Assembly overview – front bumper cover painted in vehicle colour	208
1.3	Assembly overview – add-on parts, standard equipment version	209
1.4	Assembly overview – add-on parts painted in vehicle colour	210



1.5	Assembly overview - substructure components	211
1.6	Assembly overview - front bumper carrier	212
1.7	Removing and installing front bumper cover, standard equipment version	212
1.8	Removing and installing front bumper cover painted in vehicle colour	214
1.9	Repairing front bumper cover	215
2	Front bumper cover from 2011	216
2.1	Assembly overview - front bumper cover	216
2.2	Assembly overview - front bumper cover, add-on parts	218
2.3	Assembly overview - front bumper cover, add-on parts, »Cross Caddy«	219
2.4	Assembly overview - front bumper cover, substructure components	220
2.5	Assembly overview - front bumper carrier	221
2.6	Assembly overview - parking aid and brackets in front bumper cover	222
2.7	Removing and installing front bumper cover	222
2.8	Repairing front bumper cover	226
2.9	Installing brackets for parking aid system	226
3	Bumper, rear	231
3.1	Assembly overview - rear bumper cover	231
3.2	Assembly overview - rear bumper cover for towing bracket	233
3.3	Assembly overview - rear bumper cover, add-on parts	234
3.4	Assembly overview - rear bumper cover, add-on parts, »Cross Caddy«	235
3.5	Assembly overview - parking aid, brackets in rear bumper cover	236
3.6	Assembly overview - bumper carrier with rear bumper cover	238
3.7	Removing and installing rear bumper cover	238
3.8	Removing and installing rear bumper cover for towing bracket	241
3.9	Removing and installing bumper carrier with rear bumper cover	243
3.10	Repairing rear bumper cover	244
3.11	Installing brackets for parking aid system	245
64	- Glazing	250
1	Repair instructions	250
1.1	Minimum curing period	250
1.2	Window repair	251
1.3	Installation instructions for bonded windows	251
1.4	Preparing old undamaged windows for fitting	252
1.5	Preparing new windows for installing	253
1.6	Preparing body flange for glazing	254
1.7	Touching up paint damage	255
1.8	Cleaning in the event of dirt caused by adhesive sealing material	255
2	Windscreen	257
2.1	Assembly overview - windscreen	257
2.2	Dimensions for adhesive bead and glass/paint primer on windscreen	258
2.3	Removing and installing windscreen	258
2.4	Preparing windscreen with inspection window for vehicles without vehicle identification number	262
3	Rear windscreen	263
3.1	Assembly overview - rear window	263
3.2	Dimensions for adhesive bead and glass/paint primer on rear window	264
3.3	Removing and installing rear window	264
4	Rear wing door window	267
4.1	Assembly overview - rear wing door window	267
4.2	Dimensions for adhesive bead and glass/paint primer on rear wing door window	268
4.3	Removing and installing rear wing door window	269
5	Side window	271
5.1	Assembly overview - side window in sliding door	271
5.2	Assembly overview - sliding window in sliding door	273



5.3	Assembly overview – side window	274
5.4	Assembly overview – side window	275
5.5	Assembly overview - sliding window in side panel	276
5.6	Assembly overview - movable section of sliding window	277
5.7	Dimensions for adhesive bead and glass/paint primer on side window	279
5.8	Removing and installing side window in sliding door	281
5.9	Removing and installing sliding window in sliding door	283
5.10	Side window of sliding door, panel van, postal vehicle and courier service vehicle	285
5.11	Removing and installing side window	290
5.12	Removing and installing sliding window in side panel	292
5.13	Removing and installing movable section of sliding window	294
6	Front door window	296
6.1	Assembly overview - front door window	296
6.2	Assembly overview – window channel	298
6.3	Removing and installing door window	298
6.4	Removing and installing window regulator motor	301
6.5	Removing and installing window channel	302
7	Windows having threaded connections	305
7.1	Assembly overview - front side window	305
7.2	Assembly overview – vent wing	305
7.3	Removing and installing front side window	306
7.4	Removing and installing vent wing	307
66	Exterior equipment	309
1	Radiator grille and front trim	309
1.1	Assembly overview - radiator grille	309
1.2	Removing and installing radiator grille up to 2011	309
1.3	Removing and installing radiator grille on vehicles from 2011	311
2	Mouldings, trims, extensions	313
2.1	Assembly overview - protective side mouldings	313
2.2	Assembly overview - protective side moulding, »Edition 30«	314
2.3	Assembly overview - tunnel cross member	315
2.4	Removing and installing protective side mouldings	315
2.5	Removing and installing sill panel moulding, »Edition 30«	317
2.6	Removing and installing decorative strip for light strip	319
3	Noise insulation	322
3.1	Assembly overview – noise insulation	322
4	Decorative film	325
4.1	Decorative film for rear wing door window	325
4.2	Decorative film for rear bumper, »Edition 30«	326
4.3	Decorative film on side member, »Cross Caddy«	329
5	Roof railing	332
5.1	Assembly overview - roof railing	332
5.2	Removing and installing roof railing	332
6	Exterior mirror	338
6.1	Assembly overview - exterior mirror	338
6.2	Assembly overview – insulation, sealing strip and fabric strip for exterior mirror	339
6.3	Removing and installing mirror housing	339
6.4	Removing and installing mirror glass	341
6.5	Removing and installing exterior mirror	341
7	Wheel housing liners	344
7.1	Assembly overview - front wheel housing liner	344
7.2	Assembly overview - rear wheel housing liner	345
7.3	Removing and installing front wheel housing liner	345



7.4	Removing and installing rear wheel housing liner	347
8	Lettering and emblem	349
8.1	Assembly overview – front emblem on radiator grille	349
8.2	Dimensions - lettering and emblems	350
8.3	Removing and installing emblem in front bumper cover, vehicles up to 2011	359
8.4	Removing and installing emblem, vehicles as of 2011	359
9	Special add-on parts	362
9.1	Assembly overview - special add-on parts, »Cross Caddy«	362
9.2	Repair instructions	364
9.3	Removing and installing trim insert for side member extension	367
9.4	Removing and installing side member extension	369
9.5	Removing and installing wheel housing extension for wing	372
9.6	Removing and installing wheel housing extension for sliding door	375
9.7	Removing and installing wheel housing extension for side panel	378
9.8	Removing and installing front and rear door trim	381
9.9	Removing and installing front spoiler	383
9.10	Removing and installing rear spoiler	386
10	Towing bracket	389
10.1	Installation instructions for towing brackets	389
10.2	Assembly overview – towing bracket up to 2008	389
10.3	Assembly overview – towing brackets as of 2009	391
10.4	Removing and installing towing bracket on vehicles up to 2008	393
10.5	Removing and installing towing bracket on vehicles as of 2009	396
11	Spare wheel mounting	399
11.1	Assembly overview – spare wheel holder	399