



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 General information on air conditioning</b>	<b>1</b>
1.1 Other reference material	1
1.2 Basics of air conditioning technology	1
1.3 Vapour pressure table for refrigerant R134a	2
1.4 Refrigerant R134a	3
1.5 Properties of refrigerant R134a	4
1.6 Refrigerant oil	6
1.7 Comfort	8
1.8 How air conditioning works	8
1.9 General work safety	9
1.10 Safety measures when working on vehicles with air conditioning and when working with refrigerant R134a	12
1.11 Basics for working on refrigerant circuit	13
<b>2 General information on refrigerant circuit</b>	<b>16</b>
2.1 Components of refrigerant circuit	16
2.2 Design of refrigerant circuit	24
2.3 Evacuation and charging valves for quick-release couplings of air conditioner service station on refrigerant circuit	25
2.4 Switches and senders in refrigerant circuit and related connections	27
2.5 Electrical components not installed in refrigerant circuit	30
2.6 Pressures and temperatures in refrigerant circuit	31
2.7 Refrigerant circuit with expansion valve	32
2.8 Refrigerant circuit with restrictor and reservoir	33
2.9 Test and measurement work that can be performed using a pressure gauge	35
2.10 Air conditioner service and recycling equipment	36
2.11 Notes to repairs on refrigerant circuit	37
<b>3 Legal texts and regulations</b>	<b>38</b>
3.1 Laws and regulations	38
3.2 Recycling and refuse law	42
3.3 Converting R12 refrigerant circuits to R134a refrigerant circuits and repairing them (retrofitting)	44
3.4 Maintaining records on refrigerant	44
<b>4 Refrigerant circuit</b>	<b>45</b>
4.1 Important repair notes on air conditioning	45
4.2 Converting refrigerant circuits from R12 refrigerant to R134a	45
<b>5 Working with the air conditioner service station</b>	<b>46</b>
5.1 Important instructions for working with the air conditioner service station	46
5.2 Connecting a air conditioner service station for measuring and testing	47
5.3 Drain the refrigerant circuit using the air conditioner service station	48
5.4 Evacuating refrigerant circuit using air conditioner service station	48
5.5 Filling refrigerant circuit with air conditioner service station	49
5.6 Bringing air conditioning system into service after charging	50
5.7 Charging the container in the air conditioning service station with refrigerant	51
5.8 Emptying air conditioner service station	51
<b>6 Detecting leaks in refrigerant circuit</b>	<b>52</b>
6.1 Leak detection in refrigerant circuit using compressed air or nitrogen	53
6.2 Searching for leaks in refrigerant circuits using leak detector V.A.G 1796	55
6.3 Detecting leaks in refrigerant circuit using leak detecting system VAS 6196 or leak detecting system VAS 6201 or a later model	55
<b>7 Clearing refrigerant circuit of contaminants</b>	<b>62</b>
7.1 Vehicles with high-voltage system (hybrid vehicles)	62
7.2 Blowing through refrigerant circuit with compressed air and nitrogen	63



7.3	Flushing refrigerant circuit with refrigerant R134a	65
<b>8</b>	<b>Clearing refrigerant circuit of contaminants, commercial vehicles</b>	<b>95</b>
8.1	Vehicles with high-voltage system	95
8.2	Flushing refrigerant circuit with refrigerant R134a	96
8.3	Adapters for setting up flushing circuits	96
8.4	Procedure for setting up and flushing refrigerant circuit, Amarok 2010 ▶	100
8.5	Procedure for setting up and flushing refrigerant circuit, Caddy 2004 ▶	105
8.6	Procedure for setting up and flushing refrigerant circuit, Crafter ▶2017	112
8.7	Procedure for setting up and flushing refrigerant circuit, Crafter 2017 ▶ or MAN TGE ▶, Crafter Grand California ▶	125
8.8	Procedure for setting up and flushing refrigerant circuit, Transporter 2016 ▶	138
<b>9</b>	<b>Complaints</b>	<b>150</b>
9.1	Possible complaints about refrigerant circuit	150
9.2	Odours from heater and air conditioner unit	151
<b>10</b>	<b>Connecting the air conditioning service station</b>	<b>154</b>
10.1	For vehicles that have connections on both low-pressure and high-pressure sides of refrigerant circuit	154
<b>11</b>	<b>Checking pressures on vehicles</b>	<b>155</b>
11.1	Checking pressures in the refrigerant circuit (using a air conditioning service station)	155
11.2	Checking systems with a restrictor and collector (with internally regulated air conditioner compressor)	159
11.3	Checking systems with an expansion valve and reservoir (with internally regulated air conditioner compressor)	163
11.4	Checking systems with an expansion valve and reservoir (without regulated air conditioner compressor)	167
11.5	Checking systems with a restrictor and reservoir and air conditioner compressor regulating valve N280 (with externally regulated air conditioner compressor)	168
11.6	Checking systems with an expansion valve, receiver and air conditioner compressor regulating valve N280 (with externally regulated air conditioner compressor)	174
11.7	With expansion valve, receiver and electrical air conditioner compressor	184
<b>12</b>	<b>Renewing components</b>	<b>185</b>
12.1	In the event of leaking or damaged components (apart from the air conditioner compressor, receiver or reservoir)	186
12.2	Renew the air conditioner compressor	188
12.3	Replace receiver or reservoir and restrictor	190
<b>13</b>	<b>Testing equipment and tools</b>	<b>193</b>
13.1	List of test equipment, tools and materials	193