



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety information</b> .....	<b>1</b>
1.1 Safety precautions during work on fuel system .....	1
1.2 Safety precautions when working on vehicles with start/stop system .....	1
1.3 Safety precautions when using test and measuring instruments during a road test .....	2
1.4 Safety precautions when working on cooling system .....	2
1.5 Safety precautions when working on vehicles with auxiliary/supplementary heater .....	2
<b>2 General information</b> .....	<b>4</b>
2.1 Type plates .....	4
2.2 Starting conditions for auxiliary/supplementary heater .....	5
2.3 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system ..	6
<b>3 Repair notes</b> .....	<b>7</b>
3.1 Notes on general repairs .....	7
<b>82 - Supplementary heating</b> .....	<b>8</b>
<b>1 Overview of fitting locations - auxiliary/supplementary heater</b> .....	<b>8</b>
1.1 Overview of fitting locations - components not located in passenger compartment .....	8
1.2 Overview of fitting locations - components located outside of passenger compartment, Caddy 2011▶ .....	9
<b>2 Auxiliary/supplementary heater</b> .....	<b>12</b>
2.1 Overview of fitting locations - auxiliary/supplementary heater, Thermo Top V and Thermo Top fleece .....	12
2.2 Assembly overview - auxiliary/supplementary heater, internal .....	14
2.3 Assembly overview - auxiliary/supplementary heater attachments .....	18
2.4 Removing and installing auxiliary/supplementary heater .....	18
2.5 Dismantling and assembling auxiliary/supplementary heater .....	22
2.6 Removing and installing air intake silencer .....	22
2.7 Removing and installing circulation pump V55 .....	23
2.8 Removing and installing exhaust system .....	24
2.9 Removing and installing silencer with bracket .....	25
2.10 Removing and installing auxiliary/supplementary heater bracket .....	25
2.11 Removing and installing cover .....	26
2.12 Removing and installing auxiliary heater control unit J364 .....	26
2.13 Removing and installing glow plug with flame monitor Q8 .....	27
2.14 Removing and installing temperature sensor G18 and overheating sensor G189 ..	28
2.15 Dismantling and assembling burner unit .....	29
<b>3 Coolant circuit with auxiliary/supplementary heater</b> .....	<b>31</b>
3.1 Coolant hose schematic diagram for vehicles with auxiliary heater, BCA .....	31
3.2 Coolant hose schematic diagram for vehicles with auxiliary heater, BGU .....	33
3.3 Coolant hose schematic diagram for vehicles with auxiliary heater, BJB .....	34
3.4 Coolant hose schematic diagram for vehicles with auxiliary heater, BDJ .....	35
3.5 Coolant hose schematic diagram for vehicles with auxiliary heater, CAYD and CAYE .....	36
3.6 Coolant hose schematic diagram for vehicles with auxiliary heater, CFCH, CFCE, CFCF, CLCA, CFHC, CFHE, CFHF and CFJA .....	37
3.7 Coolant hose schematic diagram for vehicles with auxiliary heater, CBZA and CBZB .....	38
3.8 Removing and installing heater coolant shut-off valve N279 .....	38
<b>4 Fuel supply system</b> .....	<b>40</b>
4.1 Overview of fitting locations - fuel supply system .....	40
4.2 Removing and installing metering pump V54 .....	41
4.3 Checking fuel delivery rate .....	42
<b>5 Regulation of auxiliary/supplementary heater</b> .....	<b>45</b>
5.1 Functional description of auxiliary heater Thermo Top V .....	45
5.2 Functional description of Thermo Top fleece .....	45



5.3	Supplementary heater mode .....	46
5.4	Auxiliary heater mode, Caddy ▶2011 .....	47
5.5	Auxiliary heater mode, Caddy 2011▶ .....	47
5.6	Switching off auxiliary/supplementary heater .....	48
<b>6</b>	<b>Other controlling and regulating components .....</b>	<b>49</b>
6.1	Removing and installing ambient temperature sensor .....	49
6.2	Removing and installing remote control receiver for auxiliary coolant heater R149 .....	49
6.3	Functional description of remote control for auxiliary/supplementary heater .....	50