



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Technical data</b>	<b>1</b>
1.1 Assembly allocation and capacities	1
1.2 Gear ratio	1
<b>2 General repair instructions</b>	<b>2</b>
2.1 Oil	2
2.2 Axle beam	2
2.3 Gaskets and seals	2
2.4 Nuts and bolts	2
<b>3 Genuine parts</b>	<b>4</b>
<b>39 - Final drive - differential</b>	<b>5</b>
<b>1 Connecting vehicle diagnostic tester and selecting function</b>	<b>5</b>
<b>2 Propshaft</b>	<b>6</b>
2.1 Assembly overview - propshaft	6
2.2 Removing and installing propshaft	7
2.3 Renewing bellows for rear propshaft	11
<b>3 Renewing oil seal for propshaft flange of rear final drive (rear axle housing installed)</b>	<b>15</b>
3.1 Removing	16
3.2 Installing	17
<b>4 All-wheel drive coupling</b>	<b>19</b>
4.1 Checking function of all-wheel drive coupling	19
4.2 Electrical/electronic components and fitting locations	19
4.3 Assembly overview - all-wheel drive control unit J492	20
4.4 Removing and installing four-wheel drive control unit J492	21
4.5 Removing and installing all-wheel drive coupling pump V181	24
4.6 Assembly overview - all-wheel drive coupling	27
4.7 Removing and installing all-wheel drive coupling	28
4.8 Assembly overview - dismantling and assembling all-wheel drive coupling	31
<b>5 Rear final drive</b>	<b>33</b>
5.1 Assembly overview - rear final drive	33
<b>6 Replacing oil seals for rear axle shafts</b>	<b>35</b>
<b>7 Checking oil level in rear final drive or adding oil</b>	<b>40</b>
<b>8 Checking or replenishing oil level of all-wheel drive coupling</b>	<b>41</b>
8.1 Checking oil level in all-wheel drive coupling	41
8.2 Replenishing oil in all-wheel drive coupling	42