



Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Overview - power transmission	2
2.1 Overview - power transmission	2
3 Technical data	4
3.1 Calculating overall gear ratio "i"	4
3.2 Allocation gearbox - engine/capacities	4
4 Repair notes	8
4.1 General repair instructions	8
30 - Clutch	11
1 Clutch operation	11
1.1 Assembly overview - pedal cluster	11
1.2 Assembly overview - clutch hydraulics	13
1.3 Assembly overview - clutch release mechanism	15
1.4 Removing and installing over-centre spring	16
1.5 Removing and installing clutch pedal	18
1.6 Removing and installing mounting bracket	20
1.7 Removing and installing clutch master cylinder	25
1.8 Removing and installing clutch position sender G476	27
1.9 Removing and installing clutch slave cylinder	28
1.10 Bleeding clutch mechanism	29
1.11 Repairing clutch release mechanism	31
2 Clutch	32
2.1 Assembly overview - clutch	32
2.2 Removing and installing clutch	33
34 - Controls, housing	35
1 Selector mechanism	35
1.1 Installation position - selector mechanism	35
1.2 Assembly overview - Selector cables	37
1.3 Assembly overview - gear knob and cover	39
1.4 Assembly overview - Selector lever and selector housing, ▶06.2010	41
1.5 Assembly overview - Selector lever and selector housing, 07.2010▶	43
1.6 Dismantling and assembling selector mechanism, 07.2010▶	44
1.7 Removing and installing gear knob	48
1.8 Removing and installing selector mechanism	49
1.9 Adjusting selector mechanism	52
1.10 Removing and installing relay lever	55
2 Removing and installing gearbox	58
2.1 Specified torques for gearbox	58
2.2 Removing gearbox, vehicles ▶07.2010	59
2.3 Removing gearbox, from 08.2010▶	68
2.4 Installing gearbox	78
3 Transporting gearbox	84
3.1 Transporting gearbox	84
4 Gear oil	85
4.1 Checking gear oil level	85
5 Dismantling and assembling gearbox	87
5.1 Schematic overview - gearbox	87
5.2 Assembly overview - selector unit	88



5.3	Assembly overview - selector forks	89
5.4	Assembly overview - gearbox housing/5th gear	90
5.5	Assembly overview - input shaft, output shafts, differential, selector unit	91
5.6	Repairing selector unit	92
5.7	Repairing selector forks	94
5.8	Dismantling and assembling gearbox	97
6	Gearbox housing, clutch housing	107
6.1	Assembly overview - gearbox housing/clutch housing	107
6.2	Assembly overview - clutch housing	109
6.3	Repairing gearbox housing/clutch housing	110
35	- Gears, shafts	112
1	Input shaft	112
1.1	Assembly overview - input shaft	112
1.2	Dismantling and assembling input shaft	114
2	Output shaft	123
2.1	Assembly overview - output shaft	123
2.2	Dismantling and assembling output shaft	125
39	- Final drive - differential	131
1	Oil seals	131
1.1	Renewing left seal	131
1.2	Renewing right oil seal	133
2	Differential	135
2.1	Assembly overview - differential	135
2.2	Dismantling and assembling differential	137
2.3	Adjusting differential	142