



Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Technical data	3
2.1 Allocation gearbox - engine	3
2.2 Capacities	5
2.3 Calculation of gear ratios	5
3 Overview - power transmission	6
3.1 Overview - power transmission - front-wheel drive	6
3.2 Overview - power transmission - all-wheel drive	8
4 Safety information	10
4.1 Safety precautions when using testers and measuring instruments during a road test	10
4.2 Safety measures when working on vehicles with a start/stop system	11
4.3 All-wheel drive - notes on performance test	11
5 Repair notes	12
5.1 Contact corrosion	12
5.2 General repair instructions	12
30 - Clutch	16
1 Clutch operation	16
1.1 Assembly overview - clutch release mechanism	16
1.2 Assembly overview - pedal cluster	18
1.3 Assembly overview - clutch hydraulics	20
1.4 Checking clutch master cylinder and clutch slave cylinder	22
1.5 Removing and installing mounting bracket	22
1.6 Removing and installing clutch pedal	27
1.7 Removing and installing over-centre spring	31
1.8 Removing and installing clutch position sender G476	34
1.9 Removing and installing clutch master cylinder	36
1.10 Removing and installing line for clutch mechanism	38
1.11 Bleeding clutch mechanism	41
1.12 Removing and installing clutch slave cylinder together with release bearing	42
2 Clutch	44
2.1 Determining make of clutch	44
2.2 Assembly overview - clutch	45
2.3 Removing and installing Sachs clutch	48
34 - Controls, housing	56
1 Selector mechanism	56
1.1 Installation position - selector mechanism	56
1.2 Assembly overview - gear knob and cover	58
1.3 Assembly overview - Gear lever and selector housing	59
1.4 Assembly overview - Selector cables	61
1.5 Removing and installing relay lever	62
1.6 Removing and installing gear knob	65
1.7 Removing and installing selector mechanism	66
1.8 Dismantling and assembling selector mechanism	70
1.9 Removing and installing selector unit	76
1.10 Removing and installing selector cables	78
1.11 Adjusting selector mechanism	80
1.12 Checking selector mechanism	82
1.13 Renewing selector shaft seal	82



2	Removing and installing gearbox	85
2.1	Removing gearbox	85
2.2	Installing gearbox	104
2.3	Specified torques – gearbox	115
3	Transporting gearbox	117
4	Bevel box	118
4.1	Removing bevel box	118
4.2	Installing bevel box	123
5	Gear oil	127
5.1	Checking gear oil level	127
5.2	Draining and filling gear oil	128
6	Securing to engine and gearbox support	132
6.1	Installing manual gearbox to engine and gearbox support	132
6.2	Installing bevel box to engine and gearbox support	132
7	Dismantling and assembling gearbox	134
7.1	Schematic overview - gearbox	134
7.2	Assembly overview - gearbox housing and selector mechanism	137
7.3	Assembly overview - input shaft, output shafts, differential and selector rods	139
7.4	Assembly overview - selector unit	143
7.5	Assembly overview - selector forks	145
7.6	Assembly order, gearbox »without« circlip A for input shaft cover made from sheet metal	146
7.7	Assembly sequence: I = gearbox »with« circlip A for input shaft cover made of sheet metal; II = gearbox with input shaft cover made of plastic	160
8	Gearbox housing, clutch housing	178
8.1	Assembly overview - gearbox housing	178
8.2	Assembly overview - clutch housing	180
8.3	Repairing gearbox housing	184
8.4	Repairing clutch housing	193
35 - Gears, shafts		196
1	Input shaft	196
1.1	Assembly overview - input shaft	196
1.2	Dismantling and assembling input shaft	198
1.3	Modification in area of deep groove ball bearing	203
1.4	Renewing input shaft seal	204
2	Output shaft	206
2.1	Assembly overview - output shaft	206
2.2	Dismantling and assembling output shaft	211
2.3	Adjusting output shaft	245
39 - Final drive - differential		256
1	Oil seals	256
1.1	Overview of fitting locations - seals	256
1.2	Renewing left seal	257
1.3	Renewing right oil seal	259
2	Differential	267
2.1	Assembly overview - differential	267
2.2	Dismantling and assembling differential	272
2.3	Adjusting differential	285
3	Adjustment overview	290
4	Bevel box	291
4.1	Assembly overview - bevel box	291
4.2	Renewing bevel box seals	293



4.3	Renewing output flange and redetermining thickness of shim	305
4.4	Removing and installing right flange shaft	305
4.5	Renewing needle bearing (polygon bearing) for right flange shaft, and seal on right flange shaft	308
5	Gear oil	311
5.1	Checking gear oil level	311
5.2	Draining and filling gear oil	312