



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number, engine data	1
2 Safety instructions	2
2.1 Safety precautions when working on cooling system	2
2.2 Safety precautions when working on fuel supply system	3
2.3 Safety precautions when working on charge air system	4
2.4 Safety precautions when working on injection system	4
2.5 Safety precautions during road tests in which testing and measuring equipment is used	5
3 Repair instructions	6
3.1 Rules for cleanliness when working on fuel supply system/injection system	6
3.2 Rules for cleanliness when working on charge air system	6
3.3 General notes on the lubrication system	7
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Removing engine - vehicles with four-wheel drive	14
1.3 Securing engine on engine and gearbox support VAS 6095	21
1.4 Installing engine	22
1.5 Installing engine - vehicles with four-wheel drive	23
2 Assembly mountings	26
2.1 Assembly overview - assembly mountings	26
13 - Crankshaft group	28
1 Cylinder block (pulley end)	28
1.1 Assembly overview - cylinder block	28
1.2 Assembly overview - poly V-belt drive with vane pump	29
1.3 Assembly overview - poly V-belt drive with vane pump	30
1.4 Removing and installing poly V-belt	30
1.5 Renewing crankshaft oil seal on belt pulley end	33
1.6 Removing and installing sealing flange on pulley end	35
2 Cylinder block, gearbox end	38
2.1 Assembly overview - cylinder block, gearbox end	38
2.2 Removing and installing dual-mass flywheel	39
2.3 Removing and installing sealing flange on gearbox side	41
3 Crankshaft	50
3.1 Assembly overview - crankshaft	50
3.2 Renewing needle bearing in crankshaft	51
3.3 Crankshaft dimensions	52
4 Pistons and conrods	53
4.1 Assembly overview - pistons and conrods	53
4.2 Checking piston and cylinder bore	54
4.3 Separating new conrod	56
4.4 Measuring piston projection at TDC	56
4.5 Cylinder head gasket identification	58
4.6 Piston and cylinder dimensions	58
15 - Cylinder head, valve gear	59
1 Cylinder head	59
1.1 Assembly overview - cylinder head	59
1.2 Removing and installing cylinder head	63



2 Charge air system	162
2.1 Assembly overview - charge air system, engine code BJB	162
2.2 Assembly overview - charge air system, engine codes BLS, BSU	164
2.3 Fitting the charge-air system hose connections	165
2.4 Checking charge air system for leaks	166
23 - Mixture preparation - injection	169
1 Injectors	169
1.1 Assembly overview - unit injector	169
1.2 Removing and installing O-rings for unit injector	170
1.3 Removing and installing unit injector	171
1.4 Removing and installing prewiring for unit injectors	174
2 Vacuum system	178
2.1 Connection overview	178
2.2 Schematic diagram - vacuum system, engine code BJB	178
2.3 Schematic diagram - vacuum system, engine codes BLS, BSU	180
3 Air filter	181
3.1 Assembly overview - air filter	181
4 Intake manifold	182
4.1 Assembly overview - intake manifold, engine code BJB	182
4.2 Assembly overview - intake manifold, engine codes BLS, BSU	182
4.3 Cleaning intake manifold flap connection, engine codes BLS, BSU	183
5 Engine control unit	185
5.1 Removing and installing engine control unit	185
6 High-pressure pump	187
6.1 Removing and installing fuel pump	187
6.2 Checking delivery pressure and tandem pump for leaks - engine codes BJB, BLS, BSU	189
26 - Exhaust system	193
1 Exhaust pipes, silencers	193
1.1 Separating exhaust pipes, silencers	193
1.2 Aligning exhaust system free of stress	193
2 Emission control	195
2.1 Assembly overview – emission control with catalytic converter	195
2.2 Assembly overview – emission control with diesel particulate filter, engine codes BLS, BSU	197
2.3 Removing and installing particulate filter	199
2.4 Removing and installing particulate filter - vehicles with four-wheel drive	202
3 Exhaust gas temperature regulation	206
3.1 Assembly overview - exhaust gas temperature regulation	206
4 Exhaust gas recirculation system	207
4.1 Assembly overview - exhaust gas recirculation system, engine code BJB	207
4.2 Assembly overview - exhaust gas recirculation system, engine codes BLS, BSU	208
4.3 Removing and installing exhaust gas recirculation cooler, engine codes BLS, BSU	209
4.4 Checking mechanical exhaust gas recirculation valve, engine code BJB	211
28 - Glow plug system	212
1 Glow plug system	212
1.1 Removing, installing and checking glow plugs	212
1.2 Removing, installing and checking ceramic glow pin plugs	213
1.3 Removing and installing engine speed sender G28	215