



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	2
2.1 Safety regulations for working on fuel supply	2
2.2 Safety precautions when working on injection system	3
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Safety precautions when working on the cooling system	4
3 Repair instructions	5
3.1 Rules for cleanliness when working on fuel supply system	5
3.2 Foreign objects in engine	5
3.3 General notes on cooling system	5
3.4 General notes on fuel supply system	6
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Securing engine on engine and gearbox support VAS 6095	14
1.3 Installing engine	16
2 Assembly mountings	18
2.1 Assembly overview - assembly mountings	18
13 - Crankshaft group	20
1 Cylinder block (pulley end)	20
1.1 Assembly overview - poly V-belt drive, vehicles with air conditioning system	20
1.2 Assembly overview - poly V-belt drive, vehicles with air conditioning system and hydraulic power assisted steering	21
1.3 Assembly overview - cylinder block	22
1.4 Removing and installing poly-V belt	23
1.5 Renewing crankshaft oil seal - belt pulley end	24
1.6 Removing and installing sealing flange on pulley end	26
2 Cylinder block, gearbox end	30
2.1 Assembly overview - cylinder block, gearbox end	30
2.2 Renewing crankshaft sealing flange - flywheel end	31
3 Crankshaft	40
3.1 Assembly overview - crankshaft	40
3.2 Crankshaft dimensions	40
4 Pistons and conrods	42
4.1 Assembly overview - pistons and conrods	42
4.2 Checking pistons and cylinder bores	44
4.3 Measuring piston projection at TDC	45
4.4 Piston and cylinder dimensions	46
15 - Cylinder head, valve gear	47
1 Cylinder head	47
1.1 Assembly overview - cylinder head	47
1.2 Removing and installing cylinder head	50
1.3 Removing and installing cylinder head cover	56
1.4 Cylinder head gasket identification	58
1.5 Checking compression	58
2 Toothed belt drive	60
2.1 Assembly overview - toothed belt	60



2.2	Removing and installing toothed belt	61
3	Valve gear	77
3.1	Assembly overview - valve gear	77
3.2	Measuring axial play of camshaft	79
3.3	Removing and installing camshaft oil seal	79
3.4	Removing and installing camshaft	81
3.5	Renewing valve stem seals	86
4	Inlet and exhaust valves	89
4.1	Checking valve guides	89
17	- Lubrication	90
1	Sump, oil pump	90
1.1	Assembly overview - sump/oil pump	90
1.2	Removing and installing sump	91
1.3	Engine oil:	94
2	Oil filter, oil pressure switch	95
2.1	Assembly overview - oil filter housing, oil pressure switch	95
2.2	Checking oil pressure and oil pressure switch	96
2.3	Measuring oil consumption	97
19	- Cooling	98
1	Cooling system/coolant	98
1.1	Coolant hose schematic diagram, engine code BDJ	98
1.2	Checking cooling system for leaks	100
1.3	Draining and adding coolant	101
1.4	Checking engine oil cooler for leaks	110
2	Coolant pump, regulation of cooling system	112
2.1	Assembly overview - coolant pump and thermostat, engine code BDJ	112
2.2	Removing and installing coolant pump	116
2.3	Removing and installing thermostat	117
3	Radiator, radiator fan	120
3.1	Assembly overview - radiator, radiator fan	120
3.2	Removing and installing radiator	122
3.3	Removing and installing fan mounting with fans	123
23	- Mixture preparation - injection	125
1	Injectors	125
1.1	Assembly overview - unit injector	125
1.2	Removing and installing unit injector	126
1.3	Renewing O-rings for unit injectors	128
1.4	Removing and installing prewiring for unit injectors	130
2	Vacuum system	134
2.1	Vacuum hose schematic diagram	134
2.2	Exhaust gas recirculation valve N18 schematic diagram	135
3	Air filter	136
3.1	Assembly overview - air filter housing, engine code BDJ	136
4	Intake manifold	138
4.1	Assembly overview - intake manifold, engine code BDJ	138
5	Engine (motor) control unit	140
5.1	Removing and installing engine control unit	140
6	High-pressure pump	142
6.1	Removing and installing tandem pump	142
6.2	Checking delivery pressure of tandem pump	144
6.3	Checking for internal leaks	146



26 - Exhaust system	148
1 Exhaust pipes and silencers	148
1.1 Assembly overview - silencers	148
1.2 Separating exhaust pipes from silencers	149
1.3 Aligning exhaust system free of stress	149
1.4 Installation position of clamps	150
2 Exhaust manifold	151
2.1 Assembly overview - exhaust manifold with catalytic converter	151
3 Exhaust gas recirculation	152
3.1 Assembly overview - exhaust gas recirculation, engine code BDJ	152
3.2 Checking exhaust gas recirculation valve	154
28 - Glow plug system	156
1 Glow plug system	156
1.1 Checking glow plugs	156
1.2 Removing and installing engine speed sender G28	157