



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	2
2.1 Safety precautions when working on injection system	2
2.2 Safety precautions when working on charge air system	3
2.3 Safety regulations for working on fuel supply	3
2.4 Safety precautions when working on the cooling system	4
2.5 Safety precautions when using testers and measuring instruments during a road test	4
3 Repair instructions	5
3.1 Rules for cleanliness during work on fuel system	5
3.2 Rules for cleanliness when working on fuel supply system/injection system	5
3.3 General notes on the lubrication system	5
10 - Removing and installing engine	7
1 Removing and installing engine	7
1.1 Removing engine	7
1.2 Securing engine on engine and gearbox support VAS 6095	12
1.3 Installing engine	12
2 Assembly mountings	15
2.1 Assembly overview - assembly mountings	15
13 - Crankshaft group	17
1 Cylinder block (pulley end)	17
1.1 Assembly overview - poly V-belt drive	17
1.2 Assembly overview - cylinder block	18
1.3 Removing and installing poly-V belt	19
1.4 Renewing crankshaft oil seal - belt pulley end	21
1.5 Removing and installing sealing flange on pulley end	23
2 Cylinder block, gearbox end	27
2.1 Assembly overview - cylinder block, gearbox end	27
2.2 Removing and installing sealing flange on gearbox side	28
3 Crankshaft	37
3.1 Assembly overview - crankshaft	37
3.2 Crankshaft dimensions	37
3.3 Renewing needle bearing in crankshaft	38
4 Pistons and conrods	40
4.1 Assembly overview - pistons and conrods	40
4.2 Measuring piston projection at TDC	41
4.3 Piston and cylinder dimensions	42
4.4 Checking pistons and cylinder bores	42
15 - Cylinder head, valve gear	45
1 Cylinder head	45
1.1 Assembly overview - cylinder head	45
1.2 Removing and installing cylinder head	48
1.3 Removing and installing cylinder head cover	55
1.4 Checking compression	57
2 Toothed belt drive	59
2.1 Assembly overview - toothed belt drive	59
2.2 Removing and installing toothed belt	61
2.3 Loosening and securing toothed belt	68



3	Valve gear	74
3.1	Assembly overview - valve gear	74
3.2	Measuring axial play of camshaft	76
3.3	Removing and installing camshaft oil seal	76
3.4	Removing and installing camshaft	78
3.5	Removing and installing valve stem seals	82
4	Inlet and exhaust valves	85
4.1	Checking valve guides	85
4.2	Valve dimensions	85
17	- Lubrication	86
1	Sump, oil pump	86
1.1	Assembly overview - sump/oil pump	86
1.2	Removing and installing oil sump	88
1.3	Engine oil:	90
2	Oil filter, oil pressure switch	91
2.1	Assembly overview - oil filter housing with engine oil cooler	91
2.2	Checking oil pressure and oil pressure switch	92
2.3	Measuring oil consumption	93
19	- Cooling	94
1	Cooling system/coolant	94
1.1	Connection diagram - coolant hoses	94
1.2	Draining and adding coolant	95
1.3	Checking cooling system for leaks	102
1.4	Checking engine oil cooler for leaks	103
2	Coolant pump, regulation of cooling system	106
2.1	Assembly overview - coolant pump, thermostat	106
2.2	Removing and installing coolant pump	108
2.3	Removing and installing thermostat	109
3	Radiator, radiator fan	112
3.1	Assembly overview - radiator/radiator fan	112
3.2	Removing and installing radiator	114
3.3	Removing and installing fan mounting with fans	115
21	- Turbocharging/supercharging	118
1	Exhaust turbocharger	118
1.1	Assembly overview - turbocharger	118
1.2	Removing and installing turbocharger	120
2	Charge air system	124
2.1	Assembly overview - charge air system	124
2.2	Assembly overview - charge-air hose connections	125
2.3	Checking charge air system for leaks	125
23	- Mixture preparation - injection	128
1	Injectors	128
1.1	Assembly overview - injectors	128
1.2	Assembly overview - prewiring for unit injectors	129
1.3	Removing and installing O-rings for unit injector	129
1.4	Removing and installing unit injector	130
1.5	Removing and installing prewiring for unit injectors	133
2	Vacuum system	137
2.1	Connection diagram - vacuum system	137
3	Air filter	138
3.1	Assembly overview - air filter housing	138



4	Intake manifold	139
4.1	Assembly overview - intake manifold	139
4.2	Cleaning intake manifold flap connection	140
5	Engine (motor) control unit	141
5.1	Removing and installing engine control unit	141
6	High-pressure pump	143
6.1	Removing and installing tandem pump	143
6.2	Checking delivery pressure of tandem pump	145
6.3	Checking for internal leaks	147
26	- Exhaust system	149
1	Exhaust pipes and silencers	149
1.1	Assembly overview - silencers	149
1.2	Separating exhaust pipes from silencers	150
1.3	Installation position of clamp	151
1.4	Aligning exhaust system free of stress	151
2	Exhaust gas cleaning	152
2.1	Assembly overview - emission control	152
2.2	Removing and installing particulate filter	153
3	Exhaust gas temperature regulation	157
3.1	Assembly overview - exhaust gas temperature regulation	157
4	Exhaust gas recirculation	158
4.1	Assembly overview - exhaust gas recirculation	158
4.2	Assembly overview - exhaust gas recirculation cooler	159
28	- Glow plug system	160
1	Glow plug system	160
1.1	Handling ceramic glow plugs	160
1.2	Removing and installing ceramic glow plugs	160
1.3	Removing and installing engine speed sender G28	162