



## Contents

<b>01 - Self-diagnosis . . . . .</b>	<b>1</b>
1 <b>Self-diagnosis for radio generation 10.99 &gt; . . . . .</b>	<b>1</b>
1.1     Self-diagnosis for radio generation 10.99 > . . . . .	1
1.2     Self-diagnosis of radio systems . . . . .	1
1.3     Final control diagnosis . . . . .	7
1.4     Coding "BETA" radio . . . . .	9
1.5     Coding "GAMMA" radio . . . . .	9
1.6     Read measured value block . . . . .	11
<b>91 - Radio, telephone, navigation . . . . .</b>	<b>13</b>
1 <b>Radio systems . . . . .</b>	<b>13</b>
1.1     Radio systems . . . . .	13
1.2     Radio systems > 09.99 . . . . .	13
1.3     Radio system "alpha" >09.99 . . . . .	13
1.4     Radio system "beta" >09.99 . . . . .	14
1.5     Removing and installing radio > 09.99 . . . . .	15
1.6     Activating radio anti-theft coding > 09.99 . . . . .	16
1.7     Radio systems 10.99 > . . . . .	16
1.8     Radio system "ALPHA" 10.99 > . . . . .	17
1.9     Radio system "BETA" 10.99 > . . . . .	18
1.10     Radio system "GAMMA" 10.99 > . . . . .	20
1.11     Removing and installing radio 10.99 > . . . . .	23
1.12     Electronic anti-theft system for "ALPHA" radio 10.99 > . . . . .	24
1.13     Electronic anti-theft system for "BETA" and "GAMMA" radios 10.99 > . . . . .	25
2 <b>Aerial systems . . . . .</b>	<b>29</b>
2.1     Aerial systems . . . . .	29
2.2     Roof aerial -R11- for radio vehicles > 09.99 . . . . .	29
2.3     Radio roof aerial -R11- for vehicles 10.99 > . . . . .	31
3 <b>Loudspeaker system . . . . .</b>	<b>32</b>
3.1     Loudspeaker system . . . . .	32
3.2     Removing and installing loudspeakers > 09.99 . . . . .	32
3.3     Removing and installing loudspeakers 10.99 > . . . . .	33
4 <b>Suppression measures . . . . .</b>	<b>35</b>
4.1     Suppression measures . . . . .	35