



Contents

50 - Body front	1
1 Body - front	1
1.1 Body - front	1
1.2 Removing and installing lock carrier with attachments	1
1.3 Removing and installing front wing	3
1.4 Removing sealing piece	5
55 - Bonnet, Flaps	6
1 Bonnet	6
1.1 Bonnet	6
1.2 Removing and installing bonnet	6
1.3 Removing and installing bonnet lock cable	8
2 Rear boot lid/tailgate (Polo Classic, Polo Estate)	10
2.1 Rear boot lid/tailgate (Polo Classic, Polo Estate)	10
2.2 Tools	10
2.3 Removing gas strut	10
2.4 Removing gas strut (Polo Estate)	11
2.5 Releasing gas from strut	12
2.6 Adjusting tailgate (Estate)	12
2.7 Removing and installing tailgate/boot lid lock	15
2.8 Removing and installing lock cylinder	17
2.9 Maintaining common key locking	18
3 Tank flap unit	19
3.1 Tank flap unit	19
3.2 Assembly overview (Caddy)	19
3.3 Tools	20
3.4 Removing and installing tank flap unit (Caddy)	20
3.5 Dismantling and assembling tank flap unit (Caddy)	21
57 - Front doors/Door components/Central locking system	23
1 Front door	23
1.1 Front door	23
1.2 Front door - assembly overview	23
1.3 Tools	25
1.4 Removing and installing door	25
1.5 Adjusting door	26
1.6 Door handle - Assembly overview	28
1.7 Removing and installing door handle	30
1.8 Removing inner release handle	31
1.9 Maintaining common key locking	31
1.10 Door lock - Assembly overview	32
1.11 Removing and installing door lock	33
2 Central locking	35
2.1 Central locking	35
2.2 Central locking - Assembly overview (Caddy)	35
2.3 Central locking - Assembly overview (Polo Classic)	38
2.4 Central locking - Assembly overview (Polo Estate)	42
2.5 New coupling and junction piece for pipe connector	46
2.6 Removing and installing bi-pressure pump (Caddy)	46
2.7 Removing and installing bi-pressure pump (Polo Classic)	47
2.8 Removing and installing bi-pressure pump (Polo Estate)	48
2.9 Removing and installing tank flap positioning element (Polo Classic)	48
2.10 Removing and installing tank flap positioning element (Polo Estate)	49
2.11 Removing and installing front door positioning element	50



2.12	Removing and installing rear door lock positioning element (Caddy)	52
2.13	Removing and installing boot lid/tailgate lock positioning element (Polo Classic, Polo Estate)	52
2.14	Removing and installing boot lid positioning element (Polo Classic)	54
2.15	Removing and installing tailgate positioning element (Polo Estate)	54
2.16	Activating individual door opening of central locking system	55
2.17	Functional check of central locking	55
2.18	Functional check of central locking with radio remote control	55
2.19	Synchronising keys with radio remote control > 09.99	56
2.20	Removing and installing batteries for the main key with radio wave remote control	57
58	- Rear doors/Door components	58
1	Rear door (Caddy)	58
1.1	Rear door (Caddy)	58
1.2	Servicing rear wing doors	58
1.3	Adjusting rear wing door locks	63
1.4	Servicing left door lock operating mechanism	64
1.5	Servicing right door lock operating mechanism	66
2	Rear door (Polo Classic, Polo Estate)	68
2.1	Rear door (Polo Classic, Polo Estate)	68
2.2	Rear door - Assembly overview	68
2.3	Removing and installing door	72
2.4	Adjusting door	72
2.5	Door handle - Assembly overview	73
2.6	Removing and installing door handle	74
2.7	Removing inner release handle	75
2.8	Servicing door lock with operating mechanism	76
2.9	Removing and installing door lock	78
60	- Sliding/tilting roof	79
1	Sliding/tilting roof with glass panel >09.99	79
1.1	Sliding/tilting roof with glass panel >09.99	79
1.2	Sliding/tilting roof with glass panel - Assembly overview	79
1.3	Removing sliding/tilting roof glass panel	83
1.4	Installing sliding/tilting roof glass panel	83
1.5	Sliding/tilting roof glass panel (height adjustment)	84
1.6	Adjusting panel seal	85
1.7	Checking and adjusting parallel running	85
1.8	Removing sliding headlining	87
1.9	Installing sliding headlining	87
1.10	Removing and installing carrier unit	88
1.11	Cleaning water drain hoses (Polo Classic)	90
1.12	Cleaning water drain hoses (Polo Estate)	91
1.13	Sliding/tilting sunroof with glass panel 10.99 >	92
1.14	Function	92
1.15	Sliding/tilting roof with glass panel - Assembly overview	93
1.16	Removing sliding/tilting sunroof glass panel	97
1.17	Installing sliding/tilting sunroof glass panel	97
1.18	Adjusting sliding/tilting roof glass panel (height adjustment)	98
1.19	Adjusting panel seal	99
1.20	Renewing panel seal	100
1.21	Removing wind deflector	101
1.22	Removing and installing sliding headlining	101
1.23	Removing sliding/tilting sunroof preselector switch	102
1.24	Removing drive for sliding/tilting sunroof	103
1.25	Adjusting drive for sliding/tilting sunroof ("0" position)	103
1.26	Checking parallel running	103



1.27	Adjusting parallel running	104
1.28	Removing coulisse guide	105
1.29	Removing and installing carrier unit	106
1.30	Removing guide and cable	108
1.31	Cleaning water drain hoses (Polo Classic)	110
1.32	Cleaning water drain hoses (Polo Estate)	111
63	- Bumpers	112
1	Front bumper	112
1.1	Front bumper	112
1.2	Assembly overview	112
2	Rear bumper	115
2.1	Rear bumper	115
2.2	Assembly overview (Caddy)	115
2.3	Assembly overview (Polo Classic)	117
2.4	Assembly overview (Polo Estate)	120
64	- Glazing	123
1	Flush bonded windows	123
1.1	Flush bonded windows	123
1.2	Tools	123
1.3	Materials	124
1.4	Windscreen - Assembly overview	125
1.5	Removing windscreen	126
1.6	Installing windscreen	127
1.7	Side window (Polo Classic) - Assembly overview	128
1.8	Removing undamaged side window (Polo Classic)	128
1.9	Removing broken side window (Polo Classic)	129
1.10	Installing side window (Polo Classic)	129
1.11	Side window (Polo Estate) - Assembly overview	130
1.12	Removing undamaged side window (Polo Estate)	130
1.13	Removing broken side window (Polo Estate)	132
1.14	Installing side window (Polo Estate)	132
1.15	Rear window (Polo Classic) - Assembly overview	133
1.16	Removing undamaged rear window (Polo Classic)	134
1.17	Removing broken rear window (Polo Classic)	135
1.18	Installing rear window (Polo Classic)	135
1.19	Rear window (Polo Estate) - Assembly overview	136
1.20	Removing undamaged rear window (Polo Estate)	136
1.21	Removing broken rear window (Polo Estate)	138
1.22	Installing rear window (Polo Estate)	138
1.23	Preparing old undamaged window for glazing	139
1.24	Preparing new window for glazing	140
1.25	Preparing new window for glazing (Polo Estate)	141
1.26	Preparing body flange for glazing	142
1.27	Installation instructions	143
1.28	Curing time	143
1.29	Touching up paint damage	144
1.30	Cleaning off surplus adhesive sealing material	144
2	Windows secured by threaded fasteners	145
2.1	Windows secured by threaded fasteners	145
2.2	Removing and installing side window (Caddy)	145
3	Door windows	147
3.1	Door windows	147
3.2	Front door window - Assembly overview	147
3.3	Removing front door window	148
3.4	Adjusting front door window	148



3.5	Removing and installing front window lifter	149
3.6	Rear door window - Assembly overview	150
3.7	Removing and installing rear door window (Polo Classic)	152
3.8	Removing and installing rear door window (Polo Estate)	153
3.9	Removing rear window lifters	155
66	- Exterior equipment	156
1	Roof moulding	156
1.1	Roof moulding	156
1.2	Removing and installing roof moulding (Caddy)	156
1.3	Removing and installing roof moulding (Polo Classic, Polo Estate)	160
2	Roof railing	162
2.1	Roof railing	162
2.2	Removing and installing roof railing	162
3	Trim	165
3.1	Trim	165
3.2	Removing and installing radiator grille with trim frame	165
3.3	Removing and installing plenum chamber cover	167
3.4	Removing and installing underbody cover (Polo Classic)	169
4	Wheel housing liner	170
4.1	Wheel housing liner	170
4.2	Removing and installing front wheel housing liner	170
4.3	Removing and installing rear wheel housing liner (Polo Classic, Polo Estate)	172
5	Protective strips	173
5.1	Protective strips	173
5.2	Renewing side protective strips (Caddy)	173
5.3	Renewing side protective strips (Polo Classic, Polo Estate)	176
5.4	Renewing roof protective strips (Polo Estate)	179
6	Rear view mirror	182
6.1	Rear view mirror	182
6.2	Tools	182
6.3	Exterior mirror (Caddy)	183
6.4	Exterior mirror (Polo Classic, Polo Estate)	185
6.5	Removing mirror housing (Polo Classic, Polo Estate) 10.99 >	192