



Contents

| | |
|---|------------|
| 00 - Technical data | 1 |
| 1 Gearbox identification | 1 |
| 1.1 Gearbox identification | 1 |
| 1.2 Code letters, assembly allocation, ratios, capacities | 2 |
| 2 Calculating overall ratio "i" | 5 |
| 2.1 Calculating overall ratio "i" | 5 |
| 3 Transmission layout | 6 |
| 3.1 Transmission layout | 6 |
| 4 General repair instructions | 8 |
| 4.1 General repair instructions | 8 |
| 30 - Clutch | 10 |
| 1 Servicing clutch control | 10 |
| 1.1 Servicing clutch control | 10 |
| 1.2 Assembly overview - Pedal cluster mechanical clutch control | 12 |
| 1.3 Removing and installing over-centre spring | 15 |
| 1.4 Removing and installing clutch pedal | 17 |
| 1.5 Assembly overview - Mechanics | 19 |
| 1.6 Checking function of clutch cable | 22 |
| 1.7 Removing and installing clutch cable | 24 |
| 1.8 Assembly overview - Pedal cluster for hydraulically operated clutch | 27 |
| 1.9 Removing and installing clutch pedal | 31 |
| 1.10 Assembly overview - Hydraulic system | 34 |
| 1.11 Removing and installing master cylinder | 38 |
| 1.12 Bleeding clutch system | 41 |
| 2 Servicing clutch | 42 |
| 2.1 Servicing clutch | 42 |
| 2.2 Removing and installing clutch | 45 |
| 34 - Controls, Housing | 48 |
| 1 Servicing gear selector mechanism | 48 |
| 1.1 Servicing gear selector mechanism | 48 |
| 1.2 Installation position of gear selector mechanism | 48 |
| 1.3 Assembly overview - Gearstick housing/gearstick | 50 |
| 1.4 Installing gear stick gaiter to gear stick knob | 57 |
| 1.5 Assembly overview - gear selector relay points at gearbox | 58 |
| 1.6 Removing and installing gearstick/selector rod | 63 |
| 1.7 Adjusting gear selector mechanism | 65 |
| 2 Servicing gearbox housing cover | 69 |
| 2.1 Servicing gearbox housing cover | 69 |
| 3 Removing and installing gearbox | 75 |
| 3.1 Removing and installing gearbox | 75 |
| 4 Dismantling and assembling gearbox | 92 |
| 4.1 Dismantling and assembling gearbox | 92 |
| 4.2 Overview | 92 |
| 4.3 Assembly overview | 94 |
| 4.4 Removing and installing gearbox housing cover and 5th gear | 95 |
| 4.5 Removing and installing gearbox housing and selector mechanism | 98 |
| 4.6 Removing and installing input shaft, output shaft (pinion shaft), differential and selector forks | 101 |
| 4.7 Dismantling and assembling sequence | 107 |
| 5 Servicing gearbox housing and selector shaft | 127 |
| 5.1 Servicing gearbox housing and selector shaft | 127 |



| | | |
|---|--|------------|
| 6 | Checking gearbox oil | 133 |
| 6.1 | Checking gearbox oil | 133 |
| 7 | Servicing clutch housing | 134 |
| 7.1 | Servicing clutch housing | 134 |
| 35 - Gears, Shafts | | 143 |
| 1 | Dismantling and assembling input shaft | 143 |
| 1.1 | Dismantling and assembling input shaft | 143 |
| 2 | Dismantling and assembling output shaft | 156 |
| 2.1 | Dismantling and assembling output shaft | 156 |
| 2.2 | Allocating output shafts | 169 |
| 3 | Adjusting output shaft | 170 |
| 3.1 | Adjusting output shaft | 170 |
| 39 - Final drive, Differential | | 174 |
| 1 | Removing and installing drive flange oil seal | 174 |
| 1.1 | Removing and installing drive flange oil seal | 174 |
| 2 | Dismantling and assembling differential | 177 |
| 2.1 | Dismantling and assembling differential | 177 |
| 3 | Adjusting differential | 190 |
| 3.1 | Adjusting differential | 190 |
| 4 | Adjustment overview | 193 |
| 4.1 | Adjustment overview | 193 |