



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
1.1 Gearbox identification .....	1
1.2 Code letters, gearbox allocation, ratios, capacities .....	2
<b>2 Transmission layout</b> .....	<b>10</b>
2.1 Transmission layout .....	10
<b>3 Calculating overall ratio "i"</b> .....	<b>12</b>
3.1 Calculating overall ratio "i" .....	12
<b>4 General repair instructions</b> .....	<b>12</b>
4.1 General repair instructions .....	12
<b>30 - Clutch</b> .....	<b>15</b>
<b>1 Servicing clutch control</b> .....	<b>15</b>
1.1 Servicing clutch control .....	15
1.2 Assembly overview .....	15
1.3 Checking function of clutch cable (automatic adjustment) .....	19
1.4 Removing and installing clutch cable (automatic adjustment) .....	20
1.5 Removing and installing clutch cable (no automatic adjustment) .....	27
1.6 Removing and installing clutch pedal .....	29
<b>2 Servicing clutch release mechanism</b> .....	<b>31</b>
2.1 Servicing clutch release mechanism .....	31
<b>3 Servicing clutch</b> .....	<b>36</b>
3.1 Servicing clutch .....	36
<b>34 - Controls, Housing</b> .....	<b>40</b>
<b>1 Servicing gear selector mechanism</b> .....	<b>40</b>
1.1 Servicing gear selector mechanism .....	40
1.2 Assembly overview .....	40
1.3 Installing gear stick gaiter to gear stick knob .....	46
1.4 Removing and installing selector mechanism complete .....	47
1.5 Adjusting gear selector mechanism .....	49
<b>2 Removing and installing gearbox</b> .....	<b>52</b>
2.1 Removing and installing gearbox .....	52
<b>3 Checking gearbox oil</b> .....	<b>63</b>
3.1 Checking gearbox oil .....	63
<b>4 Dismantling and assembling gearbox</b> .....	<b>64</b>
4.1 Dismantling and assembling gearbox .....	64
4.2 Dismantling and assembling sequence .....	70
<b>5 Servicing clutch housing</b> .....	<b>84</b>
5.1 Servicing clutch housing .....	84
<b>6 Adjusting selector finger and selector sleeve</b> .....	<b>92</b>
6.1 Adjusting selector finger and selector sleeve .....	92
<b>35 - Gears, Shafts</b> .....	<b>95</b>
<b>1 Dismantling and assembling input shaft</b> .....	<b>95</b>
1.1 Dismantling and assembling input shaft .....	95
<b>2 Adjusting input shaft</b> .....	<b>104</b>
2.1 Adjusting input shaft .....	104
<b>3 Dismantling and assembling output shaft</b> .....	<b>107</b>
3.1 Dismantling and assembling output shaft .....	107
<b>4 Adjusting output shaft</b> .....	<b>122</b>



4.1	Adjusting output shaft . . . . .	122
<b>39</b>	<b>- Final drive, Differential rear . . . . .</b>	<b>125</b>
<b>1</b>	<b>Renewing selector shaft seal with gearbox in situ . . . . .</b>	<b>125</b>
1.1	Renewing selector shaft seal with gearbox in situ . . . . .	125
<b>2</b>	<b>Removing and installing oil seals for flanged shafts . . . . .</b>	<b>126</b>
2.1	Removing and installing oil seals for flanged shafts . . . . .	126
2.2	Renewing oil seals for flanged shafts with gearbox installed . . . . .	127
<b>3</b>	<b>Dismantling and assembling differential . . . . .</b>	<b>129</b>
3.1	Dismantling and assembling differential . . . . .	129
3.2	Removing and installing final drive gear wheel . . . . .	136
<b>4</b>	<b>Adjustment overview . . . . .</b>	<b>139</b>
4.1	Adjustment overview . . . . .	139
<b>5</b>	<b>Adjusting differential . . . . .</b>	<b>139</b>
5.1	Adjusting differential . . . . .	139