



Contents

01 - Self-diagnosis, Electrical check	1
1 Self-diagnosis function	1
1.1 Self-diagnosis function	1
1.2 Self-diagnosis - Guide for automatic gearbox	4
2 Performing self-diagnosis	5
2.1 Performing self-diagnosis	5
3 Fault table	7
3.1 Fault table	7
4 Erasing fault memory	14
4.1 Erasing fault memory	14
5 Initiating basic setting	15
5.1 Initiating basic setting	15
6 Read measured value block	15
6.1 Read measured value block	15
6.2 Test table	17
7 End output	28
7.1 End output	28
8 Gearbox: Electrical check	28
8.1 Gearbox: Electrical check	28
8.2 Test table	31
9 Definitions	37
9.1 Definitions	37