



Contents

01 - Self-diagnosis	1
1 Self-diagnosis	1
1.1 Self-diagnosis	1
1.2 Features of self-diagnosis	1
1.3 Technical data of self-diagnosis	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine control unit	2
1.5 Connecting Vehicle Diagnosis, Testing and Information system VAS 5051 and selecting engine electronics control unit	4
1.6 Interrogating and erasing fault memory	6
1.7 Fault table	8
2 Final control diagnosis	12
2.1 Final control diagnosis	12
2.2 Performing final control diagnosis	12
3 Measured value blocks	15
3.1 Measured value blocks	15
3.2 Read measured value block and basic settings	15
3.3 Display group overview	16
24 - Mixture preparation, Injection	19
1 Servicing injection system	19
1.1 Servicing injection system	19
1.2 Fitting locations overview	19
1.3 General notes on injection	21
1.4 Removing and installing parts of the injection system	23
1.5 Dismantling and assembling fuel rail with injectors	29
1.6 Dismantling and assembling intake manifold	30
1.7 Dismantling and assembling air cleaner	32
1.8 Safety precautions	35
1.9 Rules for cleanliness	35
1.10 Technical data	35
2 Check components and functions	36
2.1 Check components and functions	36
2.2 Checking Lambda probe and Lambda control	36
2.3 Checking Lambda probe heating	38
2.4 Checking engine operating mode	39
2.5 Checking throttle valve control part	41
2.6 Checking intake manifold pressure sender	47
2.7 Checking coolant temperature sender	49
2.8 Checking intake air temperature sender	52
2.9 Checking injectors	55
2.10 Checking fuel pressure regulator and holding pressure	57
2.11 Checking intake air system for leaks (unmetered air)	60
2.12 Checking intake air preheating	60
2.13 Wire routing engine wiring loom	62
3 Replacing and matching engine control unit	63
3.1 Replacing and matching engine control unit	63
3.2 Replacing engine control unit	63
3.3 Performing basic setting	64
3.4 Matching engine control unit to electronic immobilizer	65
3.5 Checking control unit voltage supply	66
4 Checking additional signals	67
4.1 Checking additional signals	67
4.2 Testing speed signal	67



4.3	Checking air conditioner and air conditioner compressor signals	69
28	- Ignition system	71
1	 Servicing ignition system	71
1.1	Servicing ignition system	71
1.2	General notes on ignition system	71
1.3	Removing and installing parts of the ignition system	72
1.4	Dismantling and assembling distributor	75
1.5	Safety precautions	76
1.6	Adjustment data, Spark plugs	76
1.7	Checking and adjusting ignition timing	76
1.8	Checking Hall sender	78
1.9	Checking ignition transformer and output stage	79
1.10	Checking knock sensor	81