



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	4
1.3 Securing engine to assembly stand	6
1.4 Notes on installing	6
1.5 Tightening torques	8
1.6 Assembly mounting	8
1.7 Replacing engine carrier rubber mounting	10
1.8 Additional information and removal instructions for vehicles with air conditioner	11
13 - Crankshaft group	13
1 Dismantling and assembling engine	13
1.1 Dismantling and assembling engine	13
1.2 Removing and installing ribbed belt	21
1.3 Checking valve timing	23
1.4 Removing and installing toothed belt	24
1.5 Checking semi-automatic toothed belt tensioning roller	26
2 Removing and installing cylinder block, sealing flange and flywheel	27
2.1 Removing and installing cylinder block, sealing flange and flywheel	27
2.2 Aluminium cylinder block	28
2.3 Renewing crankshaft oil seal -belt pulley end	31
2.4 Renewing crankshaft sealing flange -flywheel end-	33
2.5 Crankshaft dimensions	42
3 Dismantling and assembling pistons and conrods	43
3.1 Dismantling and assembling pistons and conrods	43
3.2 Piston and cylinder dimensions	48
15 - Cylinder head, Valve gear	50
1 Removing and installing cylinder head	50
1.1 Removing and installing cylinder head	50
1.2 Removing and installing cylinder head	55
1.3 Checking compression pressures	59
2 Servicing valve gear	61
2.1 Servicing valve gear	61
2.2 Reworking valve seats	67
2.3 Replacing camshaft oil seal	70
2.4 Removing and installing cylinder head cover and camshaft	72
2.5 Checking valve guides	75
2.6 Renewing valve stem seals	76
17 - Lubrication	79
1 Removing and installing parts of the lubrication system	79
1.1 Removing and installing parts of the lubrication system	79
1.2 Removing and installing oil sump	85
1.3 Removing and installing oil pump	87
1.4 Checking oil pressure and oil pressure switch	90



19 - Cooling system	93
1 Removing and installing parts of cooling system	93
1.1 Removing and installing parts of cooling system	93
1.2 Parts of cooling system body side	94
1.3 Parts of cooling system engine side	97
1.4 Coolant hose connection diagram	102
1.5 Draining and filling cooling system	103
1.6 Removing and installing radiator	105
1.7 Removing and installing coolant pump	107
20 - Fuel supply system	109
1 Removing and installing parts of fuel supply system	109
1.1 Removing and installing parts of fuel supply system	109
1.2 Removing and installing fuel tank with its attachments, Polo Classic, Polo Estate	110
1.3 Removing and installing fuel tank with its attachments, Caddy	115
1.4 Safety precautions when working on the fuel supply system	120
1.5 Rules for cleanliness	120
1.6 Crash fuel shut-off	121
1.7 Removing and installing fuel delivery unit	121
1.8 Removing and installing fuel gauge sender	122
1.9 Removing and installing fuel tank	123
1.10 Checking fuel pump	125
2 Electronic power control (EPC)	131
2.1 Electronic power control (EPC)	131
2.2 Function of EPC system	131
2.3 Servicing parts of electronic power control (EPC)	132
2.4 Checking EPC warning lamp	135
2.5 Checking accelerator pedal position sender	138
2.6 Adjusting pedal position sender	142
3 Activated charcoal filter system	143
3.1 Activated charcoal filter system	143
3.2 Function	143
3.3 Servicing parts of the activated charcoal filter system	144
3.4 Checking activated charcoal filter solenoid valve 1	146
3.5 Checking fuel tank breather	148
26 - Exhaust system	151
1 Removing and installing parts of exhaust system	151
1.1 Removing and installing parts of exhaust system	151
1.2 Exhaust manifold, front exhaust pipe and catalyst with attachments	152
1.3 Silencer with mountings	156
1.4 Checking catalyst	162