



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Technical data .....	1
1.2 Engine number .....	1
1.3 Engine data .....	1
<b>10 - Removing and installing engine</b> .....	<b>3</b>
<b>1 Removing and installing engine</b> .....	<b>3</b>
1.1 Removing and installing engine .....	3
1.2 Notes on removing .....	4
1.3 Securing engine to assembly stand .....	6
1.4 Notes on installing .....	6
1.5 Tightening torques .....	7
1.6 Assembly mountings .....	8
1.7 Replacing engine carrier rubber mounting .....	9
1.8 Additional information and removal instructions for vehicles with air conditioner .....	10
<b>13 - Crankshaft group</b> .....	<b>12</b>
<b>1 Dismantling and assembling engine</b> .....	<b>12</b>
1.1 Dismantling and assembling engine .....	12
1.2 Removing and installing ribbed belt .....	21
1.3 Checking valve timing .....	22
1.4 Removing, installing and tensioning toothed belts .....	24
1.5 Checking semi-automatic toothed belt tensioning roller .....	30
<b>2 Removing and installing cylinder block, sealing flange and flywheel</b> .....	<b>33</b>
2.1 Removing and installing cylinder block, sealing flange and flywheel .....	33
2.2 Aluminium cylinder block .....	34
2.3 Renewing crankshaft oil seal -belt pulley end- .....	37
2.4 Renewing crankshaft sealing flange -flywheel end- .....	39
2.5 Crankshaft dimensions .....	48
<b>3 Dismantling and assembling pistons and conrods</b> .....	<b>49</b>
3.1 Dismantling and assembling pistons and conrods .....	49
3.2 Piston and cylinder dimensions .....	55
<b>15 - Cylinder head, Valve gear</b> .....	<b>56</b>
<b>1 Removing and installing cylinder head</b> .....	<b>56</b>
1.1 Removing and installing cylinder head .....	56
1.2 Removing and installing camshaft housing .....	60
1.3 Removing and installing cylinder head .....	63
1.4 Checking compression pressures .....	67
<b>2 Servicing valve gear</b> .....	<b>69</b>
2.1 Servicing valve gear .....	69
2.2 Reworking valve seats .....	77
2.3 Replacing camshaft oil seals .....	79
2.4 Checking valve guides .....	81
2.5 Renewing valve guides .....	81
2.6 Renewing valve stem seals .....	82
<b>17 - Lubrication</b> .....	<b>85</b>
<b>1 Removing and installing parts of the lubrication system</b> .....	<b>85</b>
1.1 Removing and installing parts of the lubrication system .....	85
1.2 Removing and installing oil sump .....	90
1.3 Removing and installing oil pump .....	92



1.4	Checking oil pressure and oil pressure switch . . . . .	95
<b>19</b>	<b>- Cooling system . . . . .</b>	<b>97</b>
<b>1</b>	<b>Removing and installing parts of cooling system . . . . .</b>	<b>97</b>
1.1	Removing and installing parts of cooling system . . . . .	97
1.2	Parts of cooling system body side . . . . .	98
1.3	Parts of cooling system engine side . . . . .	101
1.4	Coolant hose connection diagram . . . . .	106
1.5	Draining and filling cooling system . . . . .	107
1.6	Removing and installing radiator . . . . .	109
1.7	Removing and installing coolant pump . . . . .	111
<b>20</b>	<b>- Fuel supply system . . . . .</b>	<b>113</b>
<b>1</b>	<b>Removing and installing parts of fuel supply system . . . . .</b>	<b>113</b>
1.1	Removing and installing parts of fuel supply system . . . . .	113
1.2	Removing and installing fuel tank with its attachments, Polo Classic, Polo Estate . . . . .	114
1.3	Removing and installing fuel tank with its attachments, Caddy . . . . .	119
1.4	Safety precautions when working on the fuel supply system . . . . .	124
1.5	Rules for cleanliness . . . . .	124
1.6	Removing and installing fuel delivery unit . . . . .	125
1.7	Removing and installing fuel gauge sender . . . . .	126
1.8	Removing and installing fuel tank . . . . .	126
1.9	Crash fuel shut-off . . . . .	128
1.10	Checking fuel pump . . . . .	129
<b>2</b>	<b>Checking electronic power control (EPC) . . . . .</b>	<b>136</b>
2.1	Checking electronic power control (EPC) . . . . .	136
2.2	Function of EPC system . . . . .	138
2.3	Checking accelerator pedal position sender . . . . .	139
<b>3</b>	<b>Activated charcoal filter system . . . . .</b>	<b>142</b>
3.1	Activated charcoal filter system . . . . .	142
3.2	Function . . . . .	142
3.3	Servicing parts of the activated charcoal filter system . . . . .	143
3.4	Checking fuel tank breather . . . . .	145
<b>26</b>	<b>- Exhaust system . . . . .</b>	<b>147</b>
<b>1</b>	<b>Removing and installing parts of exhaust system . . . . .</b>	<b>147</b>
1.1	Removing and installing parts of exhaust system . . . . .	147
1.2	Exhaust manifold, front exhaust pipe and catalyst with attachments . . . . .	148
1.3	Silencer with mountings . . . . .	151
<b>2</b>	<b>Exhaust gas recirculation system . . . . .</b>	<b>153</b>
2.1	Exhaust gas recirculation system . . . . .	153
2.2	Servicing parts of exhaust gas recirculation system . . . . .	154
2.3	Checking potentiometer for exhaust gas recirculation (G212) . . . . .	156