



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	3
1.3 Notes on installing	5
1.4 Tightening torques	6
1.5 Assembly mountings	7
1.6 Renewing engine carrier rubber mounting	8
1.7 Additional information and removal instructions for vehicles with air conditioner	9
13 - Crankshaft group	10
1 Dismantling and assembling engine	10
1.1 Dismantling and assembling engine	10
1.2 Removing and installing ribbed belt	21
1.3 Removing and installing toothed belt	24
2 Removing and installing sealing flange and pressure plate/drive plate	29
2.1 Removing and installing sealing flange and pressure plate/drive plate	29
2.2 Removing and installing drive plate	32
2.3 Renewing crankshaft oil seal - pulley end -	34
3 Removing and installing crankshaft	36
3.1 Removing and installing crankshaft	36
3.2 Crankshaft dimensions	38
4 Dismantling and assembling pistons and conrods	39
4.1 Dismantling and assembling pistons and conrods	39
4.2 Piston and cylinder dimensions	45
15 - Cylinder head, Valve gear	46
1 Removing and installing cylinder head	46
1.1 Removing and installing cylinder head	46
1.2 Removing and installing cylinder head	53
1.3 Checking compressions	54
2 Servicing valve gear	55
2.1 Servicing valve gear	55
2.2 Reworking valve seats	65
2.3 Removing and installing camshaft oil seal	67
2.4 Removing and installing camshaft	68
2.5 Checking hydraulic bucket tappets	70
2.6 Checking valve guides	71
2.7 Renewing valve guides	71
2.8 Renewing valve stem seals	72
17 - Lubrication	74
1 Removing and installing parts of the lubrication system	74
1.1 Removing and installing parts of the lubrication system	74
1.2 Checking oil pressure and oil pressure switch	81
19 - Cooling system	83



1	Removing and installing parts of cooling system	83
1.1	Removing and installing parts of cooling system	83
1.2	Parts of cooling system body side	84
1.3	Parts of cooling system - engine side	87
1.4	Dismantling and assembling coolant pump	93
1.5	Draining and filling cooling system	95
1.6	Removing and installing radiator and radiator fan	97
20	- Fuel supply system	98
1	 Removing and installing parts of fuel supply system	98
1.1	Removing and installing parts of fuel supply system	98
1.2	Removing and installing fuel tank with its attachments	99
1.3	Safety precautions when working on the fuel supply system	109
1.4	Rules for cleanliness	110
1.5	Adjusting throttle cable	110
1.6	Removing and installing fuel delivery unit	111
1.7	Checking fuel pump	112
1.8	Removing and installing fuel tank	117
1.9	Removing and installing parts of the activated charcoal filter system	119
1.10	Checking fuel tank breather	122
26	- Exhaust system	125
1	 Removing and installing parts of exhaust system	125
1.1	Removing and installing parts of exhaust system	125