



## Contents

<b>01 - Self-diagnosis</b> . . . . .	<b>1</b>
<b>1 Self-diagnosis</b> . . . . .	<b>1</b>
1.1 Self-diagnosis . . . . .	1
1.2 Features of self-diagnosis . . . . .	1
1.3 Technical data of self-diagnosis . . . . .	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine control unit . . . . .	2
1.5 Connecting vehicle diagnosis, testing and information system VAS 5051 and selecting engine control unit . . . . .	4
1.6 Interrogating fault memory . . . . .	6
1.7 Erasing fault memory . . . . .	7
<b>2 Fault table</b> . . . . .	<b>9</b>
2.1 Fault table . . . . .	9
<b>3 Final control diagnosis</b> . . . . .	<b>24</b>
3.1 Final control diagnosis . . . . .	24
3.2 Performing final control diagnosis . . . . .	24
<b>4 Measured value blocks</b> . . . . .	<b>29</b>
4.1 Measured value blocks . . . . .	29
4.2 Safety precautions . . . . .	29
4.3 Reading measured value block . . . . .	29
4.4 Evaluating measured value blocks . . . . .	30
4.5 Display group 009 . . . . .	37
<b>23 - Mixture preparation, Injection</b> . . . . .	<b>47</b>
<b>1 Servicing Diesel direct injection system</b> . . . . .	<b>47</b>
1.1 Servicing Diesel direct injection system . . . . .	47
1.2 Safety precautions . . . . .	47
1.3 Rules for cleanliness . . . . .	48
1.4 Fitting locations overview . . . . .	48
1.5 Servicing injection pump . . . . .	60
1.6 Dismantling and assembling parts of intake manifold . . . . .	67
1.7 Removing and installing air intake connecting piece . . . . .	75
1.8 Removing and installing injection pump . . . . .	76
1.9 Dynamically checking and adjusting commencement of injection . . . . .	81
1.10 Removing and installing injectors . . . . .	84
1.11 Checking injectors . . . . .	86
1.12 Renewing injection timing device cover O-ring . . . . .	87
<b>2 Checking components and functions</b> . . . . .	<b>87</b>
2.1 Checking components and functions . . . . .	87
2.2 Checking Diesel direct injection system voltage supply . . . . .	87
2.3 Checking engine speed sender . . . . .	88
2.4 Checking intake manifold pressure sender and elevation sender . . . . .	90
2.5 Checking coolant temperature sender . . . . .	92
2.6 Checking intake manifold temperature sender . . . . .	95
2.7 Checking fuel temperature sender . . . . .	99
2.8 Checking modulating piston movement sender and quantity adjuster . . . . .	101
2.9 Checking needle lift sender . . . . .	105
2.10 Checking injection timing regulation range . . . . .	107
2.11 Checking air mass meter . . . . .	109
2.12 Checking intake manifold flap change-over . . . . .	112
2.13 Checking intake manifold flap change-over valve . . . . .	114
2.14 Checking intake manifold flap motor . . . . .	117
<b>3 Checking additional signals</b> . . . . .	<b>119</b>
3.1 Checking additional signals . . . . .	119



3.2	Checking speed signal . . . . .	119
3.3	Checking signals from brake light switch and brake pedal switch . . . . .	121
3.4	Checking signal from clutch pedal switch . . . . .	124
3.5	Checking signals from/to air conditioning system . . . . .	126
3.6	Checking engine speed signal . . . . .	129
<b>4</b>	<b>Replacing, coding and matching engine control unit . . . . .</b>	<b>130</b>
4.1	Replacing, coding and matching engine control unit . . . . .	130
4.2	Replacing engine control unit . . . . .	130
4.3	Coding engine control unit . . . . .	131
4.4	Matching engine control unit to electronic immobilizer . . . . .	132
<b>28</b>	<b>Glow plug system . . . . .</b>	<b>134</b>
<b>1</b>	<b>Checking glow plug system . . . . .</b>	<b>134</b>
1.1	Checking glow plug system . . . . .	134
1.2	Checking glow plugs . . . . .	135