



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Technical data .....	1
1.2 Engine number .....	1
1.3 Engine data .....	1
<b>10 - Removing and installing engine</b> .....	<b>3</b>
<b>1 Removing and installing engine</b> .....	<b>3</b>
1.1 Removing and installing engine .....	3
1.2 Notes on removing .....	4
1.3 Securing engine to assembly stand .....	7
1.4 Notes on installing .....	8
1.5 Tightening torques .....	10
1.6 Assembly mountings .....	10
1.7 Renewing bonded rubber bushes on subframe .....	12
1.8 Additional information and removal instructions for vehicles with air conditioner .....	13
<b>13 - Crankshaft group</b> .....	<b>15</b>
<b>1 Dismantling and assembling engine</b> .....	<b>15</b>
1.1 Dismantling and assembling engine .....	15
1.2 Removing and installing ribbed belt .....	25
<b>2 Removing and installing sealing flange and pressure plate/flywheel/drive plate</b> .....	<b>27</b>
2.1 Removing and installing sealing flange and pressure plate/flywheel/drive plate .....	27
2.2 Renewing crankshaft oil seal -pulley end .....	32
2.3 Removing and installing front sealing flange .....	35
<b>3 Removing and installing crankshaft</b> .....	<b>38</b>
3.1 Removing and installing crankshaft .....	38
3.2 Crankshaft dimensions .....	41
<b>4 Dismantling and assembling pistons and conrods</b> .....	<b>42</b>
4.1 Dismantling and assembling pistons and conrods .....	42
4.2 Checking piston projection at TDC .....	48
4.3 Piston and cylinder dimensions .....	49
<b>15 - Cylinder head, Valve gear</b> .....	<b>50</b>
<b>1 Removing and installing cylinder head</b> .....	<b>50</b>
1.1 Removing and installing cylinder head .....	50
1.2 Dismantling and assembling intake manifold .....	55
1.3 Removing, installing and tensioning toothed belt .....	60
1.4 Checking semi-automatic toothed belt tensioning roller .....	66
1.5 Removing and installing cylinder head .....	68
1.6 Checking compression pressures .....	70
<b>2 Servicing valve gear</b> .....	<b>72</b>
2.1 Servicing valve gear .....	72
2.2 Reworking valve seats .....	79
2.3 Checking valve guides .....	80
2.4 Renewing valve guides .....	81
2.5 Renewing valve stem seals .....	82
2.6 Removing and installing camshaft .....	85
2.7 Checking hydraulic bucket tappets .....	89
<b>17 - Lubrication</b> .....	<b>91</b>
<b>1 Removing and installing parts of the lubrication system</b> .....	<b>91</b>
1.1 Removing and installing parts of the lubrication system .....	91



1.2	Removing and installing sump . . . . .	102
1.3	Checking oil pressure and oil pressure switch . . . . .	105
<b>19</b>	<b>- Cooling system . . . . .</b>	<b>107</b>
<b>1</b>	<b>Removing and installing parts of cooling system . . . . .</b>	<b>107</b>
1.1	Removing and installing parts of cooling system . . . . .	107
1.2	Parts of cooling system body side . . . . .	108
1.3	Parts of cooling system engine side . . . . .	112
1.4	Draining and filling cooling system . . . . .	115
1.5	Removing and installing radiator . . . . .	118
1.6	Removing and installing coolant pump . . . . .	120
1.7	Removing and installing thermostat . . . . .	122
<b>20</b>	<b>- Fuel supply system . . . . .</b>	<b>124</b>
<b>1</b>	<b>Removing and installing parts of fuel supply system . . . . .</b>	<b>124</b>
1.1	Removing and installing parts of fuel supply system . . . . .	124
1.2	Removing and installing fuel tank with its attachments, Polo Classic, Polo Estate . . . . .	125
1.3	Removing and installing fuel tank with its attachments, Caddy . . . . .	130
1.4	Servicing fuel filter . . . . .	136
1.5	Safety precautions when working on the fuel supply system . . . . .	138
1.6	Rules for cleanliness . . . . .	139
1.7	Removing and installing fuel tank . . . . .	139
1.8	Servicing accelerator mechanism . . . . .	142
1.9	Checking accelerator pedal position sender . . . . .	144
1.10	Adjusting pedal position sender . . . . .	147
<b>21</b>	<b>- Charging . . . . .</b>	<b>149</b>
<b>1</b>	<b>Charge air system with turbocharger . . . . .</b>	<b>149</b>
1.1	Charge air system with turbocharger . . . . .	149
1.2	Safety precautions . . . . .	149
1.3	Rules for cleanliness . . . . .	149
1.4	Removing and installing turbocharger with attachments . . . . .	149
1.5	Removing and installing parts of charge air cooling . . . . .	160
1.6	Turbocharger hose/pipe connections . . . . .	163
<b>2</b>	<b>Checking charge pressure system . . . . .</b>	<b>164</b>
2.1	Checking charge pressure system . . . . .	164
2.2	Checking pressure unit for charge pressure regulating valve . . . . .	164
2.3	Removing and installing pressure unit for charge pressure regulating valve . . . . .	165
2.4	Checking charge pressure control . . . . .	166
<b>26</b>	<b>- Exhaust system . . . . .</b>	<b>173</b>
<b>1</b>	<b>Removing and installing parts of exhaust system . . . . .</b>	<b>173</b>
1.1	Removing and installing parts of exhaust system . . . . .	173
<b>2</b>	<b>Exhaust gas recirculation system: Engine codes AGR, ALH, ASV . . . . .</b>	<b>177</b>
2.1	Exhaust gas recirculation system: Engine codes AGR, ALH, ASV . . . . .	177
2.2	Removing and installing parts of exhaust gas recirculation system . . . . .	178
2.3	Vacuum hose connection diagram . . . . .	180
2.4	Checking exhaust gas recirculation valve (mechanical) . . . . .	180
2.5	Checking exhaust gas recirculation . . . . .	182
2.6	Checking EGR valve . . . . .	184
<b>3</b>	<b>Exhaust gas recirculation system: Engine codes AGP, AQM, AYQ . . . . .</b>	<b>186</b>
3.1	Exhaust gas recirculation system: Engine codes AGP, AQM, AYQ . . . . .	186
3.2	Removing and installing parts of exhaust gas recirculation system . . . . .	187
3.3	Vacuum hose connection diagram . . . . .	188
3.4	Checking exhaust gas recirculation valve (mechanical) . . . . .	189
3.5	Checking EGR valve . . . . .	190