



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	3
1.3 Notes on installing	5
1.4 Tightening torques	7
1.5 Assembly mountings	7
1.6 Renewing engine carrier rubber mounting	8
1.7 Additional information and removal instructions for vehicles with air conditioner	9
13 - Crankshaft group	11
1 Dismantling and assembling engine	11
1.1 Dismantling and assembling engine	11
1.2 Removing and installing ribbed belt	26
1.3 Removing and installing toothed belt	29
1.4 Checking semi-automatic toothed belt tensioning roller	35
1.5 Removing single part injection pump sprocket	36
2 Removing and installing sealing flange and pressure plate/flywheel/drive plate	37
2.1 Removing and installing sealing flange and pressure plate/flywheel/drive plate	37
2.2 Renewing crankshaft oil seal - pulley end -	40
3 Removing and installing crankshaft	42
3.1 Removing and installing crankshaft	42
3.2 Crankshaft dimensions	45
4 Dismantling and assembling pistons and conrods	46
4.1 Dismantling and assembling pistons and conrods	46
4.2 Checking piston projection at TDC	53
4.3 Piston and cylinder dimensions	54
15 - Cylinder head, Valve gear	55
1 Removing and installing cylinder head	55
1.1 Removing and installing cylinder head	55
1.2 Removing and installing cylinder head	60
1.3 Checking compressions	62
2 Servicing valve gear	65
2.1 Servicing valve gear	65
2.2 Reworking valve seats	71
2.3 Checking valve guides	73
2.4 Renewing valve guides	74
2.5 Renewing valve stem seals	74
2.6 Removing and installing camshaft	75
2.7 Checking hydraulic bucket tappets	77
2.8 Replacing swirl chambers	77
17 - Lubrication	79
1 Removing and installing parts of the lubrication system	79
1.1 Removing and installing parts of the lubrication system	79
1.2 Checking oil pressure and oil pressure switch	89



1.3	Removing and installing oil sump cap	90
19	- Cooling system	92
1	Removing and installing parts of cooling system	92
1.1	Removing and installing parts of cooling system	92
1.2	Parts of cooling system body side	93
1.3	Parts of cooling system engine side	97
1.4	Dismantling and assembling coolant pump	100
1.5	Draining and filling cooling system	101
1.6	Removing and installing radiator and radiator fan	103
20	- Fuel supply system	105
1	Removing and installing parts of fuel supply system	105
1.1	Removing and installing parts of fuel supply system	105
1.2	Removing and installing fuel tank with its attachments, Polo Classic, Polo Estate	106
1.3	Removing and installing fuel tank with its attachments, Caddy	110
1.4	Servicing fuel filter	115
1.5	Safety precautions when working on the fuel supply system	117
1.6	Rules for cleanliness	117
1.7	Removing and installing fuel tank	117
1.8	Servicing accelerator mechanism	119
1.9	Checking accelerator position sender	124
1.10	Adjusting pedal position sender	127
21	- Charging	129
1	Charge air system with turbocharger	129
1.1	Charge air system with turbocharger	129
1.2	Safety precautions	129
1.3	Rules for cleanliness	129
1.4	Removing and installing turbocharger with attachments	129
1.5	Removing and installing parts of charge air cooling system	138
1.6	Exhaust gas turbocharger hose/pipe connections	140
1.7	Removing and installing turbocharger	142
2	Checking charge pressure system	146
2.1	Checking charge pressure system	146
2.2	Checking turbocharger	146
2.3	Checking pressure unit for charge pressure regulating valve	148
2.4	Removing and installing pressure unit for charge pressure regulating valve	148
2.5	Checking charge pressure control	149
26	- Exhaust system	156
1	Removing and installing parts of exhaust system	156
1.1	Removing and installing parts of exhaust system	156
1.2	Front exhaust pipe and catalyst with its attachments	157
1.3	Exhaust manifold, front exhaust pipe and catalyst with its attachments	160
1.4	Silencer with mountings Caddy	162
1.5	Silencer with mountings Polo Classic, Polo Estate	165
2	Exhaust gas recirculation system, engine codes 1Y, AEY, AHB, AKW	167
2.1	Exhaust gas recirculation system, engine codes 1Y, AEY, AHB, AKW	167
2.2	Removing and installing parts of exhaust gas recirculation system	168
2.3	Checking exhaust gas recirculation valve	169
2.4	Checking exhaust gas recirculation	169
2.5	Checking exhaust gas recirculation valve (N18)	173
3	Exhaust gas recirculation system, engine codes AFN, AHU, ALE	174
3.1	Exhaust gas recirculation system, engine codes AFN, AHU, ALE	174
3.2	Removing and installing parts of exhaust gas recirculation system	175
3.3	Vacuum hose connection diagram	178



3.4	Checking exhaust gas recirculation valve (mechanical)	180
3.5	Checking exhaust gas recirculation	181