



## Contents

<b>1</b>	<b>Engine list</b>	<b>1</b>
<b>2</b>	<b>Service work</b>	<b>6</b>
2.1	Information about flexible or fixed service	6
2.2	Service tables	8
2.3	Scopes of service	9
<b>3</b>	<b>General information</b>	<b>21</b>
3.1	Vehicle identification number (chassis number)	21
3.2	Vehicle data sticker	22
3.3	Severe operating conditions	23
3.4	Engine code and engine number	24
3.5	Stickers	24
3.6	Entries in the Digital Service Schedule	24
3.7	Identification plate	25
<b>4</b>	<b>Descriptions of work:</b>	<b>26</b>
4.1	Raising vehicle with lifting platform and trolley jack	28
4.2	Swivel joints, bonded rubber bushes and coupling rod bearings: visual check	29
4.3	Reading ash mass (saturation level) of diesel particulate filter	33
4.4	Battery: checking battery terminal clamps for secure seating	34
4.5	Checking battery	37
4.6	Charge battery (establish backup power supply)	38
4.7	Airbag system: Checking	38
4.8	Checking tyres: condition, wear pattern, tyre pressure, tread depth	39
4.9	Brake system and shock absorbers: inspecting for leaks and damage	47
4.10	Thickness of brake pads/linings and condition of brake discs, front and rear: checking thickness	49
4.11	Brake and clutch system: change brake fluid	55
4.12	Brake fluid level: checking	59
4.13	Air conditioning/Climatronic: Setting temperature to 22°C	60
4.14	6-speed dual clutch gearbox 02E: Changing DSG gear oil and filter	61
4.15	7-speed dual clutch gearbox 0AM	67
4.16	All-wheel drive coupling: Change oil	68
4.17	Electric windows: initialising (activation)	70
4.18	Reading event memory of all systems using vehicle diagnostic tester and rectifying any faults according to repair guidelines	71
4.19	Boots: inspecting	74
4.20	Bringing ERA GLONASS into operation	75
4.21	Dust and pollen filter (interior filter): cleaning housing and renewing filter element	76
4.22	Poly V-belt: checking condition	77
4.23	Poly V-belt: renewing	81
4.24	Diesel fuel filter: renewing	81
4.25	Fuel system: bleed	86
4.26	Coolant level: Checking	87
4.27	Air filter: cleaning housing and renewing filter element	91
4.28	Upper engine cover panel: Removing and installing	99
4.29	Removing and installing engine compartment cover -bottom- (noise insulation)	100
4.30	Engine oil level: checking	102
4.31	Engine oil: draining; renewing oil filter and filling engine oil	104
4.32	Engine oil: capacities and specifications	111
4.33	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	112
4.34	Checking breakdown set	113
4.35	Carrying out road test	114
4.36	Tyre Pressure Loss Indicator: calibrating	115
4.37	Wheel securing bolts: tightening to specified torque	116



4.38	Windscreen wash/wipe system and headlight washer system: Checking function and settings	118
4.39	Wiper blades: checking park position	122
4.40	Headlight setting: Checking and adjusting	124
4.41	Service interval display: resetting	131
4.42	Service interval display: Adapting	134
4.43	Track rod ends: checking clearance, firm seating and boots	135
4.44	Transport mode: deactivate using vehicle diagnostic tester	135
4.45	Transportation protective film: Removing	136
4.46	Doors: greasing door arrester	138
4.47	Left sliding door locking unit: Check function	138
4.48	Cleaning sliding window seals	139
4.49	Interior and exterior body: inspecting for corrosion with doors and flaps open	139
4.50	Underbody protection: visual check for damage	140
4.51	Clock and date: setting	140
4.52	Camshaft drive toothed belt: renew.	140
4.53	Spark plugs: renewing	141
4.54	AdBlue® (reducing agent)	144
<b>5</b>	<b>Natural gas system</b>	<b>157</b>
5.1	Natural gas system: inspect natural gas tank for corrosion and leakage.	157
5.2	Natural gas system: checking wax layer between natural gas fuel tank and fuel tank shut-off valve	161
5.3	Natural gas filler connection: checking condition, cleaning if necessary and checking seal	161
5.4	Natural gas tank: renew.	162
5.5	Warning sticker for natural gas vehicle	162
<b>6</b>	<b>Exhaust emissions test</b>	<b>163</b>
6.1	Exhaust emissions test for petrol engines	163
6.2	Exhaust emissions test for diesel engines	165