



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	2
<b>2 Identification</b>	<b>3</b>
2.1 Allocation of PR number - brakes	3
<b>3 Repair instructions</b>	<b>4</b>
3.1 Checking vacuum system	4
<b>4 Technical data</b>	<b>5</b>
4.1 Technical data for brakes	5
<b>5 Brake test</b>	<b>7</b>
5.1 General information	7
5.2 Checking vehicles with front-wheel drive	7
5.3 Checking vehicles with all-wheel drive	7
<b>45 - Anti-lock brake system</b>	<b>9</b>
<b>1 General information</b>	<b>9</b>
1.1 Repair instructions for repair work on ABS	9
<b>2 Overview of fitting locations</b>	<b>12</b>
2.1 Overview of fitting locations - ABS/ESP	12
2.2 Overview of fitting locations of brake servo in RHD vehicles	13
<b>3 Control unit and hydraulic unit</b>	<b>14</b>
3.1 Assembly overview - control unit and hydraulic unit	14
3.2 Removing and installing ABS control unit J104 and ABS hydraulic unit N55	16
3.3 Separating control unit from hydraulic unit	21
3.4 Fitting control unit to hydraulic unit	22
3.5 Connecting brake lines to hydraulic unit	23
<b>4 Sensors</b>	<b>24</b>
4.1 Assembly overview - speed sensor on front axle	24
4.2 Assembly overview - speed sensor on rear axle	25
4.3 Removing and installing brake light switch F , left-hand drive	26
4.4 Removing and installing brake light switch F , right-hand drive	26
4.5 Removing and installing speed sensors on front axle G45 / G47	27
4.6 Removing and installing speed sensors on rear axle G44 / G46	28
<b>46 - Brakes - mechanism</b>	<b>30</b>
<b>1 Front brakes</b>	<b>30</b>
1.1 Assembly overview - front brakes	30
1.2 Removing and installing brake pads/linings	32
1.3 Removing and installing brake caliper	34
1.4 Removing and installing brake carrier	36
1.5 Removing and installing brake disc	38
1.6 Removing and installing brake splash plate	40
<b>2 Rear brakes</b>	<b>43</b>
2.1 Assembly overview - rear brakes	43
2.2 Removing and installing brake pads/linings	45
2.3 Removing and installing brake caliper	47
2.4 Removing and installing brake carrier	50
2.5 Removing and installing brake disc	52
2.6 Removing and installing brake splash plate	54
<b>3 Parking brake</b>	<b>57</b>



3.1	Assembly overview - parking brake	57
3.2	Adjusting parking brake	57
3.3	Removing and installing rear brake cable	58
<b>4</b>	<b>Brake pedal</b>	<b>61</b>
4.1	Assembly overview - brake pedal, left-hand drive	61
4.2	Assembly overview - brake pedal, right-hand drive	63
4.3	Removing and installing brake light switch	63
4.4	Separating brake pedal from brake servo	63
4.5	Connecting brake pedal to brake servo	64
4.6	Removing and installing mounting bracket, left-hand drive	64
4.7	Removing and installing mounting bracket, RHD	66
<b>47</b>	<b>Brakes - hydraulics</b>	<b>69</b>
<b>1</b>	<b>Front brake caliper</b>	<b>69</b>
1.1	Assembly overview - front brake caliper	69
1.2	Removing and installing brake caliper piston	70
<b>2</b>	<b>Rear brake caliper</b>	<b>73</b>
2.1	Assembly overview - rear brake caliper	73
2.2	Removing and installing brake caliper piston	74
<b>3</b>	<b>Brake servo and brake master cylinder</b>	<b>77</b>
3.1	Assembly overview - brake servo/brake master cylinder, left-hand drive vehicles	77
3.2	Assembly overview - brake servo/brake master cylinder, right-hand drive vehicles	79
3.3	Removing and installing brake servo, LHD	80
3.4	Removing and installing brake servo, right-hand drive with diesel engine	82
3.5	Removing and installing brake servo, right-hand drive vehicles with petrol engine	84
3.6	Removing and installing brake master cylinder, left-hand drive	87
3.7	Removing and installing brake master cylinder, RHD	90
3.8	Removing and installing brake fluid reservoir, left-hand drive vehicles	96
3.9	Removing and installing brake fluid reservoir, right-hand drive vehicles	98
<b>4</b>	<b>Vacuum system</b>	<b>101</b>
4.1	Assembly overview - electric vacuum pump	101
4.2	Assembly overview - vacuum pump	101
4.3	Checking non-return valve	102
4.4	Removing and installing non-return valve	103
4.5	Removing and installing brake servo pressure sensor	103
4.6	Checking vacuum system	104
<b>5</b>	<b>Brake lines</b>	<b>108</b>
5.1	Repairing brake lines	108
<b>6</b>	<b>Hydraulic system</b>	<b>114</b>
6.1	General notes on brake fluid	114
6.2	Pre-bleeding hydraulic system	114
6.3	Bleeding hydraulic system following standard procedure	115
6.4	Subsequent bleeding of hydraulic system	116
6.5	Testing for leaks	117