



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when working on subframe	1
2 Repair instructions	2
2.1 Leaks at shock absorbers	2
2.2 Noises from shock absorbers	2
2.3 Checking shock absorbers when removed	3
2.4 Steering rack	3
2.5 Gaskets and seals	4
2.6 Nuts and bolts	4
2.7 Electrical components	4
2.8 Raising suspension to unladen position (vehicles with coil springs)	5
3 Evaluating accident vehicles	14
3.1 Check list for evaluating running gear on accident vehicles	14
4 Waste disposal	16
4.1 Releasing gas and draining front gas-filled shock absorbers	16
4.2 Releasing gas and draining rear gas-filled shock absorbers	16
40 - Front suspension	17
1 Front axle	17
1.1 Overview of fitting locations - front axle	17
2 Subframe	18
2.1 Assembly overview - subframe	18
2.2 Removing and installing subframe without steering rack	21
2.3 Removing and installing subframe with steering rack	28
2.4 Repairing subframe	39
2.5 Removing and installing anti-roll bar	54
2.6 Removing and installing coupling rod	61
2.7 Repairing thread in longitudinal member	62
2.8 Fixing position of subframe	63
2.9 Lowering subframe	67
3 Suspension strut, upper suspension link	73
3.1 Assembly overview - suspension strut, upper suspension link	73
3.2 Removing and installing suspension strut	74
3.3 Repairing suspension strut	79
4 Lower suspension link, swivel joint	82
4.1 Assembly overview - lower suspension link, swivel joint	82
4.2 Removing and installing lower suspension link	84
4.3 Checking swivel joint	94
4.4 Removing and installing swivel joint	95
4.5 Renewing bonded rubber bush for lower suspension link	98
4.6 Renewing mounting bracket with suspension link bush	105
5 Wheel bearing	108
5.1 Assembly overview - wheel bearing	108
5.2 Removing and installing wheel bearing housing	109
5.3 Removing and installing wheel bearing unit	114
6 Drive shaft	118
6.1 Overview - drive shaft	118
6.2 Assembly overview - drive shaft	119
6.3 Removing and installing drive shaft	124
6.4 Loosening and tightening threaded connections of drive shaft	131



6.5	Dismantling and assembling drive shaft	133
6.6	Checking outer constant velocity joint	147
6.7	Checking inner constant velocity joint	148
42	- Rear suspension	150
1	Rear axle	150
1.1	Overview - rear axle	150
1.2	Removing and installing rear axle shaft, all wheel drive	151
1.3	Rear axle tuning, all wheel drive	151
2	Axle beam	153
2.1	Assembly overview - axle beam	153
2.2	Removing and installing axle assembly	154
2.3	Renewing bonded rubber bush for axle beam	161
3	Anti-roll bar	164
3.1	Assembly overview - anti-roll bar	164
3.2	Removing and installing anti-roll bar	164
3.3	Removing and installing coupling rod	165
4	Suspension strut, shock absorber, spring	167
4.1	Assembly overview - suspension strut, shock absorber, spring	167
4.2	Removing and installing shock absorbers	168
4.3	Removing and installing spring	172
4.4	Renewing bonded rubber bush for spring	174
4.5	Removing and installing shackle	176
5	Wheel bearing assembly, trailing arm	177
5.1	Assembly overview - wheel bearing	177
5.2	Removing and installing wheel bearing unit	178
43	- Self-levelling suspension	184
1	Vehicle level sender	184
1.1	Assembly overview - front vehicle level senders	184
1.2	Assembly overview - rear vehicle level senders	185
1.3	Removing and installing front vehicle level senders G78 / G289	185
1.4	Removing and installing rear vehicle level senders G76 / G77	187
44	- Wheels, tyres, vehicle geometry	189
1	Wheels, tyres	189
1.1	Specified torques for wheel bolts	189
1.2	Pressing tyre off wheel rim	189
1.3	Removing tyre from wheel	190
1.4	Fitting tyres	190
1.5	Wheel change	191
1.6	Tyre sealant disposal	195
1.7	Models with breakdown set	195
2	Tyre Pressure Monitoring System	196
2.1	System description – Tyre Pressure Monitoring System	196
3	Wheel alignment	198
3.1	Notes for wheel alignment	198
3.2	Conditions for testing	198
3.3	Test preparations	199
3.4	Specifications for wheel alignment	201
3.5	Wheel alignment procedure	203
3.6	Necessity of wheel alignment	205
3.7	Adjusting camber at front wheels	206
3.8	Adjusting camber on rear axle	208
3.9	Adjusting toe at rear axle	208



3.10	Adjusting front axle toe	208
3.11	Vehicle data sticker	209
4	Adaptive cruise control	211
4.1	Calibrating adaptive cruise control	211
5	Front camera for assist systems	217
5.1	Calibrating front camera for driver assist systems	217
48 - Steering	223
1	Steering wheel	223
1.1	Assembly overview - steering wheel	223
1.2	Removing and installing steering wheel	223
2	Steering column	226
2.1	Assembly overview - steering column	226
2.2	Checking steering column for damage	228
2.3	Handling and transporting steering column	229
2.4	Removing and installing steering column	230
2.5	Removing and installing mounting bracket with strut	240
3	Steering rack	243
3.1	Assembly overview - steering rack	243
3.2	Removing and installing steering rack	245
3.3	Removing and installing bellows	256
3.4	Removing and installing track rod	259
3.5	Removing and installing track rod ball joint	262
3.6	Repairing steering rack	263
4	Sensors	266
4.1	Removing and installing steering angle sender G85	266