



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Operation and safety notes for gas discharge lamps	2
2 General information	4
3 Repair instructions	5
3.1 Contact corrosion	5
3.2 Routing and attachment of lines	5
4 Battery	6
4.1 Battery - general notes	6
4.2 Types of battery	6
27 - Starter, current supply, CCS	7
1 Battery	7
1.1 Assembly overview - battery	7
1.2 Checking battery	9
1.3 Charging battery	9
1.4 Disconnecting and connecting battery	10
1.5 Removing and installing battery	12
1.6 Removing and installing battery tray	15
1.7 Adapting battery monitor control unit J367	16
1.8 Removing and installing earth wire with battery monitor control unit J367	16
2 Alternator	17
2.1 Assembly overview - alternator	17
2.2 Checking alternator	27
2.3 Removing and installing alternator	28
2.4 Checking poly V-belt	45
2.5 Removing and installing poly V-belt pulley	46
2.6 Removing and installing voltage regulator	53
3 Starter motor	58
3.1 Assembly overview - starter	58
3.2 Checking starter	60
3.3 Removing and installing starter motor	61
4 Cruise control system (CCS)	80
5 Start/stop system	81
5.1 General description - start/stop system	81
5.2 Removing and installing voltage stabiliser	83
6 Adaptive cruise control	88
6.1 Overview of fitting locations - adaptive cruise control	88
6.2 Removing and installing automatic distance control unit	88
6.3 Removing and installing button for adaptive cruise control	89
6.4 Removing and installing trim for radar sensor	89
6.5 Calibrating adaptive cruise control	90
90 - Gauges, instruments	91
1 Dash panel insert	91
1.1 Assembly overview - dash panel insert	91
1.2 Removing and installing dash panel insert KX2	92
1.3 Removing and installing ambient temperature sensor	93
2 Clock	95



2.1	Removing and installing clock	95
3	Horn	96
3.1	Assembly overview - horn	96
3.2	Removing and installing treble horn H2 and bass horn H7	97
3.3	Removing and installing single tone horn	98
92 - Windscreen wash/wipe system	100	
1	windscreen wiper system	100
1.1	Assembly overview - windscreen wiper system	100
1.2	Moving wipers to service position	102
1.3	Removing and installing wiper blade	102
1.4	Removing and installing wiper arms	103
1.5	Adjusting wiper arms	104
1.6	Removing and installing wiper frame with linkage and wiper motor V	106
1.7	Renewing wiper motor V	107
1.8	Deactivating APP function of wiper motor	110
1.9	Removing and installing rain and light sensor G397	110
2	Windscreen washer system	113
2.1	Assembly overview - windscreen washer system	113
2.2	Removing and installing filler pipe for washer fluid reservoir	114
2.3	Removing and installing washer fluid reservoir	115
2.4	Removing and installing windscreen washer fluid level sender	118
2.5	Removing and installing windscreen washer pump	119
2.6	Removing and installing washer jets	120
2.7	Adjusting spray jets	121
3	Rear window wiper system	122
3.1	Assembly overview - rear window wiper system	122
3.2	Removing and installing wiper blade	123
3.3	Removing and installing wiper arm	124
3.4	Adjusting wiper arm	125
3.5	Removing and installing rear window wiper motor V12	127
4	Rear window washer system	130
4.1	Assembly overview - rear window washer system	130
4.2	Removing and installing washer fluid reservoir	132
4.3	Removing and installing rear window washer pump	133
4.4	Removing and installing spray jet	133
4.5	Adjusting spray jet	134
5	Headlight washer system	135
5.1	Assembly overview - headlight washer system	135
5.2	Removing and installing washer fluid reservoir	136
5.3	Removing and installing headlight washer system pump V11	137
5.4	Removing and installing washer jets	138
5.5	Adjusting spray jets	138
5.6	Removing and installing pop-up cylinder	138
5.7	Bleeding headlight washer system	139
6	Washer fluid lines	141
6.1	Washer fluid line hose couplings	141
6.2	Repairing washer fluid lines	141
94 - Lights, bulbs, switches - exterior	142	
1	Headlights	142
1.1	Assembly overview - headlight	142
1.2	Removing and installing headlight	147
1.3	Adjusting headlights	149
1.4	Adjusting headlight installation position	149



1.5	Removing and installing front turn signal bulb M5 / M7	151
1.6	Converting headlights from driving on right to driving on left	154
1.7	Converting headlights from driving on left to driving on right	158
1.8	Removing and installing headlight range control motor V48 / V49	161
1.9	Removing and installing headlight dipped beam bulb M29 / M31	162
1.10	Removing and installing headlight main beam bulb M30 / M32	164
1.11	Removing and installing gas discharge bulb L13 / L14	166
1.12	Removing and installing side light bulb M1 / M3	167
1.13	Removing and installing daytime running light bulb L174 / L175	170
1.14	Removing and installing bulbs for cornering light L148 / L149	172
1.15	Removing and installing gas discharge bulb control unit J343 / J344	172
1.16	Removing and installing control unit for daytime running light and side light J860 / J861	173
2	Fog lights	175
2.1	Assembly overview - fog lights	175
2.2	Removing and installing fog light	175
2.3	Removing and installing fog light bulb L22 / L23	176
2.4	Removing and installing static cornering light bulb	177
2.5	Adjusting fog lights	177
3	Turn signal repeater	178
3.1	Removing and installing turn signal repeater	178
3.2	Removing and installing turn signal repeater bulb M18/M19	179
4	Tail lights	181
4.1	Assembly overview - tail lights	181
4.2	Removing and installing bulb carrier	184
4.3	Removing and installing tail light cluster	185
4.4	Removing and installing tail light bulb M2 / M4	187
4.5	Removing and installing rear fog light bulb L46 / L47	189
4.6	Removing and installing brake and tail light bulb M21 / M22	191
4.7	Removing and installing reversing light bulb M16 / M17	193
4.8	Removing and installing turn signal bulb M6 / M8	195
5	High-level brake light	198
5.1	Removing and installing high-level brake light	198
5.2	Removing and installing high-level brake light bulb M25	200
6	Number plate light	201
6.1	Removing and installing number plate light X4 / X5	201
6.2	Removing and installing bulb for number plate light X4 / X5	202
7	Steering column switch module	203
7.1	Assembly overview - steering column switch module	203
7.2	Removing and installing steering column switch module	204
7.3	Removing and installing steering column electronics control unit J527	209
7.4	Removing and installing steering column combination switch	214
7.5	Removing and installing ignition/starter switch	216
7.6	Removing and installing lock cylinder	217
7.7	Removing and installing steering lock housing	219
7.8	Removing and installing ignition key withdrawal lock solenoid N376	220
8	Parking aid	221
8.1	Assembly overview – parking aid	221
8.2	Removing and installing parking aid control unit J446	222
8.3	Removing and installing front parking aid warning buzzer H22	223
8.4	Removing and installing rear parking aid warning buzzer H15	223
8.5	Adapting volume and frequency of rear parking aid warning buzzer H15	224
8.6	Removing and installing front parking aid senders	224
8.7	Removing and installing rear parking aid senders	224
9	Park assist steering	226



9.1	Assembly overview - park assist steering	226
9.2	Removing and installing control unit	227
9.3	Removing and installing front senders	227
9.4	Removing and installing rear senders	228
9.5	Removing and installing front warning buzzer	228
9.6	Removing and installing rear warning buzzer	229
10	Automatic headlight range control	230
10.1	Removing and installing headlight range control unit	230
11	Towing bracket	231
11.1	Assembly overview - towing bracket socket	231
11.2	Removing and installing trailer detector control unit J345	232
11.3	Removing and installing trailer socket U10	233
96 - Lights, bulbs, switches - interior	236	
1	Lights	236
1.1	Overview of fitting locations - lights in dash panel	236
1.2	Overview of fitting locations - lights in centre console	238
1.3	Overview of fitting locations - lights in luggage compartment	239
1.4	Overview of fitting locations - lights in roof trim	240
1.5	Removing and installing glove compartment light W6	240
1.6	Replacing bulb for glove compartment light W6	241
1.7	Removing and installing Central locking SAFELOCK function warning lamp K133	242
1.8	Removing and installing selector lever position display Y26	242
1.9	Removing and installing luggage compartment light W3	243
1.10	Removing and installing bulb for luggage compartment light W3	244
1.11	Removing and installing vanity mirror light W20 / W14	245
1.12	Removing and installing bulb for illuminated vanity mirror W20 / W14	245
1.13	Removing and installing front interior light/reading light	246
1.14	Removing and installing bulb for front interior light	247
1.15	Removing and installing bulb for front reading light	248
1.16	Removing and installing rear interior light/reading light	249
1.17	Removing and installing bulb for rear interior light/reading light	250
2	Controls	252
2.1	Overview of fitting locations - controls in dash panel	253
2.2	Overview of fitting locations - controls in front doors	254
2.3	Overview of fitting locations - controls in rear doors	255
2.4	Overview of fitting locations - controls in centre console	256
2.5	Overview of fitting locations - controls in luggage compartment	257
2.6	Overview of fitting locations - controls in roof trim	258
2.7	Removing and installing rotary light switch EX1	258
2.8	Removing and installing regulator for switch and instrument illumination E20	259
2.9	Removing and installing headlight range control regulator E102	260
2.10	Removing and installing Start/Stop operation button E693	260
2.11	Removing and installing TCS and ESP button E256	261
2.12	Removing and installing parking aid button E266	261
2.13	Removing and installing park assist steering button E581	261
2.14	Heated windscreen button E627	261
2.15	Removing and installing front passenger side airbag deactivated warning lamp K145	261
2.16	Removing and installing buttons in centre of dash panel	262
2.17	Removing and installing hazard warning light button E229	263
2.18	Removing and installing glove compartment light switch E26	264
2.19	Removing and installing mirror adjustment switch E43 / E168	265
2.20	Removing and installing operating unit for window regulator in driver door E512	266
2.21	Removing and installing window regulator switch in front passenger door E107	267
2.22	Removing and installing driver side interior locking button for central locking system E308	267



2.23	Removing and installing door contact switch F2 / F3	268
2.24	Removing and installing rear door contact switches F10 / F11	268
2.25	Removing and installing contact strip in sliding door, B-pillar F353 / F352	269
2.26	Removing and installing contact strip in sliding door F353 / F352	270
2.27	Removing and installing rear lid release switch E165	270
2.28	Removing and installing central locking switch in left wing door F213	271
2.29	Removing and installing rear lid contact switch	271
2.30	Removing and installing wing door contact switch	271
2.31	Removing and installing vanity mirror contact switch F147 / F148	271
2.32	Removing and installing front interior light/reading light	271
2.33	Removing and installing rear interior light/reading light	272
2.34	Removing and installing button for deactivating interior monitoring and vehicle inclination sensor E616	272
3	Anti-theft alarm	273
3.1	Assembly overview - interior monitor	273
3.2	Removing and installing alarm horn H12	274
3.3	Activating and deactivating anti-theft alarm	274
3.4	Removing and installing anti-theft alarm sensor G578	275
4	Immobiliser	278
4.1	General description - immobiliser	278
4.2	Removing and installing immobiliser control unit	278
4.3	Removing and installing immobiliser reader coil	278
5	Cigarette lighter, socket	279
5.1	Assembly overview - cigarette lighter, 12 V socket	279
5.2	Removing and installing cigarette lighter U1	279
5.3	Removing and installing socket illumination bulb L42	280
5.4	Removing and installing rear cigarette lighter illumination bulb L32	280
5.5	Removing and installing electric socket U	280
6	Front camera for assist systems	281
6.1	Assembly overview - front camera for driver assist systems R242	281
6.2	Removing and installing front camera for driver assist systems R242	282
6.3	Removing and installing windscreen heater for lane departure warning Z67	283
6.4	Calibrating front camera for driver assist systems R242	283
97 - Wiring	284	
1	Relay carriers, fuse holders, electronics boxes	284
1.1	Overview of fitting locations - relay carriers, fuse holders, E-boxes	284
1.2	Removing and installing electronics box (E-box)	285
1.3	Removing and installing coupling station electronics box	287
1.4	Removing and installing additional relay carrier of electronics box	288
1.5	Removing and installing relay and fuse holder behind dash panel on driver side	289
1.6	Removing and installing relay carrier behind dash panel on driver side	289
1.7	Removing and installing relay carrier on onboard supply control unit	289
1.8	Removing and installing fuse holder C SC behind dash panel on driver side	290
2	Select Control units	292
2.1	Overview of fitting locations - control units	292
2.2	Removing and installing onboard supply control unit J519	293
2.3	Removing and installing data bus diagnostic interface J533	294
2.4	Removing and installing special vehicle control unit J608	295
2.5	Coding special vehicle control unit	296
3	Connectors	297
3.1	Repairing electrical wiring harnesses and plug-in connections	297
3.2	Converting airbag and belt tensioner wire	297
4	Releasing and dismantling connector housings	301
5	Cleaning contact surfaces	302



6	Repairing aerial wires	303
7	Fibre optic cables	304
8	Vehicle diagnosis, testing and information systems	305