



Contents

00 - Technical data	1
1 Repair notes	1
1.1 General repair instructions	1
1.2 Routing and attachment of lines	1
1.3 Notes on repair of CAN bus wiring	1
1.4 Transmitting power and aerial fitting locations	1
91 - Radio, telephone, navigation	3
1 Infotainment system	3
1.1 Layout - infotainment system	3
1.2 Overview of fitting locations - Infotainment system	9
1.3 Pin assignments	9
2 Sound system	10
2.1 Components of sound system	10
2.2 Overview of fitting locations - sound system	10
2.3 Removing and installing front treble loudspeakers R20 / R22	14
2.4 Removing and installing rear bass loudspeakers R15 / R17	16
2.5 Removing and installing front bass loudspeakers R21 / R23	18
2.6 Pin assignments	20
3 Aerial systems	22
3.1 Components of aerial systems	22
3.2 Overview of fitting locations - aerial systems	23
3.3 Removing and installing aerial module	27
4 Radio	42
4.1 Components of radio system	42
4.2 Overview of fitting locations - radio	42
4.3 Assembly overview - radio	44
4.4 Removing and installing radio	44
4.5 Pin assignments	46
4.6 Removing and installing operating button on display unit for front information display and operating unit control unit J685	53
5 Telephone system	54
5.1 Components of telephone system	54
5.2 Mobile telephone preparation	54
5.3 Overview of fitting locations - telephone system	56
5.4 Removing and installing telephone microphone R38	57
5.5 Removing and installing coupling aerial for Bluetooth mobile phone R309	57
5.6 Removing and installing two-way signal amplifier for mobile telephone/data services J984	58
6 Navigation system	60
6.1 Components of navigation system	60
6.2 Overview of fitting locations - navigation system	60
6.3 Pin assignments	61
6.4 Removing and installing control unit for navigation system	61
7 Reversing camera	62
7.1 Components of reversing camera system	62
7.2 Overview of fitting locations - reversing camera system	64
7.3 Assembly overview - reversing camera	65
7.4 Removing and installing reversing camera R189	65
7.5 Calibrating reversing camera	68
8 Multifunction steering wheel	69
8.1 Components of multifunction steering wheel	69



8.2	Assembly overview - multifunction steering wheel	69
8.3	Removing and installing steering wheel multifunction buttons E441 / E440	70
8.4	Removing and installing Tiptronic switch in steering wheel E439 / E438	73
9	Connection for external multimedia devices	75
9.1	Connectors, connection for external multimedia devices	75
9.2	Removing and installing connection for external audio sources R199	76
9.3	Removing and installing USB hub R293	77
10	Car-Net	79
10.1	Components of Car-Net	79
10.2	Overview of fitting locations - Car-Net services	82
10.3	Removing and installing emergency call module control unit and communication unit J949	82
10.4	Removing and installing loudspeaker for emergency call module R335	86
10.5	Removing and installing emergency button E276	87
10.6	Commissioning ERA Glonass	87