



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	2
1.2 Safety precautions when using testers and measuring instruments during a road test	3
1.3 Safety measures when working with pyrotechnic components	3
1.4 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	5
1.5 Additional safety regulations for side airbag	5
1.6 Safety instructions for airbag	6
1.7 Additional safety instructions for curtain airbag	6
1.8 Deactivating the airbag	7
1.9 Safety regulations for crash sensors (pressure sensors) for front side airbags	7
1.10 Additional safety instructions for repair work on seat occupied recognition for front passenger airbag deactivation - country-specific	8
1.11 Measures for seat occupied recognition for front passenger airbag deactivation following an accident - country-specific	8
1.12 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	9
1.13 Checking airbag securing parts after an accident	10
1.14 Accident without airbag triggering	11
1.15 Seat belts	11
1.16 Checking seat belts	11
1.17 Check belt webbing	11
1.18 Checking inertia reel (locking mechanism)	12
1.19 Visually checking belt buckle	13
1.20 Check operation of belt buckle	13
1.21 Checking belt relays, and buckle tongues	13
1.22 Checking securing parts and anchorage points after an accident	13
1.23 Checking seat belt restraint function for holding additional child seats (not for driver's seat belt) - country-specific	14
1.24 Checking child seat anchors after an accident	14
2 Repair notes	15
2.1 General repair instructions	15
2.2 Contact corrosion	15
2.3 Routing and attachment of lines	15
68 - Interior equipment	17
1 Compartments/covers	17
1.1 Overview of fitting locations - storage compartments/covers	17
1.2 Assembly overview - driver side dash panel cover	19
1.3 Assembly overview - steering column trim	20
1.4 Assembly overview - glove compartment	21
1.5 Assembly overview - storage compartment in roof headliner	22
1.6 Removing and installing dash panel cover on driver side	22
1.7 Removing and installing dash panel insert trim	23
1.8 Removing and installing upper steering column trim	24
1.9 Removing and installing lower steering column trim	25
1.10 Removing and installing glove compartment opener	27
1.11 Removing and installing glove compartment	28
1.12 Removing and installing damper element for glove compartment lid	30
1.13 Removing and installing headliner storage compartment	31
1.14 Removing and installing footwell cover	33
1.15 Coat hook and strap	34
1.16 Removing and installing net pocket	37



1.17	Cover for automatic anti-dazzle interior mirror, with rain and light sensor G397 and front camera for driver assist systems R242	40
2	Equipment	41
2.1	Assembly overview - partition panel	41
2.2	Assembly overview - sun visors	43
2.3	Removing and installing partition panel	43
2.4	Removing and installing bracket for partition grille	46
2.5	Removing and installing sun visor	48
2.6	Removing and installing roof grab handle	50
3	Centre console	52
3.1	Assembly overview - centre console	52
3.2	Removing and installing rear centre console trim	56
3.3	Removing and installing centre console front storage compartment	57
3.4	Removing and installing centre console	59
3.5	Removing and installing cup holder	62
3.6	Removing and installing rear centre console storage compartment	64
3.7	Removing and installing trim panel of operating unit	65
3.8	Removing and installing centre console armrest	66
3.9	Removing and installing vents	69
3.10	Removing and installing rear cross member of centre console	70
3.11	Removing and installing centre console carrier, centre	73
4	Interior mirror	74
4.1	Assembly overview - interior mirror	74
4.2	Removing and installing interior mirror	77
69	Passenger protection	83
1	Seat belts	83
1.1	Overview of fitting locations - seat belts and anchorage points	83
1.2	Assembly overview - front three-point seat belt	85
1.3	Assembly overview - rear outer three-point seat belt	86
1.4	Assembly overview - rear centre three-point seat belt	87
1.5	Assembly overview - front belt buckle	90
1.6	Removing and installing front three-point seat belt	90
1.7	Removing and installing rear three-point seat belt	93
1.8	Removing and installing belt height adjuster	100
1.9	Removing and installing front belt buckle	102
1.10	Removing and installing rear belt buckle	103
2	Airbag system	109
2.1	Overview of fitting locations - airbag system	109
3	Airbag control unit	110
3.1	Assembly overview - airbag control unit	110
3.2	Removing and installing airbag control unit J234	110
4	Driver's airbag	113
4.1	Removing and installing airbag unit with igniter	113
4.2	Removing and installing return spring with slip ring (coil connector)	115
5	Front passenger side airbag	116
5.1	Assembly overview - front passenger side airbag	116
5.2	Removing and installing airbag on front passenger side	116
5.3	Removing and installing key-operated switch to deactivate front passenger side airbag E224	118
6	Side airbags	120
6.1	Assembly overview - front side airbag	120
6.2	Removing and installing front side airbag with igniter	120
7	Curtain airbags	125
7.1	Assembly overview - curtain airbag	125



7.2	Removing and installing curtain airbag with igniter	125
8	Airbag crash sensors	129
8.1	Overview of fitting locations - airbag crash sensors	129
8.2	Removing and installing front side airbag crash sensor G179 / G180	129
8.3	Removing and installing rear side airbag crash sensor G256 / G257	132
9	Seat occupied recognition	135
9.1	Overview of fitting locations - seat occupied recognition system	135
9.2	Removing and installing seat occupied recognition	136
70	Trim, insulation	137
1	Front door trims	137
1.1	Assembly overview - front door trim	137
1.2	Removing and installing front door trim	138
2	Rear door trims	141
2.1	Assembly overview - rear door trim	141
2.2	Removing and installing interior door handle	143
3	Dash panel	147
3.1	Assembly overview - dash panel	147
3.2	Removing and installing dash panel end cover	148
3.3	Removing and installing dash panel trim	149
3.4	Removing and installing loudspeaker trim	150
3.5	Removing and installing radio/navigation system blanking plate	151
3.6	Removing and installing dash panel	151
3.7	Removing and installing dash panel vents	157
3.8	Removing and installing centre storage compartment	158
3.9	Installing maximum speed limit plate	159
4	Central tube for dash panel	162
4.1	Assembly overview - central tube for dash panel	162
4.2	Removing and installing central tube for dash panel	163
4.3	Removing and installing mounting bracket	166
5	Interior trims	167
5.1	Overview of fitting locations - interior trims	167
5.2	Assembly overview - B-pillar trim	169
5.3	Assembly overview - C-pillar trim	171
5.4	Assembly overview - D-pillar trim	174
5.5	Assembly overview - foot rest and floor covering	176
5.6	Assembly overview - storage compartment lid	177
5.7	Removing and installing sill panel moulding	177
5.8	Removing and installing A-pillar trim	185
5.9	Removing and installing B-pillar trim	188
5.10	Removing and installing C-pillar trim	198
5.11	Removing and installing D-pillar trim	203
5.12	Removing and installing window frame trim	207
5.13	Removing and installing foot rest	211
5.14	Removing and installing floor covering	212
5.15	Removing and installing loudspeaker trim	220
6	Luggage compartment trims	221
6.1	Overview of fitting locations - luggage compartment trims	221
6.2	Assembly overview - rear shelf support	222
6.3	Assembly overview - lower rear lid trim	225
6.4	Assembly overview - luggage compartment side trim	227
6.5	Removing and installing lower rear lid trim	229
6.6	Removing and installing lock carrier trim	232
6.7	Removing and installing luggage compartment side trim	235
6.8	Removing and installing moulded trim, Caddy Maxi	246



7	Roof trims	249
7.1	Overview of fitting locations - roof trim	249
7.2	Removing and installing moulded headlining	251
8	Insulation	269
8.1	Assembly overview - clutch pedal and brake pedal insulation	269
8.2	Assembly overview - cover for universal joint on steering column	272
8.3	Assembly overview - plenum chamber bulkhead insulation	273
8.4	Assembly overview - plenum chamber insulation	274
8.5	Assembly overview - mounting plate insulation	275
8.6	Assembly overview - inner plenum chamber bulkhead insulation	276
8.7	Assembly overview - insulation of centre console, A-pillar, dash panel	277
8.8	Assembly overview - wheel housing insulation	278
72	Seat frames	280
1	Overview of seat variants	280
1.1	Overview of fitting locations - seat variants	280
2	Front seats	281
2.1	Assembly overview - front seat	281
2.2	Assembly overview - front backrest	285
2.3	Assembly overview - head restraint	288
2.4	Assembly overview - seat pan	289
2.5	Removing and installing front seat	294
2.6	Connecting and disconnecting airbag adapter	298
2.7	Removing and installing handle for seat height adjustment	299
2.8	Removing and installing seat frame adapter	300
2.9	Removing and installing seat trims	303
2.10	Removing and installing drawer mounting	307
2.11	Removing and installing backrest frame	308
2.12	Removing and installing lumbar support adjustment unit	310
2.13	Removing and installing lumbar support	310
2.14	Removing and installing backrest cover panel	312
2.15	Removing and installing backrest lock Bowden cable	315
2.16	Removing and installing head restraint guide	316
3	Rear seats	318
3.1	Assembly overview - bench seat / individual seats	318
3.2	Assembly overview - head restraint and head restraint guide	322
3.3	Assembly overview - rear seat backrest	323
3.4	Removing and installing bench seat / individual seats	325
3.5	Removing and installing head restraint guide	336
74	Seat - padding, covers	337
1	Front seat covers and padding	337
1.1	Assembly overview - cover and padding for seat pan	337
1.2	Assembly overview - cover and padding for backrest	338
1.3	Assembly overview - seat heating element	339
1.4	Assembly overview - backrest heater element	340
1.5	Removing and installing cover and padding for seat pan	340
1.6	Removing and installing backrest cover and backrest padding	345
1.7	Removing and installing seat heating element Z6 / Z8	350
1.8	Removing and installing backrest heating element Z7 / Z9	351
2	Rear seat covers and padding	353
2.1	Assembly overview - cover and padding	353
2.2	Removing and installing covers and padding	354