



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Basic instructions</b>	<b>1</b>
1.1 Original joint	1
1.2 Used joining techniques	1
<b>2 Key vehicle data</b>	<b>3</b>
2.1 Vehicle identification number	3
2.2 Identification plate	5
2.3 Vehicle data sticker	7
<b>3 Safety information</b>	<b>8</b>
<b>4 Moulded foam inserts</b>	<b>9</b>
<b>5 Galvanised body parts and high-/higher-strength body panels</b>	<b>10</b>
<b>6 Laser welding</b>	<b>14</b>
<b>7 Gaps/shut lines</b>	<b>15</b>
7.1 Body - front	15
7.2 Body - rear	17
<b>8 Body dimensions</b>	<b>22</b>
8.1 Body - front	22
8.2 Body - centre	24
8.3 Body - rear	29
8.4 Floor panel - front	32
8.5 Floor panel - centre	33
8.6 Floor panel - rear	35
<b>9 Alignment bracket set</b>	<b>37</b>
9.1 Alignment bracket set, Caddy	37
9.2 Alignment jig Caddy »Maxi«	38
9.3 Portal gauges overview, 2-door vehicles	39
9.4 Portal gauges overview, 4-door vehicles	40
<b>50 - Body - front</b>	<b>42</b>
<b>1 Renewing suspension turret</b>	<b>42</b>
1.1 Tools	43
1.2 Removing	44
1.3 Installing	45
<b>2 Renewing right bracket</b>	<b>48</b>
2.1 Tools	48
2.2 Removing	48
2.3 Installing	50
<b>3 Renewing left console</b>	<b>52</b>
3.1 Tools	53
3.2 Removing	53
3.3 Installing	55
<b>4 Renewing mounting bracket for subframe</b>	<b>58</b>
4.1 Tools	58
4.2 Removing	58
4.3 Installing	59
<b>5 Renewing lateral cover plate for upper longitudinal member</b>	<b>62</b>
5.1 Tools	63
5.2 Removing	63
5.3 Installing	64
<b>6 Replacing upper wheel housing longitudinal member</b>	<b>69</b>
6.1 Tools	70



6.2	Removing	71
6.3	Installing	74
<b>7</b>	<b>Renewing upper wheel housing longitudinal member - part section</b>	<b>79</b>
7.1	Tools	80
7.2	Removing	81
7.3	Installing	82
<b>8</b>	<b>Renewing front wheel housing</b>	<b>84</b>
8.1	Tools	85
8.2	Removing	85
8.3	Installing	86
<b>9</b>	<b>Repairing threads for securing subframe</b>	<b>89</b>
9.1	Contents of thread repair kit	91
9.2	Repairing threads	91
<b>10</b>	<b>Renewing front longitudinal member</b>	<b>95</b>
10.1	Tools	96
10.2	Removing	96
10.3	Installing	98
<b>11</b>	<b>Renewing front longitudinal member - part section</b>	<b>104</b>
11.1	Tools	104
11.2	Removing	104
11.3	Installing	107
<b>12</b>	<b>Renewing front bumper bracket</b>	<b>108</b>
12.1	Tools	108
12.2	Removing	108
12.3	Installing	109
<b>51 - Body - centre</b>		<b>112</b>
<b>1</b>	<b>Renewing roof</b>	<b>112</b>
1.1	Tools	113
1.2	Removing	113
1.3	Installing	116
<b>2</b>	<b>Renewing roof »vehicles with ladder flap«</b>	<b>127</b>
2.1	Tools	128
2.2	Removing	128
2.3	Installing	131
<b>3</b>	<b>Renewing roof »Caddy Maxi«</b>	<b>138</b>
3.1	Tools	139
3.2	Removing	139
3.3	Installing	141
<b>4</b>	<b>Renewing front cross member for roof</b>	<b>147</b>
4.1	Tools	147
4.2	Removing	147
4.3	Installing	148
<b>5</b>	<b>Renewing roof reinforcement</b>	<b>151</b>
5.1	Tools	151
5.2	Removing	151
5.3	Installing	152
<b>6</b>	<b>Renewing rear roof cross member</b>	<b>155</b>
6.1	Tools	155
6.2	Removing	155
6.3	Installing	157
<b>7</b>	<b>Renewing rear roof cross member (vehicles with ladder flap)</b>	<b>160</b>
7.1	Tools	160
7.2	Removing	160



7.3	Installing	162
<b>8</b>	<b>Renewing D-pillar reinforcement</b>	<b>164</b>
8.1	Tools	165
8.2	Removing	165
8.3	Installing	168
<b>9</b>	<b>Renewing side panel</b>	<b>176</b>
9.1	Tools	177
9.2	Removing	177
9.3	Installing	181
<b>10</b>	<b>Renewing side panel - part section</b>	<b>186</b>
10.1	Tools	187
10.2	Removing	187
10.3	Installing	189
<b>11</b>	<b>Renewing complete side panel</b>	<b>193</b>
11.1	Tools	194
11.2	Removing	194
11.3	Installing	197
<b>12</b>	<b>Renewing side panel beneath guide rail</b>	<b>203</b>
12.1	Tools	204
12.2	Removing	204
12.3	Installing	205
<b>13</b>	<b>Renewing rear side panel - part section, »Caddy Maxi«</b>	<b>209</b>
13.1	Tools	210
13.2	Removing	210
13.3	Installing	212
<b>14</b>	<b>Renewing side panel beneath guide rail »Caddy Maxi«</b>	<b>217</b>
14.1	Tools	218
14.2	Removing	218
14.3	Installing	220
<b>15</b>	<b>Renewing hinge pillar (A-pillar) - part section</b>	<b>225</b>
15.1	Tools	225
15.2	Removing	225
15.3	Installing	230
<b>16</b>	<b>Renewing roof side member reinforcement - part section</b>	<b>234</b>
16.1	Tools	235
16.2	Removing	235
16.3	Installing	237
<b>17</b>	<b>Renewing inner hinge pillar (A-pillar)</b>	<b>242</b>
17.1	Tools	243
17.2	Removing	244
17.3	Installing	247
<b>18</b>	<b>Renewing upper hinge pillar reinforcement</b>	<b>252</b>
18.1	Tools	253
18.2	Removing	253
18.3	Installing	254
<b>19</b>	<b>Renewing lower hinge pillar reinforcement - part section</b>	<b>256</b>
19.1	Tools	256
19.2	Removing	256
19.3	Installing	258
<b>20</b>	<b>Renewing middle pillar</b>	<b>261</b>
20.1	Tools	262
20.2	Removing	262
20.3	Installing	264



<b>21</b>	<b>Renewing centre pillar</b>	<b>267</b>
21.1	Tools	267
21.2	Removing	267
21.3	Installing	270
<b>22</b>	<b>Renewing side member (sliding door side)</b>	<b>272</b>
22.1	Overview of parting cuts »Caddy«	272
22.2	Overview of parting cuts »Caddy Maxi«	273
22.3	Tools	274
22.4	Removing	274
22.5	Installing	275
<b>23</b>	<b>Renewing side member reinforcement</b>	<b>278</b>
23.1	Tools	279
23.2	Removing	279
23.3	Installing	280
<b>24</b>	<b>Renewing inner side member reinforcement - part section</b>	<b>284</b>
24.1	Tools	284
24.2	Removing	284
24.3	Installing	285
<b>25</b>	<b>Renewing connecting piece for floor panel - part section</b>	<b>286</b>
25.1	Tools	286
25.2	Removing	286
25.3	Installing	287
<b>53 - Body - rear</b>		<b>290</b>
<b>1</b>	<b>Renewing rear apron</b>	<b>290</b>
1.1	Tools	290
1.2	Removing	290
1.3	Installing	292
<b>2</b>	<b>Renewing lock carrier</b>	<b>295</b>
2.1	Tools	296
2.2	Removing	296
2.3	Installing	297
<b>3</b>	<b>Renewing tail light mounting</b>	<b>299</b>
3.1	Tools	299
3.2	Removing	299
3.3	Installing	301
<b>4</b>	<b>Renewing cross panel member</b>	<b>303</b>
4.1	Tools	303
4.2	Removing	303
4.3	Installing	304
<b>5</b>	<b>Renewing luggage compartment floor - part section</b>	<b>307</b>
5.1	Tools	308
5.2	Removing	308
5.3	Installing	310
<b>6</b>	<b>Renewing D-pillar</b>	<b>312</b>
6.1	Tools	313
6.2	Removing	314
6.3	Installing	315
<b>7</b>	<b>Renewing bumper mounting</b>	<b>318</b>
7.1	Tools	319
7.2	Removing	319
7.3	Installing	320
<b>8</b>	<b>Renewing rear longitudinal member</b>	<b>323</b>
8.1	Tools	324



---

8.2	Removing .....	325
8.3	Installing .....	326
<b>9</b>	<b>Renewing wheel housing liner .....</b>	<b>329</b>
9.1	Tools .....	330
9.2	Removing .....	330
9.3	Installing .....	331
<b>10</b>	<b>Renewing cross member .....</b>	<b>335</b>
10.1	Tools .....	336
10.2	Removing .....	336
10.3	Installing .....	336