



Contents

00 - Technical data	1
1 Tipper body (Henschel)	1
1.1 Data	1
2 Box body (Junge)	2
2.1 Data	2
3 Box body (Spier)	4
3.1 Data	4
4 Box body (Schmitz Cargobull)	6
4.1 General information	6
4.2 Data	6
5 Tail lift (Sörensen)	7
5.1 General information	7
5.2 Data	8
6 Tail lift (BÄR - Cargolift)	11
6.1 General information	11
6.2 Data	12
7 Tail lift (Palfinger)	14
7.1 General information	14
7.2 Data	15
53 - Body - rear	16
1 Storage well liner and load compartment trim for rear lid	16
1.1 Assembly overview - storage well liner	16
1.2 Removing and installing storage well liner	17
1.3 Removing and installing load compartment for rear lid	17
61 - Convertible roof, hardtop, canopy	20
66 - Exterior equipment	21
1 Wheel housing liner	21
1.1 Assembly overview - front wheel housing liner	21
1.2 Removing and installing front wheel housing liner	22
2 Tipper body (Henschel)	25
2.1 Load bed	25
2.2 Hydraulic system	33
3 Crafter body (Schoon)	40
3.1 Load bed	40
3.2 Hydraulic system	43
4 Box body (Junge)	48
4.1 Box body, exterior	48
4.2 Box body, rear	48
5 Box body (Spier)	52
5.1 Box body, exterior	52
5.2 Box body, rear	56
6 Box body (Schmitz Cargobull)	60
6.1 Box body, exterior	60
6.2 Box body, rear	64
7 Tail lift (Sörensen)	72
7.1 Platform	72
7.2 Hydraulic system	77
8 Tail lift (BÄR - Cargolift)	84



8.1	Platform	84
8.2	Hydraulic system	87
9	Tail lift (Palfinger)	95
9.1	Platform	95
9.2	Hydraulic system	98
10	Repairing box body	107
10.1	Repairing plywood panel	107
10.2	Repairing sandwich panel	110
10.3	Repairing transparent roof	122
11	Trim film and protective film	126
11.1	Assembly overview - protective films	126
11.2	Renewing protective films	128
12	Taxi roof sign preparation	132
12.1	Removing and installing taxi roof sign preparation	132
13	Taxi roof sign preparation	133
13.1	Removing and installing taxi roof sign preparation	133
14	Roof spoiler	134
14.1	Removing and installing roof spoiler	134
15	Mounting bracket for towing bracket	136
15.1	Assembly overview - mounting bracket for towing bracket	136
15.2	Removing and installing mounting bracket for towing bracket	136
16	Roof basket	138
16.1	Assembly overview - roof basket	138
16.2	Removing and installing roof basket	139
17	Storage box on drop-side	142
17.1	Assembly overview - storage box on drop-side	142
17.2	Removing and installing storage box on drop-side	142
18	Cross strut	144
18.1	Assembly overview - cross strut	144
18.2	Removing and installing cross strut	146
19	Storage box under drop-side	149
19.1	Assembly overview - storage box bracket	149
19.2	Removing and installing bracket for storage box	152
20	Side underbody guard	153
20.1	Assembly overview - side underbody guard	153
20.2	Removing and installing side underbody guard	153
21	Storage box	155
21.1	Assembly overview - storage compartment	155
21.2	Removing and installing storage box	155
22	Ladder carrier	157
22.1	Assembly overview - ladder carrier	157
22.2	Removing and installing ladder carrier	158
23	Roof carrier system with securing device	161
23.1	Assembly overview - roof carrier system with securing device	161
23.2	Removing and installing roof carrier system with securing device	161
24	Easy Entry, right rear wing door	163
24.1	Assembly overview - Easy Entry, right rear wing door	163
24.2	Removing and installing Easy Entry, right rear wing door	163
25	Underbody guard (protection package)	166
25.1	Assembly overview - underbody guard (protection package)	166
25.2	Removing and installing underbody guard (protection package)	167
26	Roof ventilator	170



26.1	Assembly overview - roof ventilator	170
26.2	Removing and installing roof ventilator	170
27	Grille attachment for tipper	173
27.1	Assembly overview - grille attachment	173
27.2	Removing and installing grille attachment	173
28	Ladder support	174
28.1	Assembly overview - ladder support	174
28.2	Removing and installing ladder support	175
68	Interior equipment	178
1	Box body (Junge)	178
1.1	Removing and installing securing strap rail	178
1.2	Removing and installing securing strap recesses	180
1.3	Removing and installing pull strap	181
2	Box body (Spier)	183
2.1	Removing and installing securing strap rail	183
2.2	Removing and installing securing strap recess	185
2.3	Pull strap	186
3	Box body (Schmitz Cargobull)	188
3.1	Removing and installing roof cross strut	188
3.2	Removing and installing securing strap rail	189
3.3	Removing and installing pull strap	191
4	Equipment	193
4.1	Universal floor	193
4.2	Roof carrier in load compartment	195
4.3	Removing and installing grab handle, A-pillar	197
5	Box body (Plus)	199
5.1	Assembly overview - box body (Plus)	199
5.2	Removing and installing seat bench padding	204
5.3	Removing and installing upper partition	204
5.4	Removing and installing lower partition	206
5.5	Removing and installing connection to side panel	207
5.6	Removing and installing side panel	207
5.7	Removing and installing sliding door step	209
5.8	Removing and installing front and rear bench trim	210
5.9	Removing and installing rear seat	212
5.10	Removing and installing floor items	213
5.11	Removing and installing headliner	214
5.12	Removing and installing roof items	216
70	Trim, insulation	217
91	Communication	218
1	Aerial systems	218
1.1	Removing and installing roof aerial R295	218
2	Aerial systems	219
2.1	Removing and installing roof aerial R295	219
94	Lights, bulbs, switches - exterior	220
1	Tipper body (Henschel)	220
1.1	Electrics	220
2	Crafter body (Schoon)	225
2.1	Electrics	225
3	Box body (Junge)	229
3.1	Removing and installing tail light MX3 / MX4	229



3.2	Removing and installing rear fog light L46 / L47	230
3.3	Removing and installing number plate light X4 / X5	230
3.4	Removing and installing additional brake light M25	231
3.5	Removing and installing upper marker lights	232
3.6	Removing and installing side marker light M33 / M34 / M37 / M38 / M39 / M40 with bracket	232
3.7	Removing and installing lower marker light	232
4	Box body (Spier)	234
4.1	Removing and installing tail light MX3 / MX4	234
4.2	Removing and installing number plate light X4 / X5	235
4.3	Removing and installing high-level brake light	235
4.4	Removing and installing upper marker lights	236
4.5	Removing and installing side marker light M33 / M34 / M37 / M38 / M39 / M40	236
5	Box body (Schmitz Cargobull)	238
5.1	Removing and installing tail light cluster	238
5.2	Removing and installing number plate light	239
5.3	Removing and installing high-level brake light	240
5.4	Removing and installing rear upper marker light	241
5.5	Removing and installing front upper marker light	241
5.6	Removing and installing side marker light	242
6	Tail lift (Sørensen)	244
6.1	Removing and installing hazard warning light M115/M116	244
6.2	Removing and installing foot switch F558	245
6.3	Removing and installing tail lift operating unit EX56	246
6.4	Removing and installing tilt angle sensor	247
7	Tail lift (BÄR - Cargolift)	249
7.1	Removing and installing hazard warning light M115/M116	249
7.2	Removing and installing foot switch F556/F557	250
7.3	Removing and installing operating unit EX56	251
7.4	Removing and installing foot switch unit F558	252
8	Tail lift (Palfinger)	255
8.1	Removing and installing hazard warning light	255
8.2	Removing and installing foot controls	255
8.3	Removing and installing tilt switch	256
8.4	Removing and installing angle sensor	257
8.5	Removing and installing control box	257
9	Removing and installing alarm system off switch E217	259
10	Roof spoiler elevated side light	260
10.1	Removing and installing roof spoiler elevated side light	260
11	Cross strut/tarpaulin lighting	261
11.1	Removing and installing cross strut/tarpaulin lighting	261
12	Cross strut/tarpaulin wiring harness	262
12.1	Removing and installing cross strut/tarpaulin wiring harness	262
96 - Lights, bulbs, switches - interior		263
1	Box body (Junge)	263
1.1	Removing and installing load area illumination switch E481	263
1.2	Removing and installing interior lighting	263
2	Box body (Spier)	265
2.1	Removing and installing load area illumination switch E481	265
2.2	Removing and installing interior lighting	265
3	Box body (Schmitz Cargobull)	267
3.1	Removing and installing interior lighting	267
4	Tail lift (Sørensen)	269



4.1	Tail lift switch E629	269
5	Tail lift (BÄR - Cargolift)	270
5.1	Tail lift switch E629	270
6	Tail lift (Palfinger)	271
6.1	Tail lift switch	271
7	Control elements	272
7.1	Overview of fitting locations - controls in dash panel, Taxi	272
7.2	Removing and installing interior light switch (taxi) E115	272
7.3	Removing and installing taxi sign switch E138	273
7.4	Removing and installing hands-free system button E487	273
8	Anti-theft alarm	274
8.1	Removing and installing treble horn H2	274
97 - Wiring		276
1	Control units	276
1.1	Removing and installing special vehicle control unit J608	276
2	Control units	279
2.1	Removing and installing special vehicle control unit J608	279