



Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Safety information | 1 |
| 1.1 Safety measures when working on vehicles with a start/stop system | 1 |
| 1.2 Safety precautions when using testers and measuring instruments during a road test | 1 |
| 2 Identification | 3 |
| 2.1 Identification of final drive | 3 |
| 3 Repair instructions | 4 |
| 3.1 General repair instructions | 4 |
| 3.2 Gaskets and seals | 5 |
| 3.3 Nuts and bolts | 5 |
| 4 Technical data | 6 |
| 4.1 Capacities | 6 |
| 4.2 Allocation gearbox - engine | 6 |
| 5 Electrical components | 8 |
| 5.1 Overview of fitting locations - electrical components | 8 |
| 39 - Final drive - differential | 9 |
| 1 Final drive | 9 |
| 1.1 Assembly overview - final drive | 9 |
| 1.2 Removing and installing final drive | 10 |
| 2 Gear oil | 11 |
| 2.1 Checking gear oil level | 11 |
| 2.2 Draining and filling gear oil | 11 |
| 3 High performance oil for all-wheel drive coupling | 14 |
| 3.1 Checking fluid level in all-wheel drive coupling | 14 |
| 3.2 Draining and replenishing high performance oil for all-wheel drive coupling | 15 |
| 4 Oil seals | 19 |
| 4.1 Replacing oil seals for rear axle shafts | 19 |
| 4.2 Renewing oil seal for propshaft flange on rear final drive | 25 |
| 5 Differential | 28 |
| 6 All-wheel drive coupling | 29 |
| 6.1 Assembly overview - all-wheel drive coupling | 29 |
| 6.2 Checking function | 30 |
| 6.3 Removing and installing pump for all-wheel drive coupling | 31 |
| 6.4 Removing and installing all-wheel drive coupling | 33 |
| 6.5 Removing and installing control unit | 36 |
| 7 Propshaft | 38 |
| 7.1 Assembly overview - propshaft | 38 |
| 7.2 Removing and installing propshaft | 39 |
| 7.3 Repairing propshaft | 44 |