



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
2 Identification	3
2.1 Gearbox identification	3
3 Repair instructions	4
3.1 General repair instructions	4
4 Technical data	8
4.1 Capacities	8
4.2 Allocation gearbox - engine	8
4.3 Calculation of gear ratios	12
5 Overview - power transmission	13
5.1 Overview - power transmission - front-wheel drive	13
6 Electrical components	15
6.1 Overview of fitting locations - electrical components	15
30 - Clutch	17
1 Clutch operation	17
1.1 Assembly overview - pedal cluster	17
1.2 Assembly overview - clutch hydraulics	19
1.3 Assembly overview - clutch release mechanism	21
1.4 Removing and installing clutch pedal	23
1.5 Removing and installing over-centre spring	27
1.6 Removing and installing mounting bracket	30
1.7 Removing and installing clutch master cylinder	36
1.8 Removing and installing clutch slave cylinder	38
1.9 Removing and installing lines for clutch mechanism	40
1.10 Bleeding clutch mechanism	42
1.11 Checking clutch master cylinder and clutch slave cylinder	43
1.12 Removing and installing clutch position sender G476	44
1.13 Repairing clutch release mechanism	45
2 Clutch	47
2.1 Assembly overview - clutch	47
2.2 Removing and installing clutch	49
34 - Controls, housing	57
1 Selector mechanism	57
1.1 Installation position - selector mechanism	57
1.2 Assembly overview - gear knob and cover	59
1.3 Assembly overview - Gear lever and selector housing	60
1.4 Assembly overview - Selector cables	62
1.5 Removing and installing gear knob	63
1.6 Removing and installing selector mechanism	65
1.7 Dismantling and assembling selector mechanism	71
1.8 Removing and installing gear selector cable and gate selector cable	76
1.9 Adjusting selector mechanism	78
1.10 Checking selector mechanism	80
1.11 Renewing selector shaft seal	81
2 Removing and installing gearbox	83
2.1 Distinguishing between different types of engines	83
2.2 Specified torques for gearbox	84



2.3	Removing gearbox	84
2.4	Installing gearbox	104
3	Assembly mountings	111
3.1	Assembly overview - assembly mountings	111
4	Transporting gearbox	113
5	Dismantling and assembling gearbox	114
5.1	Schematic overview - gearbox	114
5.2	Assembly overview - cover for gearbox housing and 5th gear	116
5.3	Assembly overview - gearbox housing and selector mechanism	117
5.4	Assembly overview - selector unit	119
5.5	Assembly overview - input shaft, output shafts, differential, selector rods	120
5.6	Assembly overview - selector forks	120
5.7	Repairing selector unit	121
5.8	Repairing selector forks	122
5.9	Dismantling and assembling gearbox	126
5.10	Removing cover for gearbox housing and 5th gear	137
5.11	Installing cover for gearbox housing and 5th gear	143
6	Gearbox housing, clutch housing	147
6.1	Assembly overview - gearbox housing	147
6.2	Assembly overview - clutch housing	149
6.3	Repairing gearbox housing	150
6.4	Repairing clutch housing	157
7	Securing to engine and gearbox support	163
8	Gear oil	164
8.1	Checking gear oil level	164
8.2	Draining and filling gear oil	164
35 - Gears, shafts		167
1	Input shaft	167
1.1	Assembly overview - input shaft	167
1.2	Dismantling and assembling input shaft	170
1.3	Adjusting input shaft	175
2	Output shaft	180
2.1	Assembly overview - output shaft	180
2.2	Dismantling and assembling output shaft	183
2.3	Adjusting output shaft	191
3	Reverse shaft	196
3.1	Assembly overview - reverse shaft	196
3.2	Dismantling and assembling reverse shaft	197
39 - Final drive - differential		200
1	Oil seals	200
1.1	Overview of fitting locations - seals	200
1.2	Renewing left seal	201
1.3	Renewing right oil seal	203
1.4	Renewing input shaft seal	208
2	Differential	211
2.1	Assembly overview - differential	211
2.2	Dismantling and assembling differential	213
2.3	Adjusting differential	217
3	Adjustment overview	223