



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
2 Identification	2
2.1 Gearbox identification	2
3 Repair instructions	3
3.1 General repair instructions	3
4 Technical data	7
4.1 Allocation gearbox - engine	7
4.2 Capacities	8
4.3 Calculation of gear ratios	8
5 Overview - power transmission	9
5.1 Overview - power transmission - front-wheel drive	9
6 Electrical components	11
6.1 Overview of fitting locations - electrical components	11
30 - Clutch	13
1 Clutch operation	13
1.1 Assembly overview - pedal cluster	13
1.2 Assembly overview - clutch hydraulics	15
1.3 Assembly overview - clutch release mechanism	17
1.4 Removing and installing clutch pedal	18
1.5 Removing and installing over-centre spring	22
1.6 Removing and installing mounting bracket	25
1.7 Removing and installing clutch master cylinder	31
1.8 Removing and installing clutch slave cylinder	33
1.9 Bleeding clutch mechanism	35
1.10 Checking clutch master cylinder and clutch slave cylinder	37
1.11 Removing and installing clutch position sender G476	37
1.12 Repairing clutch release mechanism	39
2 Clutch	41
2.1 Assembly overview - clutch	41
2.2 Removing and installing clutch	42
34 - Controls, housing	46
1 Selector mechanism	46
1.1 Installation position - selector mechanism	46
1.2 Assembly overview - selector mechanism	48
1.3 Assembly overview - gear knob and cover	49
1.4 Assembly overview - Gear lever and selector housing	50
1.5 Assembly overview - Selector cables	52
1.6 Removing and installing gear knob	55
1.7 Removing and installing selector mechanism	56
1.8 Dismantling and assembling selector mechanism	61
1.9 Removing and installing gear selector cable and gate selector cable	66
1.10 Adjusting selector mechanism	68
1.11 Checking selector mechanism	70
1.12 Renewing selector shaft seal	71
2 Removing and installing gearbox	73
2.1 Specified torques for gearbox	73
2.2 Removing gearbox	73
2.3 Installing gearbox	80



3	Assembly mountings	87
3.1	Assembly overview - assembly mountings	87
4	Transporting gearbox	89
5	Dismantling and assembling gearbox	90
5.1	Schematic overview - gearbox	90
5.2	Assembly overview - gearbox	91
5.3	Assembly overview - cover for gearbox housing and 5th gear	92
5.4	Assembly overview - input shaft, output shaft, differential and selector mechanism	93
5.5	Assembly overview - selector unit	94
5.6	Assembly overview - selector forks	96
5.7	Repairing selector unit	96
5.8	Repairing selector forks	98
5.9	Dismantling and assembling gearbox	101
6	Gearbox housing, clutch housing	113
6.1	Assembly overview - clutch housing	113
6.2	Assembly overview - gearbox housing and clutch housing	114
6.3	Repairing gearbox housing	115
7	Securing to engine and gearbox support	117
8	Gear oil	118
8.1	Checking gear oil level	118
35 - Gears, shafts		120
1	Input shaft	120
1.1	Assembly overview - input shaft	120
1.2	Dismantling and assembling input shaft	122
1.3	Renewing input shaft seal	130
2	Output shaft	133
2.1	Assembly overview - output shaft	133
2.2	Dismantling and assembling output shaft	135
39 - Final drive - differential		141
1	Oil seals	141
1.1	Overview of fitting locations - seals	141
1.2	Renewing left seal	142
1.3	Renewing right oil seal	144
2	Differential	148
2.1	Assembly overview - differential	148
2.2	Dismantling and assembling differential	150
2.3	Adjusting differential	156