



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety information</b> .....	<b>1</b>
1.1 Safety measures when working on vehicles with a start/stop system .....	1
<b>2 Identification</b> .....	<b>2</b>
2.1 Gearbox identification .....	2
<b>3 Repair instructions</b> .....	<b>3</b>
3.1 General repair instructions .....	3
<b>4 Technical data</b> .....	<b>7</b>
4.1 Allocation gearbox - engine .....	7
4.2 Capacities .....	7
4.3 Calculation of gear ratios .....	8
<b>5 Overview - power transmission</b> .....	<b>9</b>
5.1 Overview - power transmission - front-wheel drive .....	9
<b>6 Electrical components</b> .....	<b>11</b>
6.1 Overview of fitting locations - electrical components .....	11
<b>30 - Clutch</b> .....	<b>13</b>
<b>1 Clutch operation</b> .....	<b>13</b>
1.1 Assembly overview - pedal cluster .....	13
1.2 Assembly overview - clutch hydraulics .....	15
1.3 Assembly overview - clutch release mechanism .....	17
1.4 Removing and installing clutch pedal .....	19
1.5 Removing and installing over-centre spring .....	23
1.6 Removing and installing mounting bracket .....	26
1.7 Removing and installing clutch master cylinder .....	32
1.8 Removing and installing clutch slave cylinder .....	34
1.9 Removing and installing lines for clutch mechanism .....	37
1.10 Bleeding clutch mechanism .....	38
1.11 Checking clutch master cylinder and clutch slave cylinder .....	40
1.12 Removing and installing clutch position sender G476 .....	40
1.13 Repairing clutch release mechanism .....	42
<b>2 Clutch</b> .....	<b>43</b>
2.1 Assembly overview - clutch .....	43
2.2 Removing and installing clutch .....	44
<b>34 - Controls, housing</b> .....	<b>48</b>
<b>1 Selector mechanism</b> .....	<b>48</b>
1.1 Installation position - selector mechanism .....	48
1.2 Assembly overview - selector mechanism .....	50
1.3 Assembly overview - gear knob and cover .....	51
1.4 Assembly overview - Gear lever and selector housing .....	52
1.5 Assembly overview - Selector cables .....	54
1.6 Removing and installing gear knob .....	55
1.7 Removing and installing selector mechanism .....	57
1.8 Dismantling and assembling selector mechanism .....	63
1.9 Removing and installing gear selector cable and gate selector cable .....	68
1.10 Adjusting selector mechanism .....	70
1.11 Checking selector mechanism .....	72
1.12 Renewing selector shaft seal .....	73
<b>2 Removing and installing gearbox</b> .....	<b>75</b>
2.1 Specified torques for gearbox .....	75
2.2 Removing gearbox .....	75



2.3	Installing gearbox	85
<b>3</b>	<b>Assembly mountings</b>	<b>92</b>
3.1	Assembly overview - assembly mountings	92
<b>4</b>	<b>Transporting gearbox</b>	<b>94</b>
<b>5</b>	<b>Dismantling and assembling gearbox</b>	<b>95</b>
5.1	Schematic overview - gearbox	95
5.2	Assembly overview - gearbox	97
5.3	Assembly overview - cover for gearbox housing and 5th/6th gear	98
5.4	Assembly overview - gearbox housing and selector mechanism	100
5.5	Assembly overview - selector unit	102
5.6	Assembly overview - input shaft, output shafts, differential, selector rods	103
5.7	Assembly overview - selector forks	104
5.8	Repairing selector unit	107
5.9	Repairing selector forks	108
5.10	Removing cover for gearbox housing and 5th and 6th gears	112
5.11	Dismantling and assembling gearbox	118
5.12	Installing cover for gearbox housing and 5th and 6th gears	133
<b>6</b>	<b>Gearbox housing, clutch housing</b>	<b>139</b>
6.1	Assembly overview - gearbox housing and clutch housing	139
6.2	Assembly overview - gearbox housing cover	141
6.3	Repairing gearbox housing	142
6.4	Repairing clutch housing	144
6.5	Repairing gearbox housing cover	145
<b>7</b>	<b>Securing to engine and gearbox support</b>	<b>148</b>
<b>8</b>	<b>Gear oil</b>	<b>149</b>
8.1	Checking gear oil level	149
8.2	Draining and filling gear oil	149
<b>35 - Gears, shafts</b>		<b>152</b>
<b>1</b>	<b>Input shaft</b>	<b>152</b>
1.1	Assembly overview - input shaft	152
1.2	Dismantling and assembling input shaft	155
1.3	Adjusting input shaft	160
1.4	Renewing input shaft seal	165
<b>2</b>	<b>Output shaft</b>	<b>168</b>
2.1	Assembly overview - output shaft	168
2.2	Dismantling and assembling output shaft	171
2.3	Adjusting output shaft	181
<b>3</b>	<b>Reverse shaft</b>	<b>187</b>
3.1	Assembly overview - reverse shaft	187
3.2	Dismantling and assembling reverse shaft	190
<b>39 - Final drive - differential</b>		<b>193</b>
<b>1</b>	<b>Oil seals</b>	<b>193</b>
1.1	Overview of fitting locations - seals	193
1.2	Renewing left seal	194
1.3	Renewing right oil seal	196
<b>2</b>	<b>Differential</b>	<b>201</b>
2.1	Assembly overview - differential	201
2.2	Dismantling and assembling differential	203
2.3	Adjusting differential	209
<b>3</b>	<b>Adjustment overview</b>	<b>213</b>