



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when tow-starting or towing	2
1.4 All-wheel drive - notes on performance test	2
2 Identification	3
2.1 Gearbox identification	3
3 Repair instructions	5
3.1 Contact corrosion	5
3.2 General repair instructions	5
4 Technical data	9
4.1 Allocation gearbox - engine	9
4.2 Capacities	10
4.3 Calculation of gear ratios	10
5 Overview - power transmission	12
5.1 Overview - power transmission - front-wheel drive	12
5.2 Overview - power transmission - all-wheel drive	14
6 Electrical components	16
6.1 Overview of fitting locations - electrical components	16
30 - Clutch	18
1 Clutch operation	18
1.1 Assembly overview - pedal cluster	18
1.2 Assembly overview - clutch hydraulics	20
1.3 Assembly overview - clutch release mechanism	22
1.4 Removing and installing clutch pedal	24
1.5 Removing and installing over-centre spring	28
1.6 Removing and installing mounting bracket	33
1.7 Removing and installing clutch master cylinder	39
1.8 Removing and installing clutch slave cylinder together with release bearing	41
1.9 Removing and installing lines for clutch mechanism	42
1.10 Removing and installing bleeder	44
1.11 Bleeding clutch mechanism	45
1.12 Checking clutch master cylinder and clutch slave cylinder	46
1.13 Removing and installing clutch position sender G476	46
2 Clutch	49
2.1 Assembly overview - clutch	49
2.2 Removing and installing clutch	51
34 - Controls, housing	61
1 Bevel box	61
1.1 Assembly overview - bevel box	61
1.2 Removing bevel box	62
1.3 Installing bevel box	70
2 Selector mechanism	75
2.1 Installation position - selector mechanism	75
2.2 Assembly overview - gear knob and cover	77
2.3 Assembly overview - Gear lever and selector housing	78
2.4 Assembly overview - Selector cables	80
2.5 Removing and installing gear knob	82
2.6 Removing and installing selector mechanism	83



2.7	Adjusting selector mechanism	89
2.8	Checking selector mechanism	92
2.9	Removing and installing gear selector cable	93
2.10	Renewing selector shaft seal	94
2.11	Dismantling and assembling selector mechanism	97
2.12	Removing and installing selector unit	102
3	Removing and installing gearbox	106
3.1	Distinguishing between different types of engines	106
3.2	Specified torques for gearbox	107
3.3	Removing gearbox	107
3.4	Installing gearbox	134
4	Assembly mountings	149
4.1	Assembly overview - assembly mountings	149
5	Transporting gearbox	152
6	Dismantling and assembling gearbox	153
6.1	Schematic overview - gearbox	153
6.2	Assembly overview - gearbox	155
6.3	Assembly overview - gearbox housing and selector mechanism	157
6.4	Assembly overview - selector unit	159
6.5	Assembly overview - input shaft, output shafts, differential, selector rods	160
6.6	Assembly overview - selector forks	164
6.7	Dismantling and assembling gearbox	164
7	Gearbox housing, clutch housing	180
7.1	Assembly overview - gearbox housing	180
7.2	Assembly overview - clutch housing	182
7.3	Repairing gearbox housing	183
7.4	Repairing clutch housing	191
8	Securing to engine and gearbox support	194
8.1	Installing manual gearbox to engine and gearbox support	194
8.2	Installing bevel box to engine and gearbox support	195
9	Gear oil	197
9.1	Checking gear oil level	197
9.2	Draining and filling gear oil	198
35 - Gears, shafts		202
1	Input shaft	202
1.1	Assembly overview - input shaft	202
1.2	Dismantling and assembling input shaft	203
1.3	Renewing input shaft seal	207
2	Output shaft	209
2.1	Assembly overview - output shaft	209
2.2	Dismantling and assembling output shaft	215
2.3	Adjusting output shaft	237
39 - Final drive - differential		247
1	Gear oil	247
1.1	Checking gear oil level	247
1.2	Draining and filling gear oil	249
2	Oil seals	253
2.1	Overview of fitting locations - seals	253
2.2	Renewing left seal	254
2.3	Renewing right oil seal	257
3	Differential	266
3.1	Assembly overview - differential	266



3.2	Dismantling and assembling differential	271
3.3	Adjusting differential	282
4	Adjustment overview	287
5	Components of bevel box	288
5.1	Assembly overview - components of bevel box	288
5.2	Renewing bevel box seals	290
5.3	Renewing output flange and redetermining thickness of shim	301
5.4	Removing and installing right flange shaft	301
5.5	Renewing needle bearing (polygon bearing) for right flange shaft, and seal on right flange shaft	304