



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when tow-starting or towing	2
1.4 General safety provisions	2
<b>2 Identification</b>	<b>4</b>
2.1 Gearbox identification	4
2.2 Identification of bevel box	5
<b>3 Repair notes</b>	<b>6</b>
3.1 Rules for cleanliness	6
3.2 General repair instructions	6
3.3 Gaskets and seals	8
3.4 Nuts and bolts	8
3.5 Electrical components	9
<b>4 Technical data</b>	<b>10</b>
4.1 Capacities	10
4.2 Allocation gearbox - engine	10
<b>5 Electrical components</b>	<b>12</b>
5.1 Overview of fitting locations - electrical components	12
<b>30 - Clutch</b>	<b>13</b>
<b>1 Clutch</b>	<b>13</b>
1.1 Assembly overview - dual clutch	13
1.2 Removing and installing clutch end cover	15
1.3 Removing dual clutch	21
1.4 Installing dual clutch	23
<b>34 - Controls, housing</b>	<b>30</b>
<b>1 Mechatronic unit</b>	<b>30</b>
1.1 Removing and installing mechatronic unit	30
1.2 Removing and installing gearbox input speed sender G182 and oil temperature sender in multi-plate clutch G509	49
<b>2 Bevel box</b>	<b>51</b>
2.1 Assembly overview - bevel box	51
2.2 Removing bevel box	52
2.3 Installing bevel box	59
<b>3 Selector mechanism</b>	<b>65</b>
3.1 Assembly overview - selector mechanism	65
3.2 Emergency release from position P	66
3.3 Removing and installing selector mechanism	67
3.4 Checking selector mechanism	72
3.5 Checking and adjusting selector lever cable	73
3.6 Removing and installing selector lever handle	76
3.7 Moving push-button in the handle to installation position	78
3.8 Renewing selector shaft seal	79
<b>4 Removing and installing gearbox</b>	<b>82</b>
4.1 Distinguishing between different types of engines	82
4.2 Specified torques for gearbox	83
4.3 Removing gearbox	83
4.4 Installing gearbox	114
<b>5 Assembly mountings</b>	<b>124</b>



5.1	Assembly overview - assembly mountings	124
<b>6</b>	<b>Transporting gearbox</b>	<b>127</b>
<b>7</b>	<b>Dismantling and assembling gearbox</b>	<b>129</b>
7.1	Assembly overview - gearbox	129
<b>8</b>	<b>Securing to engine and gearbox support</b>	<b>133</b>
<b>9</b>	<b>Gear oil circuit</b>	<b>135</b>
9.1	Removing and installing gear oil cooler	135
9.2	Removing and installing gear oil pump	139
9.3	Removing and installing gear oil filter	142
<b>10</b>	<b>Gear oil</b>	<b>144</b>
10.1	Checking gear oil level	144
10.2	Draining and filling gear oil	148
<b>35 - Gears, shafts</b>		<b>153</b>
1	Currently, no repairs can be made to gears and shafts	153
<b>39 - Final drive - differential</b>		<b>154</b>
<b>1</b>	<b>Gear oil</b>	<b>154</b>
1.1	Checking gear oil level	154
1.2	Draining and filling gear oil	155
<b>2</b>	<b>Oil seals</b>	<b>160</b>
2.1	Overview of fitting locations - seals	160
2.2	Renewing left seal	161
2.3	Renewing right oil seal	164
<b>3</b>	<b>Differential</b>	<b>173</b>
3.1	Assembly overview - differential	173
<b>4</b>	<b>Components of bevel box</b>	<b>174</b>
4.1	Assembly overview - components of bevel box	174
4.2	Renewing bevel box seals	175
4.3	Renewing output flange and redetermining thickness of shim	186
4.4	Renewing needle bearing (polygon bearing) for right flange shaft, and seal on right flange shaft	186