



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on the mechatronic unit	1
1.4 Safety precautions when tow-starting or towing	3
1.5 General safety provisions	3
2 Identification	4
2.1 Gearbox identification	4
3 Repair instructions	5
3.1 General information	5
3.2 General repair instructions	7
3.3 Gaskets and seals	8
3.4 Nuts and bolts	9
3.5 Electrical components	9
4 Technical data	10
4.1 Capacities	10
4.2 Allocation gearbox - engine	11
5 Overview - power transmission	12
5.1 Overview - power transmission - front-wheel drive	12
30 - Clutch	13
1 Clutch operation	13
1.1 Assembly overview - clutch engagement	13
1.2 Removing and installing clutch engagement	14
1.3 Adjusting clutch engagement	17
2 Clutch	30
2.1 Assembly overview - dual clutch	30
2.2 Installing dual clutch	31
2.3 Removing dual clutch	36
2.4 Renewing input shaft seal	41
2.5 Renewing oil seal for inner input shaft	43
34 - Controls, housing	46
1 Mechatronic unit	46
1.1 Assembly overview - mechatronic unit	46
1.2 Removing and installing mechatronic unit	47
1.3 Setting mechatronic unit to removal position by hand	63
1.4 Renewing control unit for mechatronic unit for dual clutch gearbox J743	65
2 Selector mechanism	70
2.1 Assembly overview - selector mechanism	70
2.2 Emergency release from position P	71
2.3 Removing and installing selector mechanism	72
2.4 Checking selector mechanism	75
2.5 Checking and adjusting selector lever cable	76
2.6 Removing and installing selector lever handle	79
2.7 Moving push-button in the handle to installation position	81
2.8 Renewing selector shaft seal	82
3 Removing and installing gearbox	83
3.1 Specified torques for gearbox	83
3.2 Removing gearbox	83
3.3 Installing gearbox	94



4	Assembly mountings	100
4.1	Assembly overview - assembly mountings	100
5	Transporting gearbox	102
6	Dismantling and assembling gearbox	105
7	Securing to engine and gearbox support	106
8	Gear oil	108
8.1	Draining and filling gear oil	108
35 - Gears, shafts		112
1	Dismantling and assembling gears and shafts	112
2	Parking lock	113
2.1	Removing and installing cover for parking lock	113
2.2	Removing and installing parking lock	114
39 - Final drive - differential		117
1	Oil seals	117
1.1	Overview of fitting locations - seals	117
1.2	Renewing left seal	117
1.3	Renewing right oil seal	121