



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on ignition system	2
1.6 Safety precautions when working on exhaust system	3
<b>2 Identification</b>	<b>4</b>
2.1 Engine number/engine data	4
<b>3 Repair instructions</b>	<b>5</b>
3.1 Rules for cleanliness	5
3.2 General information	6
3.3 Foreign objects in engine	6
3.4 Contact corrosion	7
3.5 Routing and attachment of lines	7
3.6 Fitting radiator and condensers	7
3.7 Checking vacuum system	7
<b>10 - Removing and installing engine</b>	<b>9</b>
<b>1 Removing and installing engine</b>	<b>9</b>
1.1 Removing engine	9
1.2 Separating engine and gearbox	15
1.3 Securing engine on engine and gearbox support	16
1.4 Installing engine	18
<b>2 Assembly mountings</b>	<b>22</b>
2.1 Assembly overview - assembly mountings	22
2.2 Removing and installing engine mounting	23
2.3 Removing and installing gearbox mounting	25
2.4 Removing and installing pendulum support	26
2.5 Supporting engine in installation position	27
2.6 Adjusting assembly mountings	29
2.7 Checking adjustment of assembly mountings (engine and gearbox mountings)	31
<b>13 - Crankshaft group</b>	<b>33</b>
<b>1 Cylinder block (pulley end)</b>	<b>33</b>
1.1 Assembly overview - poly V-belt drive	33
1.2 Removing and installing poly-V belt	36
1.3 Removing and installing tensioner for poly V-belt	39
1.4 Removing and installing vibration damper	40
1.5 Removing and installing engine support	42
1.6 Renewing crankshaft oil seal - belt pulley end	46
<b>2 Cylinder block, gearbox end</b>	<b>49</b>
2.1 Assembly overview - cylinder block, gearbox end	49
2.2 Removing and installing flywheel	50
2.3 Removing and installing sealing flange on gearbox side	51
<b>3 Crankshaft</b>	<b>58</b>
3.1 Crankshaft dimensions	58
3.2 Renewing needle bearing in crankshaft	58
3.3 Measuring axial clearance of crankshaft	60
<b>4 Pistons and conrods</b>	<b>62</b>
4.1 Assembly overview - pistons and conrods	62



4.2	Removing and installing pistons	64
4.3	Checking pistons and cylinder bores	65
4.4	Separating new conrod	66
4.5	Checking radial clearance of conrods	67
4.6	Removing and installing oil spray jets	67
<b>15</b>	<b>- Cylinder head, valve gear</b>	<b>69</b>
<b>1</b>	<b>Cylinder head</b>	<b>69</b>
1.1	Assembly overview - cylinder head	69
1.2	Assembly overview - camshaft housing	71
1.3	Removing and installing cylinder head	72
1.4	Removing and installing camshaft housing	76
1.5	Checking compression	79
<b>2</b>	<b>Toothed belt drive</b>	<b>81</b>
2.1	Assembly overview - toothed belt cover	81
2.2	Assembly overview - toothed belt	82
2.3	Removing and installing toothed belt	83
2.4	Checking valve timing	87
2.5	Adjusting valve timing	91
2.6	Removing toothed belt from camshaft	93
<b>3</b>	<b>Valve gear</b>	<b>98</b>
3.1	Assembly overview - valve gear	98
3.2	Measuring axial play of camshaft	99
3.3	Removing and installing camshaft oil seal	100
3.4	Removing and installing camshaft adjuster	105
3.5	Removing and installing camshaft control valve 1 N205	106
3.6	Removing and installing exhaust camshaft control valve 1 N318	107
3.7	Removing and installing valve stem seals	108
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>116</b>
4.1	Reworking valve seats	116
4.2	Checking valve guides	117
4.3	Checking valves	118
4.4	Valve dimensions	119
<b>17</b>	<b>- Lubrication</b>	<b>120</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>120</b>
1.1	Assembly overview - sump/oil pump	120
1.2	Engine oil:	123
1.3	Removing and installing sump	124
1.4	Removing and installing oil pump	129
1.5	Removing and installing oil level and oil temperature sender G266	131
<b>2</b>	<b>Engine oil cooler</b>	<b>132</b>
2.1	Assembly overview - engine oil cooler	132
2.2	Removing and installing engine oil cooler	132
<b>3</b>	<b>Crankcase ventilation</b>	<b>134</b>
3.1	Assembly overview - crankcase breather system	134
3.2	Removing and installing oil separator	135
<b>4</b>	<b>Oil filter, oil pressure switch</b>	<b>137</b>
4.1	Assembly overview - oil filter/oil pressure switch	137
4.2	Removing and installing oil pressure sender G10	138
4.3	Checking oil pressure	139
4.4	Removing and installing oil pressure regulating valve N428	139
<b>19</b>	<b>- Cooling</b>	<b>141</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>141</b>



1.1	Connection diagram - coolant hoses	141
1.2	Checking cooling system for leaks	142
1.3	Draining and adding coolant	144
<b>2</b>	<b>Coolant pump, regulation of cooling system</b>	<b>151</b>
2.1	Assembly overview - coolant pump, thermostat	151
2.2	Assembly overview - electric coolant pump	153
2.3	Assembly overview - coolant temperature sender	155
2.4	Removing and installing electric coolant pump	155
2.5	Removing and installing coolant pump	157
2.6	Removing and installing thermostat	162
2.7	Removing and installing toothed belt pulley for coolant pump	165
2.8	Removing and installing coolant temperature sender G62	166
2.9	Removing and installing radiator outlet coolant temperature sender G83	167
<b>3</b>	<b>Coolant pipes</b>	<b>169</b>
3.1	Assembly overview - coolant pipes	169
3.2	Removing and installing coolant pipes	169
<b>4</b>	<b>Radiator, radiator fan</b>	<b>172</b>
4.1	Assembly overview - radiator/radiator fan	172
4.2	Assembly overview - radiator cowl and radiator fan	174
4.3	Removing and installing radiator	174
4.4	Removing and installing radiator cowl with radiator fan	177
4.5	Removing and installing radiator fan V7	178
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>180</b>
<b>1</b>	<b>Turbocharger</b>	<b>180</b>
1.1	Assembly overview - turbocharger	180
1.2	Removing and installing turbocharger	182
1.3	Removing and installing charge pressure positioner V465	186
<b>2</b>	<b>Charge air system</b>	<b>189</b>
2.1	Assembly overview - charge air system	189
2.2	Removing and installing charge air cooler	191
2.3	Removing and installing charge air pressure sender G31 / intake air temperature sender G42	192
2.4	Checking charge air system for leaks	193
2.5	Removing and installing air pipe	194
<b>24</b>	<b>Mixture preparation - injection</b>	<b>196</b>
<b>1</b>	<b>Injection system</b>	<b>196</b>
1.1	Overview of fitting locations - injection system	196
<b>2</b>	<b>Injectors</b>	<b>199</b>
2.1	Assembly overview - fuel rail with injectors	199
2.2	Removing and installing fuel rail	200
2.3	Removing and installing injectors	200
2.4	Renewing seals on injectors	204
2.5	Cleaning injectors	207
<b>3</b>	<b>Air filter</b>	<b>209</b>
3.1	Assembly overview - air filter housing	209
3.2	Removing and installing air filter housing	210
<b>4</b>	<b>Intake manifold</b>	<b>212</b>
4.1	Assembly overview - intake manifold	212
4.2	Removing and installing intake manifold	213
4.3	Removing and installing throttle valve module GX3	216
4.4	Cleaning throttle valve module	216
<b>5</b>	<b>Senders and sensors</b>	<b>218</b>
5.1	Removing and installing fuel pressure sender G247	218



5.2	Checking fuel pressure sender G247	219
5.3	Removing and installing intake manifold sender GX9	221
<b>6</b>	<b>Engine control unit</b>	<b>223</b>
6.1	Removing and installing engine (motor) control unit J623 with protective housing	223
<b>7</b>	<b>High-pressure pump</b>	<b>225</b>
7.1	Assembly overview - high-pressure pump	225
7.2	Removing and installing high-pressure pump	226
7.3	Removing and installing high-pressure pipe	227
<b>8</b>	<b>Lambda probe</b>	<b>229</b>
8.1	Assembly overview - Lambda probe	229
8.2	Removing and installing Lambda probe	230
<b>26 - Exhaust system</b>		<b>232</b>
<b>1</b>	<b>Exhaust pipes and silencers</b>	<b>232</b>
1.1	Assembly overview - silencers	232
1.2	Separating exhaust pipes from silencers	233
1.3	Aligning exhaust system free of stress	234
1.4	Checking exhaust system for leaks	235
1.5	Installation position of clamp	235
<b>2</b>	<b>Emission control</b>	<b>238</b>
2.1	Assembly overview - emission control	238
2.2	Removing and installing catalytic converter	239
<b>28 - Ignition system</b>		<b>242</b>
<b>1</b>	<b>Ignition system</b>	<b>242</b>
1.1	Assembly overview - ignition system	242
1.2	Removing and installing ignition coils with output stage	243
1.3	Removing and installing knock sensor 1 G61	245
1.4	Removing and installing Hall sender	245
1.5	Removing and installing engine speed sender G28	246