



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on ignition system	2
1.6 Safety precautions when working on exhaust system	3
2 Identification	4
2.1 Engine number/engine data	4
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 General information	5
3.3 Foreign objects in engine	6
3.4 Contact corrosion	6
3.5 Routing and attachment of lines	6
3.6 Fitting radiator and condensers	6
3.7 Checking vacuum system	7
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Separating engine and gearbox	16
1.3 Securing engine on engine and gearbox support	20
1.4 Installing engine	21
2 Assembly mountings	27
2.1 Assembly overview - assembly mountings	27
2.2 Removing and installing engine mounting	28
2.3 Removing and installing gearbox mounting	30
2.4 Removing and installing pendulum support	31
2.5 Supporting engine in installation position	32
2.6 Adjusting assembly mountings	34
2.7 Checking adjustment of assembly mountings (engine and gearbox mountings)	36
13 - Crankshaft group	37
1 Cylinder block (pulley end)	37
1.1 Assembly overview - poly V-belt drive	37
1.2 Assembly overview - sealing flange, belt pulley end	41
1.3 Removing and installing poly-V belt	42
1.4 Removing and installing tensioner for poly V-belt	45
1.5 Removing and installing vibration damper	45
1.6 Removing and installing engine support	46
1.7 Renewing crankshaft oil seal - belt pulley end	49
1.8 Removing and installing sealing flange on pulley end	51
2 Cylinder block, gearbox end	54
2.1 Assembly overview - cylinder block, gearbox end	54
2.2 Removing and installing flywheel	55
2.3 Removing and installing sealing flange on gearbox side	56
3 Crankshaft	64
3.1 Crankshaft dimensions	64
3.2 Renewing needle bearing in crankshaft	64
3.3 Measuring axial clearance of crankshaft	66



4	Pistons and conrods	68
4.1	Assembly overview - pistons and conrods	68
4.2	Removing and installing pistons	70
4.3	Checking pistons and cylinder bores	71
4.4	Separating new conrod	72
4.5	Checking radial clearance of conrods	73
4.6	Removing and installing oil spray jets	73
15 - Cylinder head, valve gear		75
1	Cylinder head	75
1.1	Assembly overview - cylinder head	75
1.2	Assembly overview - camshaft housing	77
1.3	Removing and installing cylinder head	78
1.4	Removing and installing camshaft housing	82
1.5	Checking compression	84
2	Toothed belt drive	87
2.1	Assembly overview - toothed belt cover	87
2.2	Assembly overview - toothed belt	88
2.3	Checking valve timing	89
2.4	Removing toothed belt from camshaft	94
2.5	Removing and installing toothed belt	108
3	Valve gear	124
3.1	Assembly overview - valve gear	124
3.2	Removing and installing camshaft adjuster	125
3.3	Measuring axial play of camshaft	126
3.4	Removing and installing camshaft oil seal	127
3.5	Removing and installing camshaft control valve 1 N205	132
3.6	Removing and installing valve stem seals	133
4	Inlet and exhaust valves	142
4.1	Checking valve guides	142
4.2	Checking valves	142
4.3	Valve dimensions	143
17 - Lubrication		144
1	Sump, oil pump	144
1.1	Assembly overview - sump/oil pump	144
1.2	Engine oil:	146
1.3	Removing and installing lower part of sump	146
1.4	Removing and installing upper part of sump	149
1.5	Removing and installing oil pump	152
2	Engine oil cooler	155
2.1	Assembly overview - engine oil cooler	155
2.2	Removing and installing engine oil cooler	155
3	Crankcase ventilation	157
3.1	Assembly overview - crankcase breather system	157
3.2	Removing and installing oil separator	158
4	Oil filter, oil pressure switch	160
4.1	Assembly overview - oil filter/oil pressure switch	160
4.2	Removing and installing oil pressure switch F1	160
4.3	Checking oil pressure	161
19 - Cooling		164
1	Cooling system/coolant	164
1.1	Connection diagram - coolant hoses	164
1.2	Draining and adding coolant	165



1.3	Checking cooling system for leaks	170
2	Coolant pump, regulation of cooling system	173
2.1	Assembly overview - coolant pump, thermostat	173
2.2	Assembly overview - coolant temperature sender	175
2.3	Removing and installing coolant pump	177
2.4	Removing and installing toothed belt pulley for coolant pump	181
2.5	Removing and installing thermostat	182
2.6	Removing and installing coolant temperature sender G62	184
2.7	Removing and installing radiator outlet coolant temperature sender G83	186
3	Coolant pipes	188
3.1	Assembly overview - coolant pipes	188
3.2	Removing and installing coolant pipes	188
4	Radiator, radiator fan	191
4.1	Assembly overview - radiator/radiator fan	191
4.2	Assembly overview - radiator cowl and radiator fan	192
4.3	Removing and installing radiator	192
4.4	Removing and installing radiator cowl with radiator fan	195
4.5	Removing and installing radiator fan	196
24 - Mixture preparation - injection	198	
1	Injection system	198
1.1	Overview of fitting locations - injection system	198
1.2	Assembly overview - fuel system	202
2	Injectors	204
2.1	Assembly overview - fuel rail with injectors	204
2.2	Removing and installing fuel rail	204
2.3	Removing and installing injectors	206
2.4	Cleaning injectors	207
3	Air filter	209
3.1	Assembly overview - air filter housing	209
3.2	Removing and installing air filter housing	210
4	Intake manifold	212
4.1	Assembly overview - intake manifold	212
4.2	Removing and installing intake manifold	213
4.3	Removing and installing throttle valve module GX3	215
4.4	Cleaning throttle valve module GX3	216
5	Senders and sensors	217
5.1	Removing and installing intake manifold sender GX9	217
6	Engine control unit	218
6.1	Removing and installing engine (motor) control unit J623 with protective housing	218
7	Lambda probe	221
7.1	Assembly overview - Lambda probe	221
7.2	Removing and installing lambda probe 1 before catalytic converter GX10 / lambda probe 1 after catalytic converter GX7	221
26 - Exhaust system	223	
1	Exhaust pipes and silencers	223
1.1	Assembly overview - silencers	223
1.2	Separating exhaust pipes from silencers	223
1.3	Aligning exhaust system free of stress	224
1.4	Checking exhaust system for leaks	226
1.5	Installation position of clamp	226
2	Emission control	228
2.1	Assembly overview - emission control	228



2.2	Removing and installing catalytic converter	229
28 - Ignition system		232
1	Ignition system	232
1.1	Assembly overview - ignition system	232
1.2	Test data, spark plugs	233
1.3	Removing and installing ignition coils with output stage	233
1.4	Removing and installing knock sensor 1 G61	235
1.5	Removing and installing Hall sender G40	236
1.6	Removing and installing engine speed sender G28	236