



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on ignition system	2
1.6 Safety precautions when working on exhaust system	3
2 Identification	4
2.1 Engine number/engine data	4
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 General information	6
3.3 Foreign objects in engine	6
3.4 Contact corrosion	7
3.5 Routing and attachment of lines	7
3.6 Fitting radiator and condensers	7
3.7 Checking vacuum system	7
10 - Removing and installing engine	9
1 Removing and installing engine	9
1.1 Removing engine	9
1.2 Separating engine and gearbox	18
1.3 Securing engine on engine and gearbox support	21
1.4 Installing engine	22
2 Assembly mountings	28
2.1 Assembly overview - assembly mountings	28
2.2 Removing and installing engine mounting	29
2.3 Removing and installing gearbox mounting	31
2.4 Removing and installing pendulum support	33
2.5 Supporting engine in installation position	34
2.6 Adjusting assembly mountings	36
2.7 Checking adjustment of assembly mountings (engine and gearbox mountings)	39
3 Engine cover panel	40
3.1 Removing and installing engine cover	40
13 - Crankshaft group	41
1 Cylinder block (pulley end)	41
1.1 Assembly overview - poly V-belt drive	41
1.2 Assembly overview - cylinder block (pulley end)	44
1.3 Assembly overview - sealing flange, belt pulley end	46
1.4 Removing and installing poly-V belt	47
1.5 Removing and installing tensioner for poly V-belt	49
1.6 Removing and installing vibration damper	49
1.7 Removing and installing bracket for ancillaries	50
1.8 Removing and installing engine support	52
1.9 Renewing crankshaft oil seal - belt pulley end	53
1.10 Removing and installing sealing flange on pulley end	55
2 Cylinder block, gearbox end	58
2.1 Assembly overview - cylinder block, gearbox end	58
2.2 Removing and installing flywheel	59
2.3 Removing and installing sealing flange on gearbox side	60



3	Crankshaft	68
3.1	Assembly overview - crankshaft	68
3.2	Crankshaft dimensions	69
3.3	Renewing needle bearing in crankshaft	69
3.4	Measuring axial clearance of crankshaft	71
4	Pistons and conrods	72
4.1	Assembly overview - pistons and conrods	72
4.2	Removing and installing pistons	74
4.3	Measuring piston projection at TDC	75
4.4	Checking pistons and cylinder bores	77
4.5	Separating new conrod	78
4.6	Checking radial clearance of conrods	79
4.7	Removing and installing oil spray jets	79
15 - Cylinder head, valve gear		81
1	Cylinder head	81
1.1	Assembly overview - cylinder head	81
1.2	Assembly overview - cylinder head cover	83
1.3	Removing and installing cylinder head	86
1.4	Removing and installing cylinder head cover	99
1.5	Removing and installing injector seals	104
1.6	Removing and installing vacuum pump	105
1.7	Checking compression	106
2	Fully enclosing toothed belt guard	108
2.1	Assembly overview - fully enclosing toothed belt guard	108
2.2	Removing and installing upper toothed belt guard (fully enclosing)	109
2.3	Removing and installing lower toothed belt guard (fully enclosed)	110
2.4	Removing and installing rear toothed belt guard (fully enclosing)	111
3	Toothed belt drive	116
3.1	Assembly overview - toothed belt	116
3.2	Removing and installing toothed belt	119
4	Valve gear	129
4.1	Assembly overview - valve gear	129
4.2	Measuring axial play of camshaft	131
4.3	Measuring radial play of camshaft	132
4.4	Removing and installing camshaft oil seal	132
4.5	Removing and installing camshaft	134
4.6	Checking hydraulic compensation elements	141
4.7	Removing and installing valve stem seals	142
5	Inlet and exhaust valves	150
5.1	Reworking valve seats	150
5.2	Checking valve guides	150
5.3	Checking valves	151
5.4	Valve dimensions	151
17 - Lubrication		152
1	Sump, oil pump	152
1.1	Assembly overview - sump/oil pump	152
1.2	Engine oil:	155
1.3	Removing and installing sump	155
1.4	Removing and installing oil pump	159
1.5	Removing and installing oil level and oil temperature sender G266	161
2	Engine oil cooler	163
2.1	Assembly overview - engine oil cooler	163
2.2	Removing and installing engine oil cooler	163



3	Oil filter, oil pressure switch	167
3.1	Assembly overview - oil filter housing, oil pressure switch	167
3.2	Removing and installing oil filter housing	168
3.3	Removing and installing oil pressure switch F1	170
3.4	Checking oil pressure and oil pressure switch	171
4	Oil circuit	174
4.1	Assembly overview - oil circuit	174
4.2	Removing and installing oil return line for turbocharger	175
19 - Cooling		179
1	Cooling system/coolant	179
1.1	Connection diagram - coolant hoses	179
1.2	Checking cooling system for leaks	180
1.3	Draining and adding coolant	183
2	Coolant pump, regulation of cooling system	192
2.1	Assembly overview - coolant pump, thermostat	192
2.2	Removing and installing coolant pump	192
2.3	Removing and installing 4/2-way valve with thermostat	193
2.4	Removing and installing coolant temperature sender G62	195
2.5	Removing and installing radiator outlet coolant temperature sender G83	197
3	Coolant pipes	199
3.1	Assembly overview - coolant pipes	199
3.2	Removing and installing coolant pipes	200
4	Radiator, radiator fan	207
4.1	Assembly overview - radiator/radiator fan	207
4.2	Assembly overview - radiator cowl and radiator fan	208
4.3	Removing and installing radiator	208
4.4	Removing and installing radiator cowl with radiator fan	210
21 - Turbocharging/supercharging		211
1	Turbocharger	211
1.1	Assembly overview - turbocharger	211
1.2	Removing and installing turbocharger	213
2	Charge air system	216
2.1	Assembly overview - charge air system	216
2.2	Assembly overview - charge-air hose connections	217
2.3	Removing and installing charge air cooler	218
2.4	Removing and installing charge air pressure sender G31 / intake air temperature sender G42	219
2.5	Checking charge air system for leaks	220
2.6	Removing and installing air pipe	223
23 - Mixture preparation - injection		226
1	Injection system	226
1.1	Schematic overview - fuel system	226
1.2	Overview of fitting locations - injection system	228
1.3	Assembly overview - fuel system	230
1.4	Filling/bleeding fuel system	233
1.5	Checking fuel system for leaks	234
2	Vacuum system	235
2.1	Connection diagram - vacuum system	235
2.2	Checking vacuum system	236
3	Injectors/high-pressure accumulator (rail)	246
3.1	Assembly overview - injectors	246
3.2	Assembly overview - fuel rail	247



3.3	Adapting correction values for injectors	247
3.4	Testing injectors	248
3.5	Checking return flow rate of injectors with engine running	248
3.6	Checking return flow rate of injectors at starter speed	251
3.7	Testing jammed-open injectors	252
3.8	Check pressure retention valve in fuel return line	253
3.9	Removing and installing injectors	255
3.10	Removing and installing high-pressure lines	259
3.11	Removing and installing fuel rail	264
4	Air filter	267
4.1	Assembly overview - air filter housing	267
4.2	Removing and installing air filter housing	268
5	Intake manifold	271
5.1	Assembly overview - intake manifold	271
5.2	Removing and installing intake manifold	272
5.3	Removing and installing throttle valve module GX3	275
6	Senders and sensors	276
6.1	Removing and installing fuel pressure regulating valve N276	276
6.2	Checking fuel pressure regulating valve N276	278
6.3	Removing and installing fuel pressure sender G247	279
6.4	Removing and installing air mass meter G70	281
6.5	Removing and installing exhaust gas pressure sensor 1 G450	282
7	Engine control unit	284
7.1	Removing and installing engine (motor) control unit J623 with protective housing	284
8	High-pressure pump	286
8.1	Assembly overview - high-pressure pump	286
8.2	Removing and installing high-pressure pump	286
8.3	Checking high-pressure pump	289
9	Lambda probe	292
9.1	Removing and installing Lambda probe	292
26 - Exhaust system		293
1	Exhaust pipes and silencers	293
1.1	Assembly overview - silencers	293
1.2	Separating exhaust pipes from silencers	294
1.3	Aligning exhaust system free of stress	295
1.4	Checking exhaust system for leaks	296
1.5	Installation position of clamp	296
2	Emission control	299
2.1	Assembly overview - emission control	299
2.2	Removing and installing particulate filter	300
3	Exhaust gas temperature regulation	305
3.1	Assembly overview - exhaust gas temperature regulation	305
3.2	Removing and installing exhaust gas temperature sender	306
4	Exhaust gas recirculation	310
4.1	Assembly overview - exhaust gas recirculation	310
4.2	Removing and installing exhaust gas recirculation cooler	311
4.3	Checking exhaust gas recirculation cooler for leaks	313
4.4	Checking changeover for exhaust gas recirculation cooler	313
4.5	Cleaning exhaust gas recirculation system	315
28 - Glow plug system		322
1	Glow plug system	322
1.1	Removing and installing glow plug	322



1.2	Checking glow plug	324
1.3	Removing and installing automatic glow period control unit J179	324
1.4	Removing and installing Hall sender G40	324
1.5	Removing and installing engine speed sender G28	325