



## Contents

<b>00 - Technical data</b>	<b>1</b>
1 <b>Safety information</b>	1
1.1    Safety measures when working on fuel supply	1
1.2    Safety precautions when using testers and measuring instruments during a road test	1
1.3    Safety measures when working on vehicles with a start/stop system	2
1.4    Safety precautions when working on exhaust system	2
2 <b>Identification</b>	3
2.1    Engine number/engine data	3
3 <b>General information</b>	4
3.1    Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	4
4 <b>Repair instructions</b>	5
4.1    Routing and attachment of lines	5
4.2    General repair instructions	5
<b>20 - Fuel supply system</b>	<b>6</b>
1 <b>Fuel</b>	6
1.1    Assembly overview - fuel tank	6
1.2    Emptying fuel tank	8
1.3    Removing and installing fuel tank	11
2 <b>Fuel delivery unit, fuel gauge sender</b>	16
2.1    Assembly overview - fuel delivery unit/fuel gauge sender	16
2.2    Removing and installing fuel delivery unit, fuel gauge sender	17
2.3    Removing and installing fuel gauge sender G	20
3 <b>Plug-in connectors</b>	21
3.1    Separating plug-in connectors	21
4 <b>Fuel filter</b>	25
4.1    Assembly overview - fuel filter	25
4.2    Removing and installing fuel filter	26
5 <b>Activated charcoal filter system</b>	28
5.1    Assembly overview – activated charcoal filter system	28
5.2    Checking fuel tank breather	28
6 <b>Accelerator pedal</b>	30
6.1    Assembly overview - accelerator module	30
6.2    Removing and installing accelerator module with accelerator position sender G79 / G185	30
7 <b>Fuel pump</b>	33
7.1    Checking fuel system pressurisation pump G6	33
7.2    Removing and installing fuel pump control unit J538	43