



Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Safety information | 1 |
| 1.1 Safety precautions when working on vehicles with a gas system | 1 |
| 1.2 Safety regulations for working on fuel supply | 3 |
| 1.3 Safety measures when working on vehicles with start/stop system | 4 |
| 1.4 Safety precautions when using testers and measuring instruments during a road test | 4 |
| 1.5 Safety precautions when working on exhaust system | 4 |
| 2 Identification | 6 |
| 2.1 Engine number/engine data | 6 |
| 3 General information | 7 |
| 3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system | 7 |
| 4 Repair notes | 8 |
| 4.1 Rules for cleanliness | 8 |
| 4.2 General information | 9 |
| 4.3 Contact corrosion | 9 |
| 4.4 Routing and attachment of lines | 10 |
| 4.5 General repair instructions | 10 |
| 20 - Fuel supply system | 11 |
| 1 Fuel system | 11 |
| 1.1 Overview of fitting locations - fuel system | 11 |
| 2 Fuel | 14 |
| 2.1 Assembly overview - fuel tank | 14 |
| 2.2 Assembly overview - fuel tank shut-off valve | 23 |
| 2.3 Emptying fuel tank | 25 |
| 2.4 Removing and installing fuel tank | 34 |
| 2.5 Removing and installing fuel tank shut-off valve | 41 |
| 2.6 Releasing high pressure in fuel system | 52 |
| 2.7 Removing and installing solenoid of fuel tank shut-off valve N361 / N362 | 52 |
| 2.8 Removing and installing filling connection | 54 |
| 2.9 Determining residual pressure in natural gas fuel tank | 57 |
| 3 Fuel delivery unit, fuel gauge sender | 69 |
| 3.1 Assembly overview - fuel delivery unit/fuel gauge sender | 69 |
| 3.2 Removing and installing fuel delivery unit, fuel gauge sender | 70 |
| 3.3 Removing and installing fuel gauge sender G | 72 |
| 4 Plug-in connectors | 73 |
| 4.1 Separating plug-in connectors | 73 |
| 5 Fuel filter | 77 |
| 5.1 Assembly overview - fuel filter | 77 |
| 5.2 Removing and installing fuel filter | 78 |
| 6 Activated charcoal filter system | 80 |
| 6.1 Assembly overview - activated charcoal filter system | 80 |
| 6.2 Checking fuel tank breather | 80 |
| 7 Accelerator pedal | 82 |
| 7.1 Assembly overview - accelerator module | 82 |
| 7.2 Removing and installing accelerator module with accelerator position sender G79 / G185 | 82 |
| 8 Fuel pump | 85 |
| 8.1 Checking fuel system pressurisation pump G6 | 85 |