



Contents

| | | |
|----------|---|-----------|
| 1 | Engine list | 1 |
| 2 | Service work | 2 |
| 2.1 | Information about flexible or fixed service | 2 |
| 2.2 | Service tables | 4 |
| 3 | General information | 12 |
| 3.1 | Raising vehicle with lifting platform or trolley jack | 12 |
| 3.2 | Connecting vehicle diagnostic tester | 13 |
| 3.3 | Vehicle identification number (chassis number) | 14 |
| 3.4 | Vehicle data sticker | 16 |
| 3.5 | Severe operating conditions | 16 |
| 3.6 | Countries with hot climate | 17 |
| 3.7 | Country overview for diesel not compliant with EN 590 | 17 |
| 3.8 | Country overview for petrol not compliant with EN 228 | 18 |
| 3.9 | Engine code and engine number | 19 |
| 3.10 | Countries with high levels of dust | 19 |
| 3.11 | Stickers | 20 |
| 3.12 | Entries in the Digital Service Schedule | 21 |
| 3.13 | Type plate | 21 |
| 3.14 | Shortened intervals for spark plug replacement | 22 |
| 4 | Descriptions of work | 26 |
| 4.1 | Removable towing bracket: checking and cleaning if necessary | 27 |
| 4.2 | Swivel joints, axle mountings, coupling rod bearings, Panhard rod bracket and anti-roll bar rubber mountings: performing visual inspection for damage | 30 |
| 4.3 | Reading ash mass (saturation level) of diesel particulate filter | 34 |
| 4.4 | Battery: checking battery terminal clamps for secure seating | 34 |
| 4.5 | Battery (12V): checking with battery tester (always refer to workshop manual) | 37 |
| 4.6 | Status of battery (12V): reading - sending diagnosis protocol via online connection | 37 |
| 4.7 | Charge battery (establish backup power supply) | 38 |
| 4.8 | Airbag system: Checking | 38 |
| 4.9 | Checking tyres: condition, wear pattern, tyre pressure, tread depth | 39 |
| 4.10 | Brake system and shock absorbers: inspecting for leaks and damage | 45 |
| 4.11 | Thickness of brake pads/linings and condition of brake discs, front and rear: checking thickness | 47 |
| 4.12 | Brake and clutch system: change brake fluid | 54 |
| 4.13 | Brake fluid level: Check | 61 |
| 4.14 | Dual clutch gearbox 0GC: changing gear oil | 62 |
| 4.15 | All-wheel drive coupling: changing oil | 63 |
| 4.16 | Electric windows: checking positioning (open and close functions) | 66 |
| 4.17 | Reading event memory of all systems using vehicle diagnostic tester and rectifying any faults according to repair guidelines | 67 |
| 4.18 | Boots: inspecting | 69 |
| 4.19 | Bringing ERA GLONASS into operation | 69 |
| 4.20 | Dust and pollen filter (interior filter): cleaning housing and renewing filter element | 70 |
| 4.21 | Poly V-belt: checking condition | 71 |
| 4.22 | Poly V-belt: renewing | 72 |
| 4.23 | Diesel fuel filter: renewing | 72 |
| 4.24 | Diesel particulate filter: Check | 75 |
| 4.25 | Coolant level: Checking | 76 |
| 4.26 | Air filter: cleaning housing and renewing filter element | 79 |
| 4.27 | Upper engine cover panel: Removing and installing | 83 |
| 4.28 | Removing and installing engine compartment cover -bottom- (noise insulation) | 84 |
| 4.29 | Engine oil level: checking | 84 |
| 4.30 | Engine oil: Draining, renewing oil filter and filling engine oil. | 86 |
| 4.31 | Engine oil: capacities and specifications | 93 |



| | | |
|----------|--|------------|
| 4.32 | Engine and components in engine compartment: inspecting for leaks and damage (from above and below) | 94 |
| 4.33 | Checking breakdown set | 95 |
| 4.34 | Road test: performing (driving behaviour, noises, air conditioner etc.) | 96 |
| 4.35 | Tyre Pressure Loss Indicator: calibrating | 96 |
| 4.36 | Wheel securing bolts: tightening to specified torque | 97 |
| 4.37 | Windscreen wash/wipe system and headlight washer system: Checking function and settings | 99 |
| 4.38 | Wiper blades: checking park position | 103 |
| 4.39 | Headlight setting: Checking and adjusting | 104 |
| 4.40 | Service interval display: Reset | 112 |
| 4.41 | Service interval display: Adapting | 113 |
| 4.42 | Track rod ends: checking clearance, firm seating and boots | 114 |
| 4.43 | Transportation mode: switching off | 116 |
| 4.44 | Transportation protective film: Removing | 116 |
| 4.45 | Doors: greasing door arrester | 117 |
| 4.46 | Interior and exterior body: visual inspection for corrosion and obvious sheet panel cracks with doors and flaps open | 117 |
| 4.47 | Underseal: visual inspection for damage to underseal, underbody cladding, cable routing, plugs | 118 |
| 4.48 | Clock and date: setting | 118 |
| 4.49 | Toothed belt (petrol engines): renewing | 118 |
| 4.50 | Camshaft drive toothed belt (diesel engines): renewing | 118 |
| 4.51 | Spark plugs: Renew | 118 |
| 4.52 | Reducing agent (AdBlue®/DEF): replenishing | 122 |
| 4.53 | Reducing agent (AdBlue®/DEF): changing | 127 |
| 5 | Natural gas system | 128 |
| 6 | Exhaust emissions test | 129 |
| 6.1 | Exhaust emissions test for petrol engines | 129 |
| 6.2 | Exhaust emissions test for diesel engines | 131 |
| 7 | Periodic Technical Inspection (PTI) | 134 |