



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using test and measuring equipment during a road test	1
2 Identification	2
2.1 Allocation of PR number - brakes	2
3 Technical data	4
3.1 Technical data for brakes	4
4 Brake test	7
4.1 General information	7
4.2 Checking vehicles with front-wheel drive	7
4.3 Checking vehicles with all-wheel drive	7
4.4 Checking parking brake	8
45 - Anti-lock brake system	10
1 General information	10
1.1 Repair instructions for repair work on ABS	10
2 Overview of fitting locations	12
2.1 Overview of fitting locations - ABS/ESP	12
3 Control unit and hydraulic unit	15
3.1 Assembly overview - control unit and hydraulic unit	15
3.2 Removing and installing ABS control unit J104 and ABS hydraulic unit N55	19
3.3 Separating control unit from hydraulic unit	32
3.4 Fitting control unit to hydraulic unit	34
3.5 Connecting brake lines to hydraulic unit	35
4 Sensors	37
4.1 Assembly overview - speed sensor on front axle	37
4.2 Assembly overview – speed sensors on rear axle	37
4.3 Removing and installing ESP sensor unit G419	38
4.4 Removing and installing speed sensors on front axle G45/G47	38
4.5 Removing and installing speed sensors on rear axle G44/G46	39
4.6 Checking ABS sensor ring	40
46 - Brakes - mechanism	42
1 Front brake	42
1.1 Assembly overview - front brake	42
1.2 Removing and installing brake pads	44
1.3 Removing and installing brake caliper	47
1.4 Removing and installing brake carrier	49
1.5 Removing and installing brake disc	49
1.6 Removing and installing brake splash plate	50
2 Rear brake	52
2.1 Assembly overview - rear brakes	52
2.2 Removing and installing brake pads	54
2.3 Removing and installing brake caliper	58
2.4 Removing and installing brake carrier	62
2.5 Removing and installing brake disc	63
2.6 Removing and installing brake splash plate	64
3 Parking brake	66
3.1 Overview of fitting locations - parking brake	66
3.2 Removing and installing control unit for electromechanical parking brake J540	68
3.3 Removing and installing parking brake motor V282/V283	68



4	Brake pedal	70
4.1	Assembly overview - brake pedal	70
4.2	Removing and installing mounting bracket	72
4.3	Separating brake pedal from brake servo	75
4.4	Connecting brake pedal to brake servo	76
4.5	Removing and installing brake pedal	77
47 - Brakes - hydraulics		80
1	Front brake caliper	80
1.1	Assembly overview – front brake caliper	80
1.2	Removing and installing brake caliper piston	81
2	Rear brake caliper	84
2.1	Assembly overview – rear brake caliper	84
2.2	Removing and installing protective cap	84
3	Brake servo and brake master cylinder	88
3.1	Assembly overview - brake servo/brake master cylinder	88
3.2	Removing and installing brake servo NX6	92
3.3	Removing and installing brake master cylinder	97
3.4	Removing and installing brake fluid level warning contact F34	104
4	Brake lines	106
4.1	Repairing brake lines	106
5	Hydraulic system	112
5.1	General notes on brake fluid	112
5.2	Bleeding hydraulic system following standard procedure	112
5.3	Subsequent bleeding of hydraulic system	113
5.4	Leakage test	114