



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on subframe	1
<b>2 General information</b>	<b>2</b>
2.1 Running gear	2
2.2 Steering	2
2.3 Tyre types	2
<b>3 Repair instructions</b>	<b>3</b>
3.1 Checking shock absorbers when removed	3
3.2 Rules for cleanliness	3
3.3 General repair instructions	4
3.4 Contact corrosion	4
3.5 Gaskets and seals	4
3.6 Nuts and bolts	5
3.7 Electrical components	5
3.8 Routing and attachment of lines	5
3.9 Raising suspension to unladen position (vehicles with coil springs)	6
<b>4 Evaluating accident vehicles</b>	<b>11</b>
<b>5 Waste disposal</b>	<b>13</b>
5.1 Releasing gas and draining front gas-filled shock absorbers	13
5.2 Releasing gas and draining rear gas-filled shock absorbers	14
<b>40 - Front suspension</b>	<b>15</b>
<b>1 Front axle</b>	<b>15</b>
1.1 Overview of fitting locations - front axle	15
<b>2 Subframe</b>	<b>16</b>
2.1 Assembly overview - subframe	16
2.2 Removing and installing subframe without steering rack	20
2.3 Removing and installing subframe with steering rack	23
2.4 Repairing subframe	24
2.5 Removing and installing anti-roll bar	35
2.6 Removing and installing coupling rod	36
2.7 Repairing thread in longitudinal member	37
2.8 Fixing position of subframe	37
2.9 Lowering subframe	42
<b>3 Suspension strut, upper suspension link</b>	<b>46</b>
3.1 Assembly overview - suspension strut, upper suspension link	46
3.2 Removing and installing suspension strut	46
3.3 Repairing suspension strut	53
<b>4 Lower suspension link, swivel joint</b>	<b>57</b>
4.1 Assembly overview - lower suspension link, swivel joint	57
4.2 Removing and installing lower suspension link	58
4.3 Checking swivel joint	61
4.4 Removing and installing swivel joint	61
4.5 Renewing bonded rubber bush for lower suspension link	63
<b>5 Wheel bearing</b>	<b>71</b>
5.1 Assembly overview - wheel bearing	71
5.2 Removing and installing wheel bearing housing	71
5.3 Removing and installing wheel bearing unit	78



<b>6</b>	<b>Drive shaft</b>	<b>83</b>
6.1	Assembly overview - drive shaft	83
6.2	Removing and installing drive shaft	87
6.3	Loosening and tightening threaded connections of drive shaft	94
6.4	Removing and installing drive shaft heat shield	96
6.5	Dismantling and assembling drive shaft	97
6.6	Checking outer constant velocity joint	107
6.7	Checking inner constant velocity joint	108
<b>42</b>	<b>- Rear suspension</b>	<b>111</b>
<b>1</b>	<b>Rear axle</b>	<b>111</b>
1.1	Overview – rear axle	111
1.2	Removing and installing rear axle	112
<b>2</b>	<b>Axle beam</b>	<b>117</b>
2.1	Assembly overview – axle beam	117
2.2	Removing and installing axle beam	119
<b>3</b>	<b>Subframe</b>	<b>122</b>
3.1	Assembly overview - subframe	122
<b>4</b>	<b>Anti-roll bar</b>	<b>123</b>
4.1	Assembly overview - anti-roll bar	123
4.2	Removing and installing anti-roll bar	124
4.3	Removing and installing coupling rod	127
<b>5</b>	<b>Suspension link, track rod</b>	<b>129</b>
5.1	Removing and installing track rod	129
<b>6</b>	<b>Suspension strut, shock absorber, spring</b>	<b>131</b>
6.1	Assembly overview - suspension strut/shock absorber	131
6.2	Removing and installing shock absorbers	131
6.3	Removing and installing spring	133
<b>7</b>	<b>Wheel bearing assembly, trailing arm</b>	<b>136</b>
7.1	Assembly overview - wheel bearing	136
7.2	Assembly overview - trailing arm	137
7.3	Removing and installing wheel bearing unit	139
7.4	Removing and installing trailing arm with mounting bracket	143
<b>8</b>	<b>Drive shaft</b>	<b>147</b>
8.1	Assembly overview - drive shaft	147
8.2	Removing and installing drive shaft	149
8.3	Dismantling and assembling drive shaft	154
8.4	Loosening and tightening threaded connections of drive shaft	154
8.5	Checking outer constant velocity joint	156
8.6	Checking inner constant velocity joint	156
<b>43</b>	<b>- Self-levelling suspension</b>	<b>157</b>
<b>1</b>	<b>Vehicle level sender</b>	<b>157</b>
1.1	Assembly overview - front vehicle level senders	157
1.2	Assembly overview - rear vehicle level senders	157
1.3	Removing and installing front vehicle level senders G78/G289	158
1.4	Removing and installing rear vehicle level senders G76/G77	160
<b>44</b>	<b>- Wheels, tyres, vehicle geometry</b>	<b>161</b>
<b>1</b>	<b>Wheels, tyres</b>	<b>161</b>
1.1	Removing tyre from wheel	161
1.2	Fitting tyres	162
1.3	Wheel change	164
1.4	Balancing wheels	168



1.5	Specified torques for wheel bolts	171
1.6	Pressing tyre off wheel rim	171
1.7	Tyre sealant	172
1.8	Tyre sealant disposal	172
1.9	Alloy wheels with metal valves	173
1.10	Models with breakdown set	173
<b>2</b>	<b>Tyre Pressure Monitoring System</b>	<b>174</b>
2.1	System description – Tyre Pressure Monitoring System	174
<b>3</b>	<b>Wheel alignment</b>	<b>176</b>
3.1	Notes for wheel alignment	176
3.2	Conditions for testing	176
3.3	Test preparations	177
3.4	Specifications for wheel alignment	178
3.5	Wheel alignment procedure	180
3.6	Necessity of wheel alignment	181
3.7	Adjusting camber at front wheels	182
3.8	Adjusting camber on rear axle	183
3.9	Adjusting toe at rear axle	183
3.10	Adjusting front axle toe	183
3.11	Wheel runout compensation	184
3.12	Vehicle data sticker	185
3.13	Checking maximum wheel lock	185
<b>4</b>	<b>Vibration due to wheels/tyres - causes and rectification</b>	<b>187</b>
4.1	Causes of rough running	187
4.2	Conducting a road test before balancing wheels	187
4.3	Balancing wheel	187
4.4	Vibration control system	188
4.5	Checking radial and lateral runout of wheels and tyres	188
4.6	Checking radial and lateral run-out on wheel rim	189
4.7	Matching wheels and tyres	190
4.8	Determining flat spots on tyres	191
<b>48 - Steering</b>		<b>193</b>
<b>1</b>	<b>Steering wheel</b>	<b>193</b>
1.1	Assembly overview – steering wheel	193
1.2	Removing and installing steering wheel	193
<b>2</b>	<b>Steering column</b>	<b>195</b>
2.1	Assembly overview – steering column	195
2.2	Checking steering column for damage	196
2.3	Handling and transporting steering column	196
2.4	Removing and installing steering column	197
2.5	Removing and installing control unit for electronic steering column lock J764	202
<b>3</b>	<b>Steering rack</b>	<b>204</b>
3.1	Assembly overview – steering rack	204
3.2	Removing and installing steering rack	206
3.3	Removing and installing boot	213
3.4	Removing and installing track rod	215
3.5	Removing and installing track rod ball joint	219
3.6	Repairing steering rack	221
<b>4</b>	<b>Sensors</b>	<b>224</b>
4.1	Removing and installing steering angle sender G85	224