



Contents

27 - Starter, current supply, CCS	1
1 Battery	1
1.1 Fundamentals for batteries	1
1.2 Warning notices and safety regulations	1
1.3 Battery load test	3
1.4 Battery load test	5
2 Checking battery	6
2.1 Checking the various types of batteries	6
2.2 Visual check	7
2.3 Information about battery replacement and battery gas venting	8
2.4 Checking colour indicator in battery cover	9
2.5 Battery tester with printer VAS 6161	12
2.6 Battery tester DSS-7814 SET 08.78024-0005 , MAN TGE	17
2.7 Current draw test	19
2.8 No-load current measurement	21
3 Charging the battery	29
3.1 Totally discharged batteries	29
3.2 Battery charger VAS 5095 A	30
3.3 Battery charger VAS 5900	36
3.4 Battery charger VAS 5900 A	48
3.5 Battery charger VAS 5903	56
3.6 Battery charger VAS 5906	68
3.7 Battery charger VAS 5908	70
3.8 Midtronics INC 940 battery charger (USA/Canada only)	79
3.9 Battery charger Fronius Acctiva Professional 35A, MAN TGE	82
3.10 Solar charger module VAS 6102A	84
4 Alternator	86
4.1 Checking function of poly V-belt pulley with freewheel	86
5 Cruise control system (CCS)	88
5.1 General description - cruise control system (CCS)	88
5.2 Activating and deactivating cruise control system (CCS)	88
90 - Gauges, instruments	89
92 - Windscreen wash/wipe system	90
1 Washer fluid line hose couplings	90
1.1 Hose couplings - windscreen and rear window washer system	90
1.2 Hose couplings - windscreen and rear window washer system	91
1.3 Hose couplings - headlight washer system	92
2 Hose repair	93
2.1 General description - hose repair	93
2.2 Repairing smooth pipe	93
2.3 Repairing corrugated pipe	93
94 - Lights, bulbs, switches - exterior	96
1 Operation and safety notes for gas discharge lamps	96
96 - Lights, bulbs, switches - interior	99
1 Immobiliser	99
1.1 General description - immobiliser	99
1.2 Online system test	100
1.3 Immobiliser control unit J362	100



1.4	Engine control unit J623	100
1.5	Immobiliser reader coil	100
1.6	Replacement ignition key	101
1.7	Ignition key - variable code transponder	101
1.8	New lock set	101
1.9	New identity on renewing all components	102
1.10	Adapting ignition key	102
2	12 V socket	104
2.1	Removing and installing 12 V socket	104
2.2	Removing and installing socket illumination bulb L42	106
3	Cigarette lighter U1	107
3.1	General description - cigarette lighter U1	107
3.2	Assembly overview - cigarette lighter U1	107
3.3	Removing and installing cigarette lighter socket	108
3.4	Removing and installing cigarette lighter illumination bulb L28	111
97 - Wiring		112
1	Vehicle diagnosis, testing and information systems	112
1.1	General description - vehicle diagnosis, testing and information system	112
1.2	Connecting vehicle diagnostic tester	112
2	Wiring harness and connector repairs	114
2.1	General notes concerning repairs to vehicle electrical system	114
2.2	Wiring harness repair set	117
2.3	Tool descriptions	120
2.4	Repairs to electrical wiring harnesses	123
2.5	Repairs to fibre optic cables	145
2.6	Repair of aerial wires	151
2.7	Repairing connector housings and connectors	165
2.8	Releasing and dismantling connector housings	169
3	Cleaning contact surfaces	175
3.1	General description - contact surface cleaning set VAS 6410	175
3.2	Repairing ring terminals	175
3.3	Repairing threaded electrical connections	177
3.4	Cleaning battery terminal clamp and battery terminal	179
3.5	Preserving threaded electrical connections	180
4	Renewing Lambda probe	182
4.1	General notes - renewing Lambda probe	182
4.2	Types of protective tube on uniform Lambda probes	182
4.3	Renewing LSF Lambda probe (4-pin)	183
4.4	Renewing LSU lambda probe (6-pin)	184
5	ESD workplace VAS 6613	186
5.1	Use of ESD workplace VAS 6613	186