



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	2
1.3 Safety measures when working with pyrotechnic components	2
1.4 Safety instructions for airbag	3
1.5 Deactivating the airbag	3
1.6 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	3
1.7 Additional safety regulations for side airbag	4
1.8 Additional safety instructions for curtain airbag	4
1.9 Safety regulations for crash sensors (pressure sensors) for front side airbags	5
1.10 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	5
1.11 Checking airbag securing parts after an accident	7
1.12 Accident without airbag triggering	7
1.13 Checking seat belts	7
1.14 Check belt webbing	7
1.15 Checking inertia reel (locking mechanism)	9
1.16 Visually checking belt buckle	9
1.17 Check operation of belt buckle	9
1.18 Checking belt relays, and buckle tongues	10
1.19 Checking seat belt restraint function for holding additional child seats (not for driver's seat belt) - country-specific	10
1.20 Checking child seat anchors after an accident	10
2 Repair notes	11
2.1 Rules for cleanliness	11
2.2 General repair instructions	11
2.3 Contact corrosion	11
2.4 Bolts and nuts	12
2.5 Electrical components	12
2.6 Pipe/wire routing and attachment	12
68 - Interior equipment	14
1 Compartments/covers	14
1.1 Overview of fitting locations - storage compartments/covers	14
1.2 Assembly overview - driver side dash panel cover	15
1.3 Assembly overview - steering column trim	16
1.4 Assembly overview - glove compartment	17
1.5 Assembly overview - storage compartment in headliner	18
1.6 Removing and installing dash panel cover on driver side	19
1.7 Removing and installing dash panel insert trim	20
1.8 Removing and installing upper steering column trim	20
1.9 Removing and installing lower steering column trim	21
1.10 Removing and installing glove compartment opener	22
1.11 Removing and installing glove compartment	23
1.12 Removing and installing glove compartment cover	25
1.13 Removing and installing restrictor for glove compartment cover	25
1.14 Service position for glove compartment cover	26
1.15 Removing and installing headliner storage compartment	26
2 Equipment	27
2.1 Assembly overview - net partition	27
2.2 Assembly overview - sun visors	27



2.3	Removing and installing net partition	28
2.4	Removing and installing net partition mounting	28
2.5	Removing and installing bracket for net partition	28
2.6	Removing and installing sun visor	28
2.7	Removing and installing sun visor centre mount	28
2.8	Removing and installing roof grab handle	28
3	Centre console	31
3.1	Assembly overview – centre console	31
3.2	Removing and installing rear centre console trim	35
3.3	Removing and installing centre console cover	36
3.4	Removing and installing centre console front storage compartment	37
3.5	Removing and installing centre console trim in front footwell	38
3.6	Removing and installing centre console	39
3.7	Removing and installing centre console bracket	41
4	Front centre armrest	43
4.1	Assembly overview - front centre armrest	43
4.2	Removing and installing front centre armrest	43
5	On inside	45
5.1	Assembly overview - interior mirror	45
5.2	Removing and installing interior mirror	46
69	- Passenger protection	53
1	Seat belts	53
1.1	Overview of fitting locations - seat belts and anchorage points	53
1.2	Assembly overview - front three-point seat belt	55
1.3	Assembly overview - rear outer three-point seat belt	57
1.4	Assembly overview - rear centre three-point seat belt	58
1.5	Assembly overview - front belt buckle	59
1.6	Assembly overview - rear belt buckle	60
1.7	Removing and installing front three-point seat belt	60
1.8	Removing and installing rear three-point seat belt	64
1.9	Removing and installing rear belt guide	68
1.10	Removing and installing front belt guide	69
1.11	Removing and installing front belt end fitting	69
1.12	Removing and installing rear outer belt end fitting	70
1.13	Removing and installing belt height adjuster	70
1.14	Removing and installing front belt buckle	71
1.15	Removing and installing rear belt buckle	72
2	Airbag system	76
2.1	Overview of fitting locations - airbag system	76
3	Airbag control unit	77
3.1	Assembly overview - airbag control unit	77
3.2	Removing and installing airbag control unit J234	77
4	Driver's airbag	80
4.1	Assembly overview - driver side airbag	80
4.2	Removing and installing airbag unit with igniter	80
4.3	Renewing connector on airbag	83
5	Front passenger side airbag	84
5.1	Assembly overview - front passenger side airbag	84
5.2	Removing and installing front passenger side airbag unit with igniter	84
5.3	Removing and installing key-operated switch to deactivate front passenger side airbag E224	86
6	Side airbags	88
6.1	Assembly overview – front side airbag	88
6.2	Removing and installing front side airbag with igniter	88



7	Curtain airbags	91
7.1	Assembly overview – curtain airbag	91
7.2	Removing and installing curtain airbag with igniter	93
8	Seat occupied recognition	102
8.1	Overview of fitting locations - seat occupied recognition system	102
8.2	Removing and installing seat occupied recognition	104
8.3	Removing and installing battery of control unit for wireless connection of seat occupied sensors J1247	107
70	- Trim, insulation	110
1	Front door trims	110
1.1	Assembly overview - front door trim	110
1.2	Removing and installing front door trim	111
2	Rear door trims	115
2.1	Assembly overview - rear door trim	115
2.2	Removing and installing rear door trim	116
2.3	Removing and installing window frame trim	117
2.4	Removing and installing interior door handle trim	118
3	Dash panel	120
3.1	Assembly overview - dash panel	120
3.2	Removing and installing dash panel end cover	120
3.3	Removing and installing dash panel insert trim	121
3.4	Removing and installing outer dash panel vents	122
3.5	Removing and installing centre vent	124
3.6	Removing and installing dash panel	124
4	Interior trims	125
4.1	Removing and installing rear sill panel moulding bracket	125
4.2	Removing and installing sill panel moulding	127
4.3	Removing and installing A-pillar trim	131
4.4	Removing and installing A-pillar gap cover	138
4.5	Removing and installing B-pillar trim	138
4.6	Removing and installing C-pillar trim	143
4.7	Removing and installing D-pillar trim	146
4.8	Removing and installing side trim	149
4.9	Removing and installing loudspeaker trim	153
4.10	Removing and installing belt end fitting cap	153
4.11	Removing and installing trim of interior socket, 230 V, 110 V U11	154
5	Luggage compartment trims	156
5.1	Assembly overview - lower rear lid trim	156
5.2	Removing and installing lower rear lid trim	157
5.3	Removing and installing wiper motor cover	160
5.4	Removing and installing pull strap	161
72	- Seat frames	162
1	Overview of seat variants	162
1.1	Overview of fitting locations - seat variants	162
2	Front seats	163
2.1	Overview of fitting locations - electrical and electronic components	163
2.2	Assembly overview - front seat	164
2.3	Assembly overview – front backrest	166
2.4	Assembly overview - head restraint	172
2.5	Assembly overview – seat pan	173
2.6	Assembly overview - seat height adjustment	175
2.7	Assembly overview – fire extinguisher	176
2.8	Assembly overview - folding tray table	177



2.9	Removing and installing front seat	178
2.10	Connecting and disconnecting airbag adapter	180
2.11	Removing and installing handle for seat height adjustment	182
2.12	Removing and installing seat height adjustment unit	182
2.13	Removing and installing lumbar support adjuster	183
2.14	Removing and installing backrest adjuster	185
2.15	Removing and installing front backrest	187
2.16	Removing and installing backrest cover panel	189
2.17	Removing and installing head restraint	189
2.18	Removing and installing head restraint guide	190
2.19	Dismantling and assembling seat pan	191
2.20	Removing and installing lumbar support	191
2.21	Mounting front seat on seat repair stand	192
2.22	Removing and installing fire extinguisher holder on seat frame	194
2.23	Removing and installing fire extinguisher holder	194
2.24	Removing and installing drawer mounting	195
2.25	Removing and installing seat trim	197
2.26	Removing and installing folding table	199
3	Rear seats	201
3.1	Assembly overview – bench seat/individual seats	201
3.2	Assembly overview – locking mechanism	201
3.3	Assembly overview – head restraint and head restraint guide	201
3.4	Assembly overview - rear seat backrest	203
3.5	Assembly overview - centre armrest	203
3.6	Removing and installing bench seat/individual seats	203
3.7	Removing and installing centre storage compartment	203
3.8	Removing and installing head restraint	203
3.9	Removing and installing head restraint guide	203
3.10	Removing and installing rear seat backrest	205
3.11	Removing and installing trim for locking mechanism	205
3.12	Removing and installing locking mechanism for rear seat backrest	205
3.13	Removing and installing centre armrest	205
3.14	Removing and installing back panel trim	205
3.15	Removing and installing seat pan	205
74	Seat - padding, covers	206
1	Front seat covers and padding	206
1.1	Assembly overview - cover and padding for seat pan	206
1.2	Assembly overview - cover and padding for backrest	207
1.3	Assembly overview - seat heating element	208
1.4	Assembly overview - backrest heater element	209
1.5	Removing and installing cover and padding for seat pan	210
1.6	Removing and installing backrest cover and backrest padding	211
1.7	Separating cover and padding on seat pan	213
1.8	Removing and installing seat heating element Z6/Z8	214
1.9	Removing and installing backrest heating element Z7/Z9	215
2	Rear seat covers and padding	217
2.1	Assembly overview - cover and padding	217
2.2	Removing and installing covers and padding	217
2.3	Separating cover and padding	218