



## Contents

|  |           |
|--|-----------|
| <b>00 - Technical data</b>   | <b>1</b>  |
| <b>1 Safety information</b>  | <b>1</b>  |
| 1.1 Safety measures when working on vehicles with a start/stop system                  | 1         |
| 1.2 Safety precautions when using testers and measuring instruments during a road test | 1         |
| 1.3 Safety precautions when working on the cooling system                              | 1         |
| <b>2 Repair instructions</b>   | <b>2</b>  |
| 2.1 General repair instructions  | 2         |
| 2.2 Contact corrosion  | 2         |
| 2.3 Pipe/wire routing and attachment   | 2         |
| 2.4 Bolts and nuts   | 3         |
| <b>50 - Body - front</b>   | <b>4</b>  |
| <b>1 Lock carrier</b>  | <b>4</b>  |
| 1.1 Assembly overview – lock carrier   | 4         |
| 1.2 Removing and installing lock carrier   | 6         |
| 1.3 Moving to and back from service position   | 8         |
| 1.4 Removing and installing air duct   | 12        |
| 1.5 Removing and installing lock carrier struts  | 13        |
| <b>2 Wings</b>   | <b>16</b> |
| 2.1 Assembly overview – wing   | 16        |
| 2.2 Removing and installing wing   | 17        |
| 2.3 Removing and installing wing bracket   | 20        |
| 2.4 Removing and installing wing bracket   | 22        |
| <b>3 Plenum chamber bulkhead</b>   | <b>24</b> |
| <b>55 - Bonnet, rear lid</b>   | <b>25</b> |
| <b>1 Bonnet</b>  | <b>25</b> |
| 1.1 Assembly overview – bonnet   | 25        |
| 1.2 Assembly overview – Bowden cable   | 27        |
| 1.3 Removing and installing bonnet   | 27        |
| 1.4 Adjusting bonnet   | 28        |
| 1.5 Removing and installing rear lid lock  | 30        |
| 1.6 Removing and installing bonnet release lever                                       | 33        |
| 1.7 Removing and installing striker pin  | 35        |
| 1.8 Removing and installing hinges   | 35        |
| 1.9 Removing and installing insulation   | 36        |
| 1.10 Removing and installing bonnet seal   | 37        |
| 1.11 Removing and installing Bowden cable  | 38        |
| 1.12 Removing and installing bonnet stay   | 40        |
| <b>2 Rear lid</b>  | <b>42</b> |
| 2.1 Assembly overview – rear lid   | 42        |
| 2.2 Removing and installing rear lid   | 44        |
| 2.3 Adjusting rear lid   | 46        |
| 2.4 Removing and installing rear lid lock  | 49        |
| 2.5 Removing and installing operating mechanism  | 49        |
| 2.6 Removing and installing hinges   | 50        |
| 2.7 Removing and installing striker pin  | 51        |
| 2.8 Removing and installing rear lid seal  | 52        |
| 2.9 Removing and installing gas strut  | 53        |
| 2.10 Preparing gas strut for disposal  | 54        |
| <b>3 Tank flap unit</b>  | <b>55</b> |
| 3.1 Assembly overview - tank flap unit   | 55        |



|           |  |            |
|-----------|--|------------|
| 3.2       | Removing and installing tank flap unit                               | 55         |
| 3.3       | Removing and installing fuel tank flap                               | 57         |
| <b>57</b> | <b>- Front doors, door components, central locking</b>               | <b>58</b>  |
| <b>1</b>  | <b>Door</b>  | <b>58</b>  |
| 1.1       | Assembly overview – door   | 58         |
| 1.2       | Assembly overview - door seals                                       | 59         |
| 1.3       | Removing and installing inner door seal                              | 60         |
| 1.4       | Removing and installing outer door seal                              | 61         |
| 1.5       | Removing and installing door   | 63         |
| 1.6       | Adjusting door   | 64         |
| 1.7       | Adjusting striker pin  | 66         |
| 1.8       | Removing and installing door hinge                                   | 66         |
| 1.9       | Removing and installing door arrester                                | 68         |
| <b>2</b>  | <b>Door components</b>   | <b>70</b>  |
| 2.1       | Assembly overview – door components                                  | 70         |
| 2.2       | Assembly overview – window regulator                                 | 71         |
| 2.3       | Assembly overview – door handle and door lock                        | 71         |
| 2.4       | Assembly overview - window channels and window slot (aperture) seals | 72         |
| 2.5       | Removing and installing window regulator motor                       | 73         |
| 2.6       | Removing and installing window regulator                             | 74         |
| 2.7       | Removing and installing inner door cover                             | 76         |
| 2.8       | Removing and installing striker pin                                  | 77         |
| 2.9       | Removing and installing window channel                               | 78         |
| 2.10      | Removing and installing window slot inner seal                       | 80         |
| <b>3</b>  | <b>Central locking</b>   | <b>81</b>  |
| <b>58</b> | <b>- Rear doors, door components</b>                                 | <b>82</b>  |
| <b>1</b>  | <b>Sliding door</b>  | <b>82</b>  |
| 1.1       | Assembly overview – sliding door                                     | 82         |
| 1.2       | Assembly overview - door seals                                       | 85         |
| 1.3       | Removing and installing sliding door                                 | 85         |
| 1.4       | Adjusting sliding door   | 88         |
| 1.5       | Adjusting striker pin  | 94         |
| 1.6       | Removing and installing add-on parts                                 | 95         |
| <b>2</b>  | <b>Wing door</b>   | <b>104</b> |
| 2.1       | Assembly overview - door seals                                       | 104        |
| 2.2       | Adjusting wing door  | 104        |
| 2.3       | Removing and installing hinges                                       | 106        |
| 2.4       | Removing and installing add-on parts                                 | 108        |
| <b>63</b> | <b>- Bumpers</b>   | <b>111</b> |
| <b>1</b>  | <b>Bumper, front</b>   | <b>111</b> |
| 1.1       | Assembly overview – bumper cover                                     | 111        |
| 1.2       | Assembly overview – bumper carrier                                   | 112        |
| 1.3       | Assembly overview - add-on parts                                     | 112        |
| 1.4       | Removing and installing bumper cover                                 | 113        |
| 1.5       | Removing and installing bumper carrier                               | 116        |
| 1.6       | Removing and installing add-on parts                                 | 119        |
| 1.7       | Removing and installing foam element                                 | 119        |
| 1.8       | Removing and installing guide bracket                                | 119        |
| 1.9       | Installing holder for parking aid sender                             | 120        |
| 1.10      | Installing brackets for park assist steering senders                 | 122        |
| <b>2</b>  | <b>Bumper, rear</b>  | <b>124</b> |
| 2.1       | Assembly overview – bumper cover                                     | 124        |



|           |  |            |
|-----------|--|------------|
| 2.2       | Assembly overview – bumper carrier                   | 125        |
| 2.3       | Removing and installing bumper cover                 | 128        |
| 2.4       | Removing and installing bumper carrier               | 131        |
| 2.5       | Removing and installing guide bracket                | 133        |
| 2.6       | Removing and installing foam element                 | 133        |
| 2.7       | Removing and installing securing strip               | 134        |
| 2.8       | Removing and installing add-on parts                 | 134        |
| 2.9       | Installing holder for parking aid sender             | 134        |
| 2.10      | Installing brackets for park assist steering senders | 136        |
| <b>64</b> | <b>- Glazing</b>                                     | <b>139</b> |
| <b>1</b>  | <b>Repair instructions</b>                           | <b>139</b> |
| 1.1       | Minimum drying times for bonded windows              | 139        |
| 1.2       | Window repair  | 139        |
| 1.3       | Installation instructions for bonded windows         | 140        |
| 1.4       | Preparing old undamaged windows for installing       | 143        |
| 1.5       | Preparing new windows for installing                 | 144        |
| 1.6       | Preparing body flange for installing                 | 145        |
| 1.7       | Cleaning off excess adhesive                         | 147        |
| <b>2</b>  | <b>Windscreen</b>                                    | <b>148</b> |
| 2.1       | Assembly overview – windscreen                       | 148        |
| 2.2       | Removing and installing windscreen                   | 148        |
| <b>3</b>  | <b>Rear windscreen</b>                               | <b>154</b> |
| 3.1       | Assembly overview – rear window                      | 154        |
| 3.2       | Removing and installing rear window                  | 154        |
| <b>4</b>  | <b>Side windows</b>                                  | <b>159</b> |
| 4.1       | Assembly overview - front side window                | 159        |
| 4.2       | Assembly overview - rear side windows                | 159        |
| 4.3       | Removing and installing front side window            | 160        |
| 4.4       | Removing and installing rear side window             | 163        |
| <b>5</b>  | <b>Door windows</b>                                  | <b>167</b> |
| 5.1       | Assembly overview - front door window                | 167        |
| 5.2       | Assembly overview - rear door window                 | 167        |
| 5.3       | Removing and installing front door window            | 168        |
| 5.4       | Removing and installing rear door window             | 170        |
| <b>6</b>  | <b>Glass panel</b>                                   | <b>173</b> |
| 6.1       | Removing and installing glass panel                  | 173        |
| <b>66</b> | <b>- Exterior equipment</b>                          | <b>178</b> |
| <b>1</b>  | <b>Radiator grille and front trim</b>                | <b>178</b> |
| 1.1       | Assembly overview – radiator grille                  | 178        |
| 1.2       | Removing and installing radiator grille              | 178        |
| <b>2</b>  | <b>Mouldings, trims, extensions</b>                  | <b>180</b> |
| <b>3</b>  | <b>Noise insulation</b>                              | <b>181</b> |
| 3.1       | Assembly overview - noise insulation                 | 181        |
| 3.2       | Assembly overview – skid plate                       | 182        |
| 3.3       | Removing and installing noise insulation             | 183        |
| 3.4       | Removing and installing skid plate                   | 185        |
| 3.5       | Removing and installing skid plate bracket           | 186        |
| <b>4</b>  | <b>Underbody cladding</b>                            | <b>188</b> |
| 4.1       | Overview of fitting locations - underbody cladding   | 188        |
| 4.2       | Assembly overview – underbody cladding               | 192        |
| 4.3       | Assembly overview - bracing on underbody             | 198        |
| 4.4       | Removing and installing underbody cladding           | 199        |



|           |   |            |
|-----------|---|------------|
| 4.5       | Removing and installing tunnel cross-piece .....        | 213        |
| <b>5</b>  | <b>Roof moulding and roof railing .....</b>             | <b>216</b> |
| 5.1       | Assembly overview - roof railing .....                  | 216        |
| 5.2       | Removing and installing roof railing .....              | 217        |
| <b>6</b>  | <b>Exterior mirror .....</b>                            | <b>220</b> |
| 6.1       | Assembly overview – exterior mirror .....               | 220        |
| 6.2       | Removing and installing exterior mirror .....           | 220        |
| 6.3       | Removing and installing mirror glass .....              | 221        |
| 6.4       | Removing and installing mirror adjustment unit .....    | 223        |
| 6.5       | Removing and installing mirror cover .....              | 224        |
| 6.6       | Removing and installing mirror frame .....              | 224        |
| <b>7</b>  | <b>Wheel housing liner .....</b>                        | <b>226</b> |
| 7.1       | Assembly overview – front wheel housing liner .....     | 226        |
| 7.2       | Assembly overview – rear wheel housing liner .....      | 226        |
| 7.3       | Removing and installing front wheel housing liner ..... | 227        |
| 7.4       | Removing and installing rear wheel housing liner .....  | 228        |
| <b>8</b>  | <b>Lettering and emblems .....</b>                      | <b>231</b> |
| 8.1       | Assembly overview – lettering and badges .....          | 231        |
| 8.2       | Dimensions – lettering and badges at rear .....         | 234        |
| 8.3       | Removing and installing badges at front .....           | 237        |
| 8.4       | Renewing lettering and badges at rear .....             | 237        |
| <b>9</b>  | <b>Towing bracket .....</b>                             | <b>239</b> |
| <b>10</b> | <b>Spare wheel bracket .....</b>                        | <b>240</b> |
| 10.1      | Assembly overview - spare wheel bracket .....           | 240        |
| 10.2      | Removing and installing spare wheel bracket .....       | 240        |
| 10.3      | Removing and installing spare wheel .....               | 242        |
| 10.4      | Removing and installing add-on parts .....              | 242        |
| <b>11</b> | <b>Heat shields .....</b>                               | <b>243</b> |
| 11.1      | Overview of fitting locations - heat shields .....      | 243        |
| 11.2      | Removing and installing front heat shield .....         | 244        |
| 11.3      | Removing and installing centre heat shield .....        | 245        |
| 11.4      | Removing and installing rear heat shield .....          | 246        |